




HIDE IT WITH STYLE

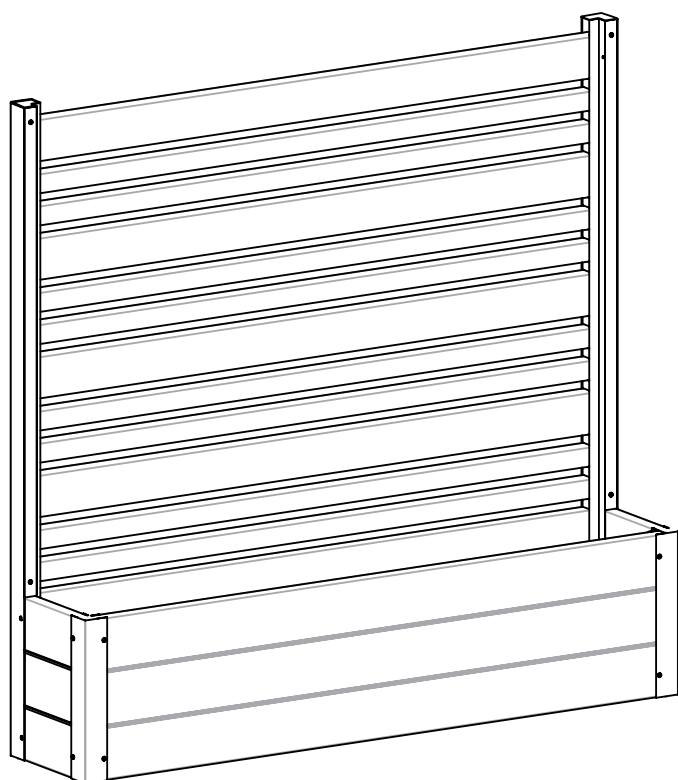

Florence Screen Kit W/ Planter Box

45 min
Assembly
Approximate time



Assembly Video
Scan the QR Code below



ASSEMBLY INSTRUCTIONS

EC18006 (CEDAR COLOR)

EC18007 (ASH COLOR)

www.encloscreens.com

VER. 080123

GENERAL INFORMATION



IMPORTANT

- Check the inside of the larger pieces in your box for other materials packed inside.
- When assembling components, place on a non-abrasive surface (i.e. shipping box) to avoid scratching.
- We recommend an area approximately 5'x 8' for unobstructed assembling.
- You should not need to use excessive force when assembling components.

MISSING OR DAMAGED PARTS?

(Only available in the continental US and Canada)



VISIT OUR WEBSITE FIRST, SO WE CAN HELP YOU RIGHT AWAY!

Although great care has been taken to ensure proper packaging and handling of this product, occasionally problems occur. If you discover any missing, damaged, or defective parts, please visit our website to order replacement parts. If you experience any further trouble with your product, please contact our customer service department.

 parts.nychbrands.com (Continental US and Canada only)

 support@encloscreens.com

 **704-892-5222 / 877-234-6196**

Customer service agents are available to take calls weekdays from 9am-5pm EST. If you call outside of business hours, please leave a voicemail.

To help you quickly and accurately, please have reference item number **EC18006/EC18007** and the specific part name which can be found on page 4. It is helpful if you can provide the batch lot which is a stamped number on the end of the box.


NEED ASSEMBLY HELP?

● If you are having problems with the assembly or installation of this product, we are happy to assist you with the process, **so please give us a call at 704-892-5222 / 877-234-6169**

NEED TO RETURN?

● If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**

DETAILED **PRODUCT DIMENSIONS & SPECIFICATIONS**

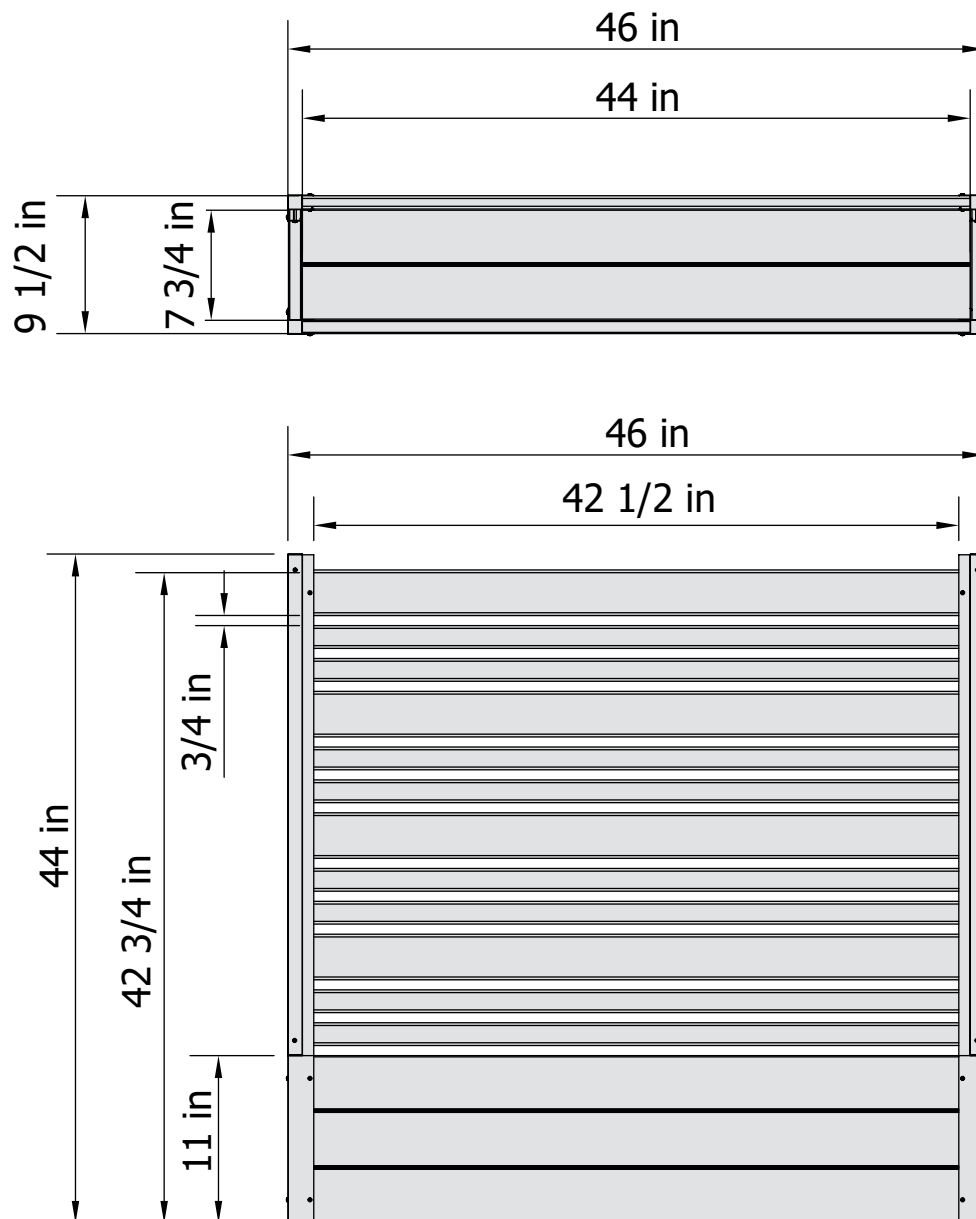


Note: Planter Box Depth is 8 5/8" when floor is installed
Planter Box Volume: qts (1.6 cubic ft)


RECOMMENDED TOOLS

PRODUCT ASSEMBLY

RECOMMENDED TOOLS

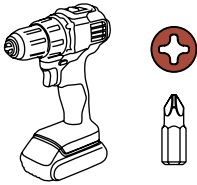

► Power Drill with Phillips Bit

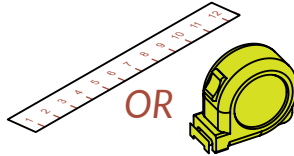


► Ruler or Measuring Tape


SURFACE MOUNTED INSTALLATION (OPTIONAL)

- ! Recommended if installing into high wind environment
- ! Surface mounting screws not included

DIRT

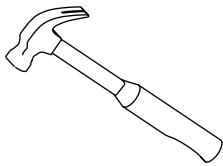


► Hammer




► 3/4" Rebar (2)

DECK

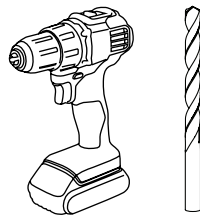


► Power Drill
► Wood Drill Bit




► 1/4" Lag Screws
3" Length (4)
► Matching Driver Bit

PATIO

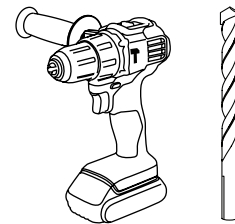

► Hammer Drill
► Concrete Drill Bit











► 1/4" Concrete Screws
2 1/4" Length (4)
► Matching Driver Bit

LAY OUT MATERIALS

LARGE PARTS


<p>A</p> <p>Long Board (2) 7/8" x 11" x 44"</p>	<p>B</p> <p>Short Board (2) 7/8" x 11" x 7 1/4"</p>	<p>C</p> <p>Floor Board (1) 7/8" x 7 1/4" x 44"</p>
<p>D</p> <p>Long Floor Support (2) 7/8" x 1 1/2" x 29 1/2"</p>	<p>E</p> <p>Thin Horizontal Slat (8) 7/8" x 1 1/2" x 44"</p>	<p>F</p> <p>Wide Horizontal Slat (4) 7/8" x 3" x 44"</p>
<p>G</p> <p>Right Post (1) 1 3/4" x 1 3/4" x 44"</p>		<p>H</p> <p>Left Post (1) 1 3/4" x 1 3/4" x 44"</p>

SMALL PARTS



<div>I</div> <div></div> <div>Spacer (24)</div>	<div>J</div> <div></div> <div>Short Floor Support (3) 7/8" x 1 1/2" x 7 1/4"</div>	<div>K</div> <div></div> <div>Short Post (2) 1 3/4" x 1 3/4" x 11"</div>
<div>L</div> <div></div> <div>1 1/2" Self-Drilling Stainless Steel Screw (8)</div>	<div>M</div> <div></div> <div>3/4" Self-Drilling Stainless Steel Screw (22)</div>	<div>N</div> <div></div> <div>Corner Post Cap (4)</div>
<div>O</div> <div></div> <div>Galvanized Steel L Bracket (2)</div>	<div>P</div> <div></div> <div>1/8" Drill Bit (1)</div>	

ASSEMBLING THE PLANTER SCREEN


1

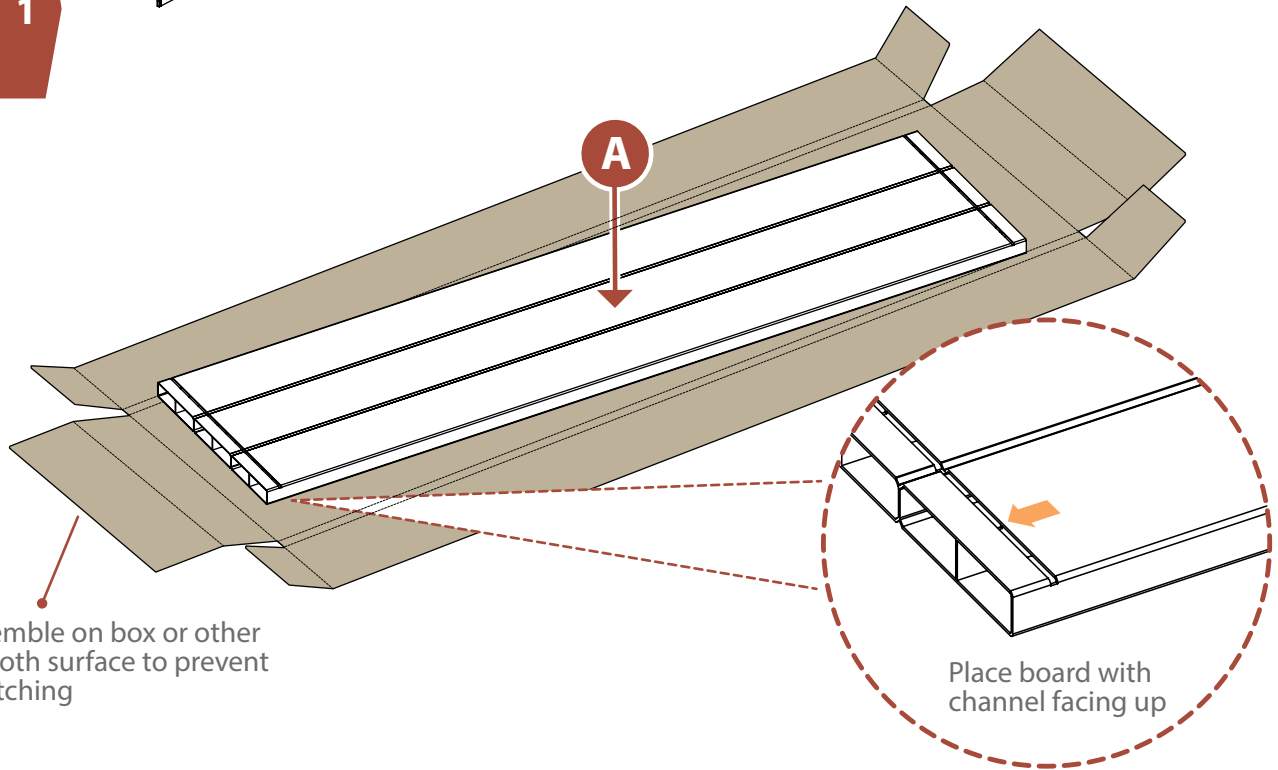


2

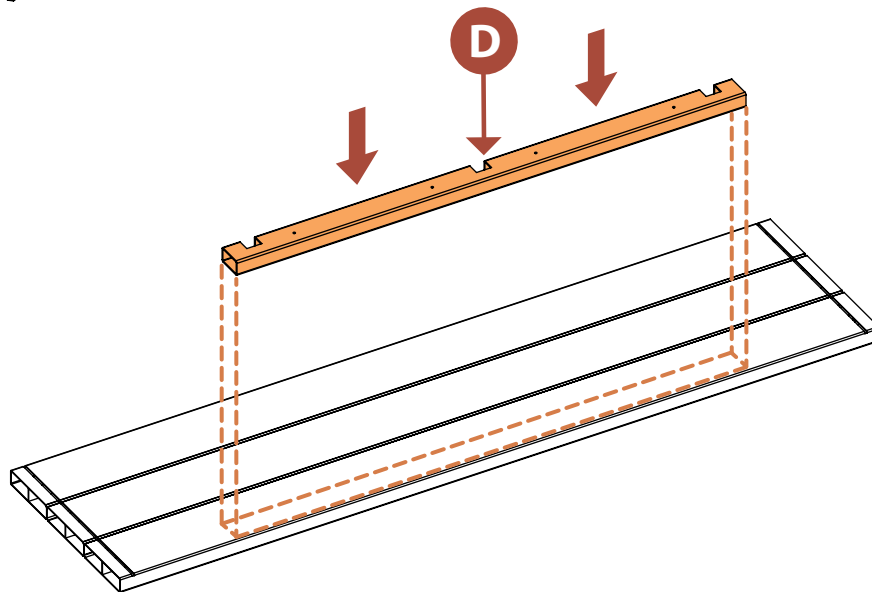

3

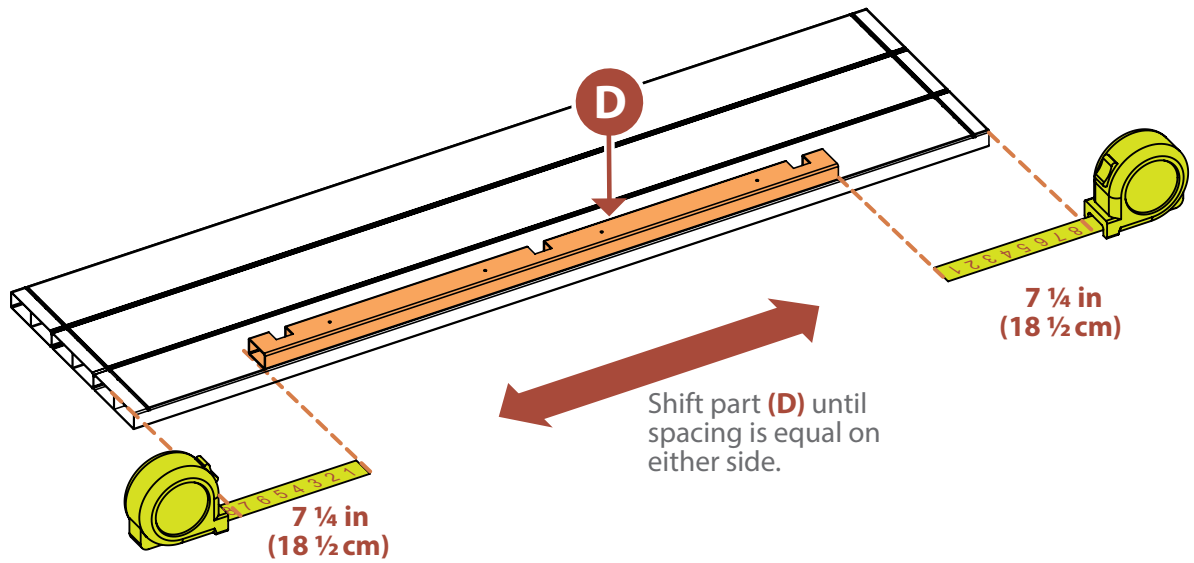


4

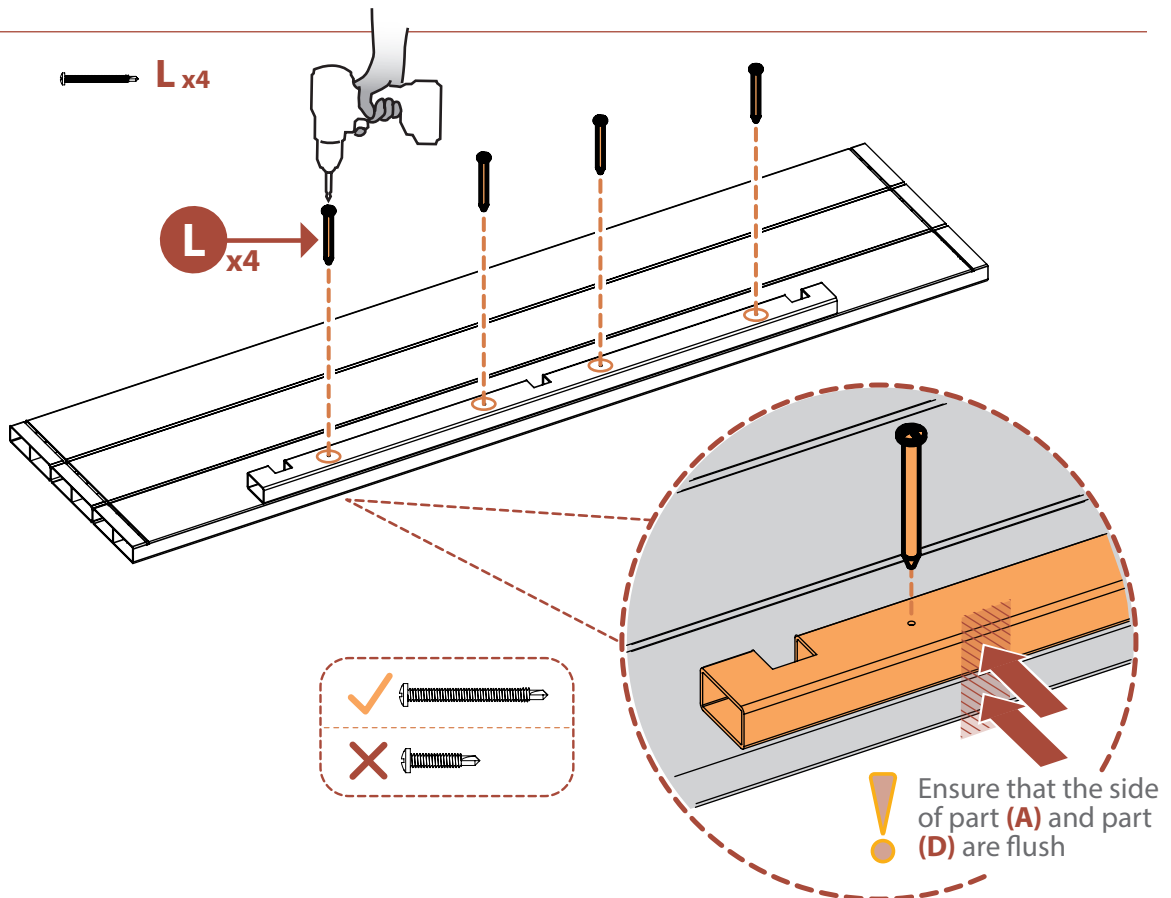

5




A x1



D x1





L x4

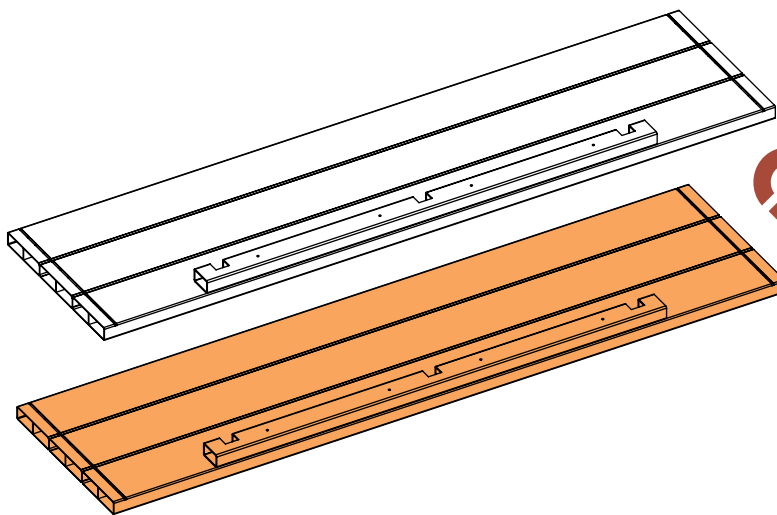


Repeat steps 1-4 to create one additional panel

6

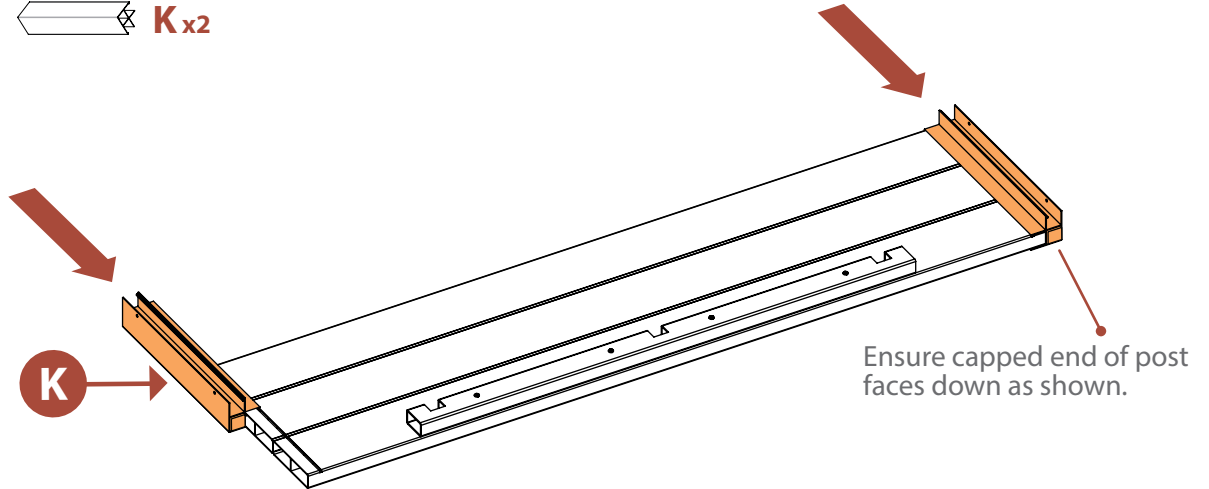 **K_{x2}**


Note: Ensure tabs on posts and notches on boards align.

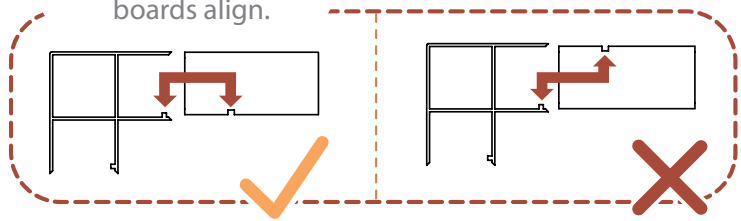


7

 **M_{x4}**



Flip Panel

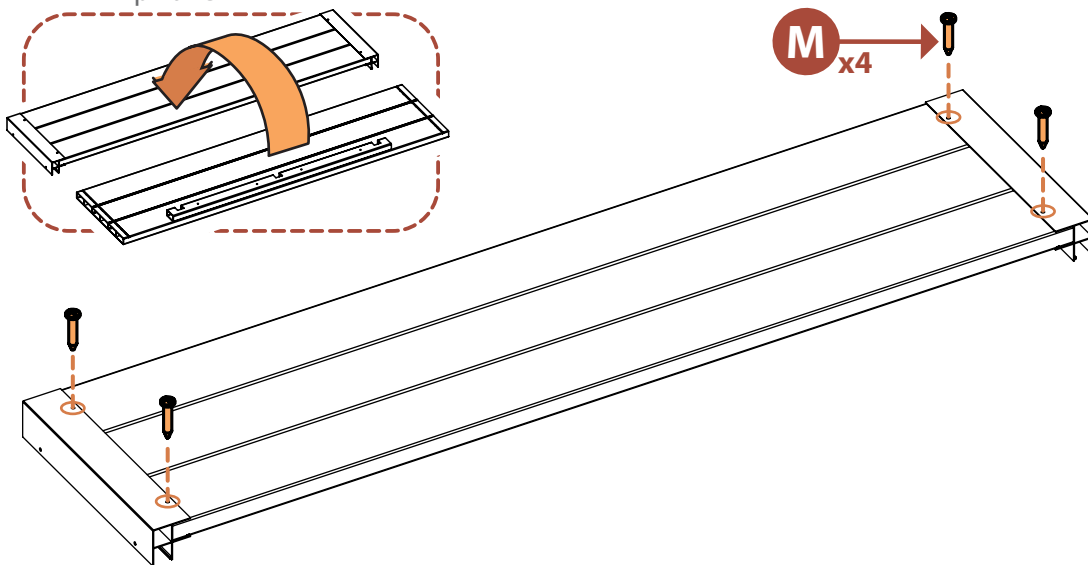


8

**B** x2

Lift Panel

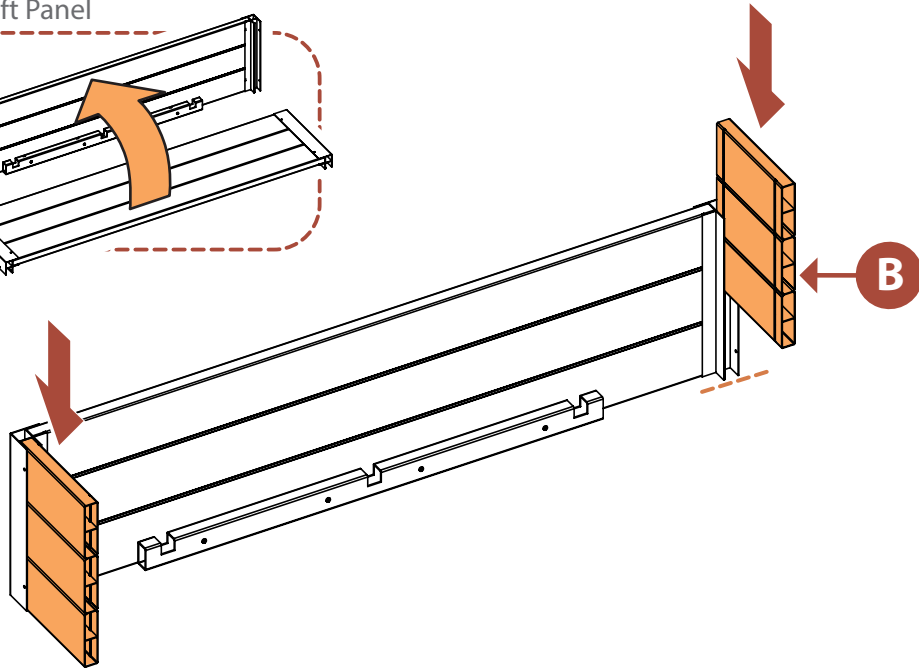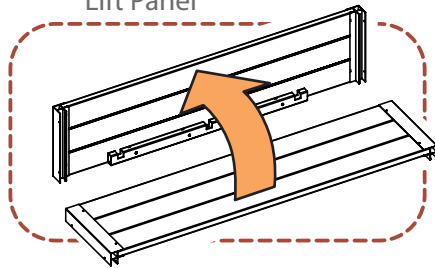


9

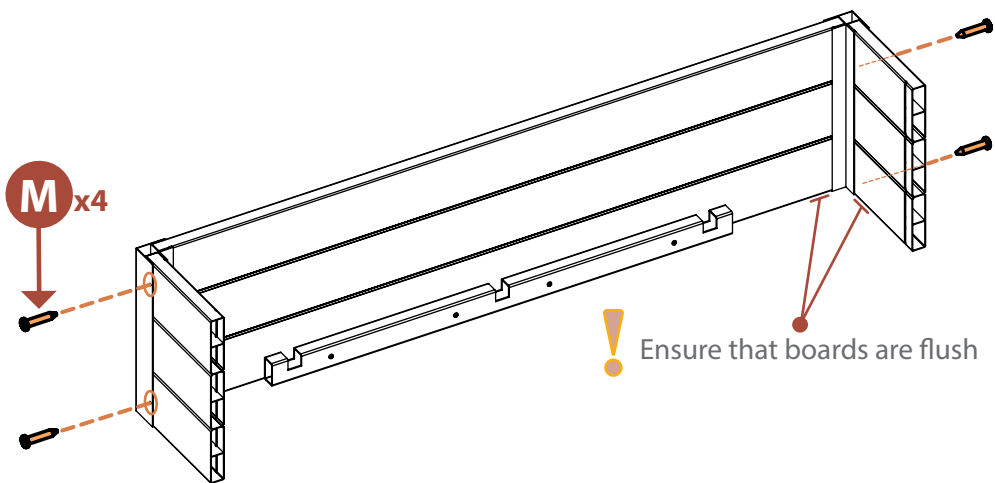
**M** x4

Ensure that boards are flush


10

 **G** x1

 **H** x1




Open channels should
be facing each other

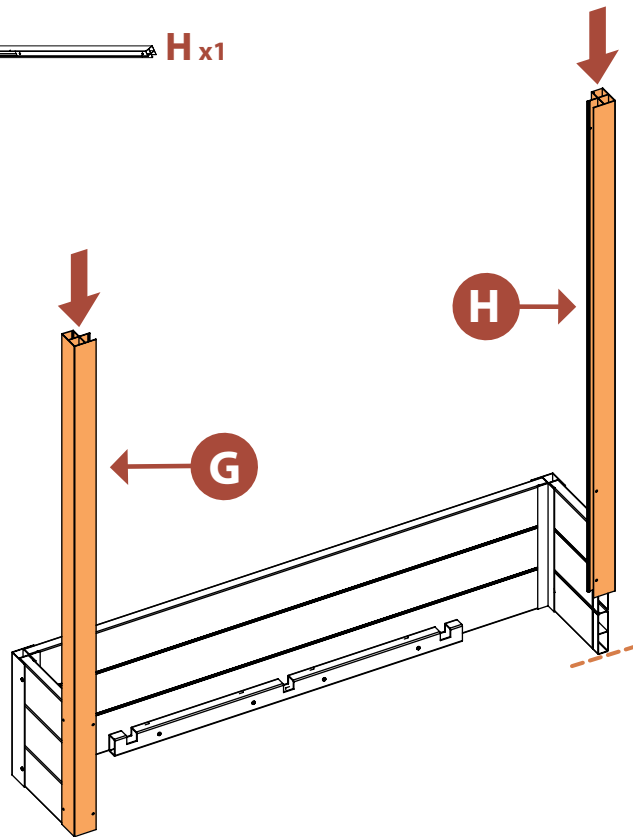


11


 **M** x4

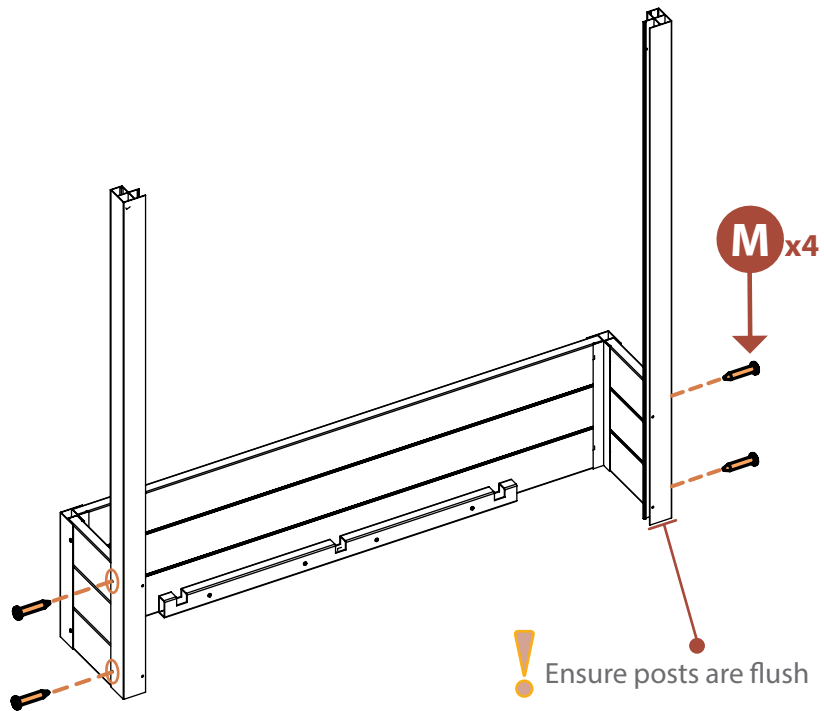



12

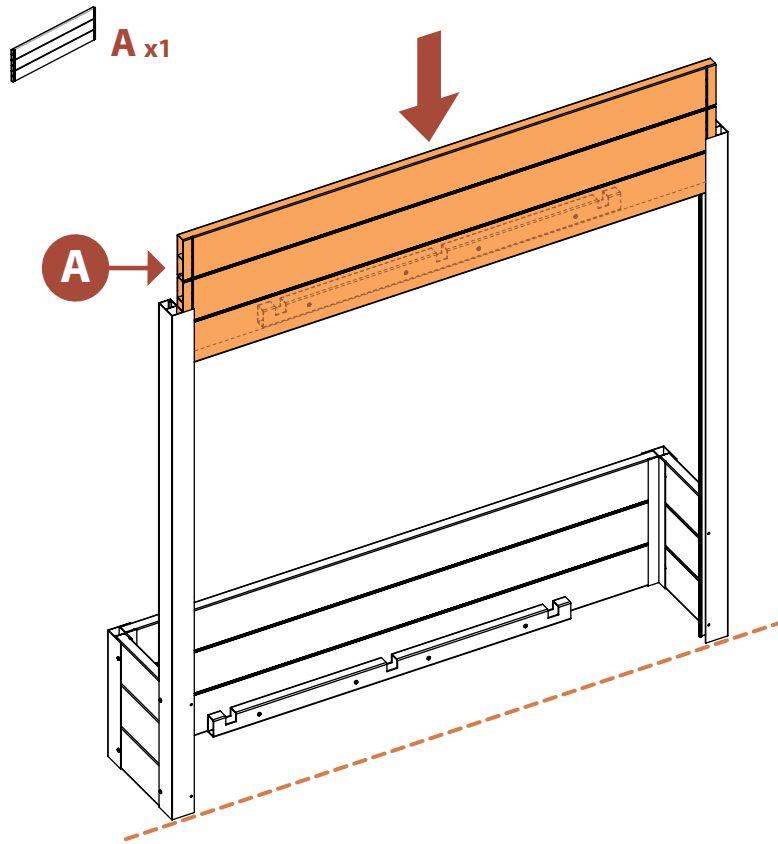



13

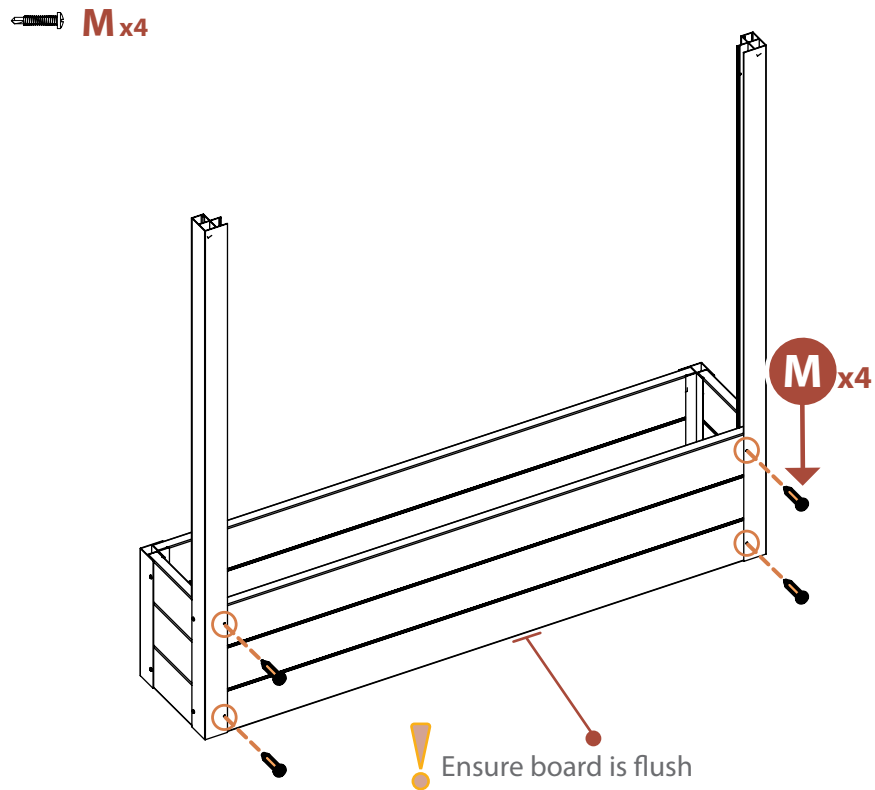

14

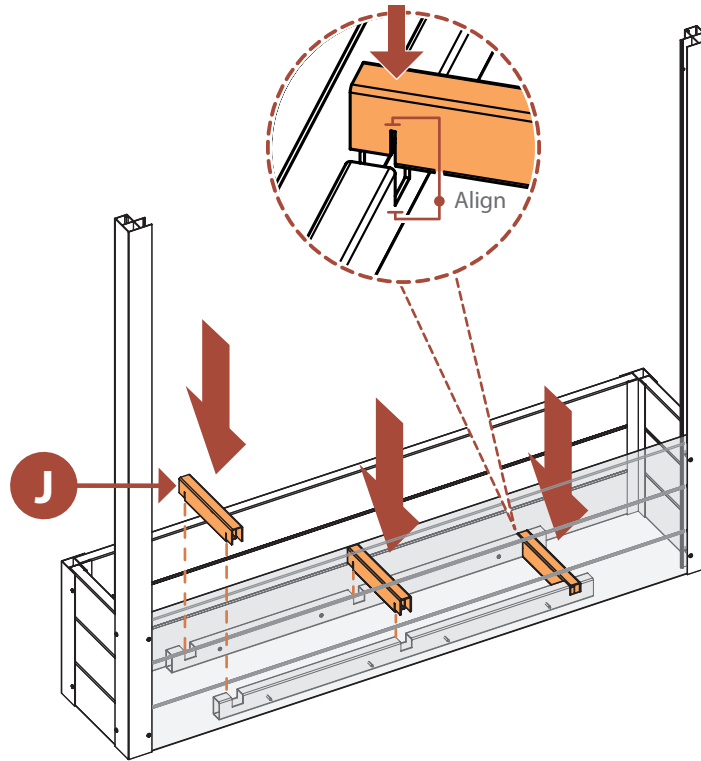**J** x4


15

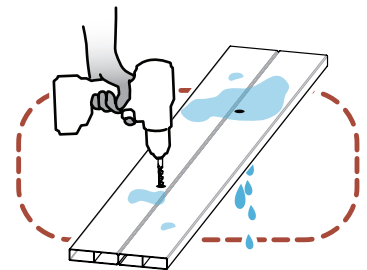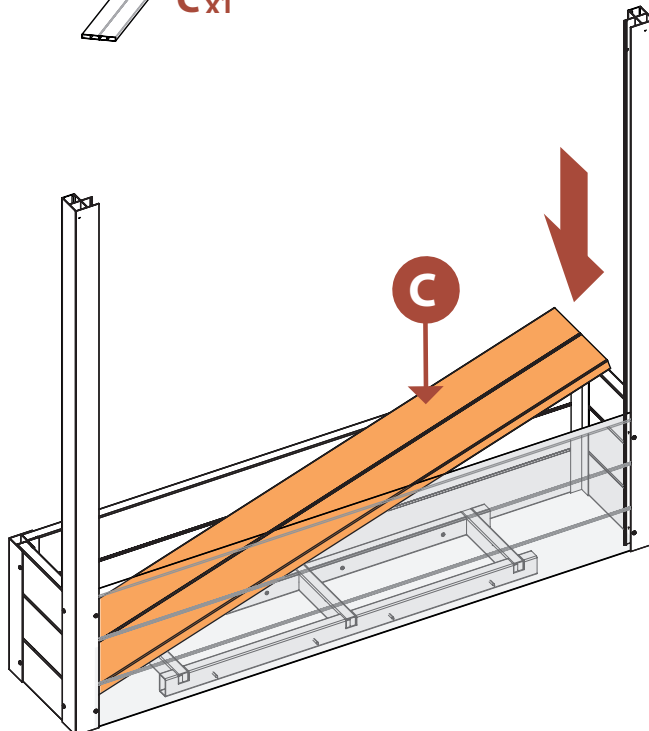**C** x1

Note: For best plant growth, it is recommended to drill (2) 3/4" diameter drainage holes in part (C) roughly 12" apart.


16


 I x2

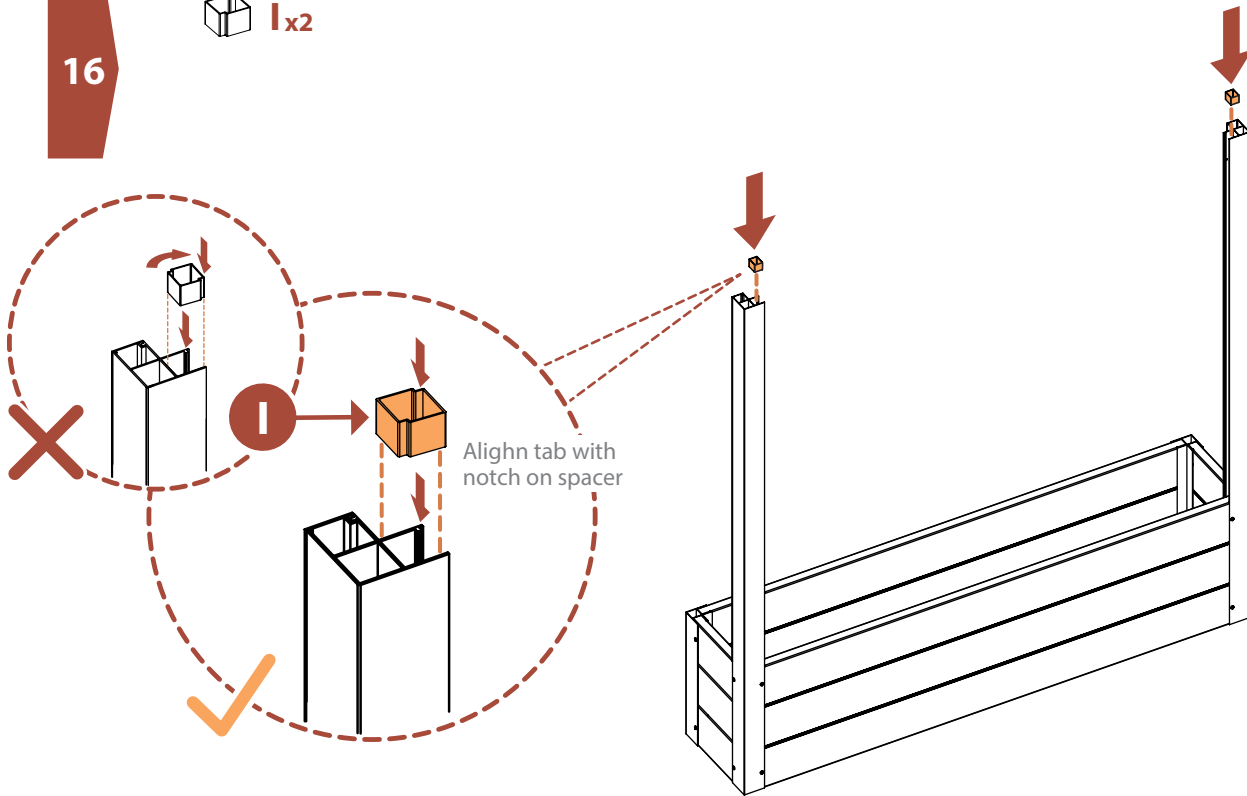


17

 E x1

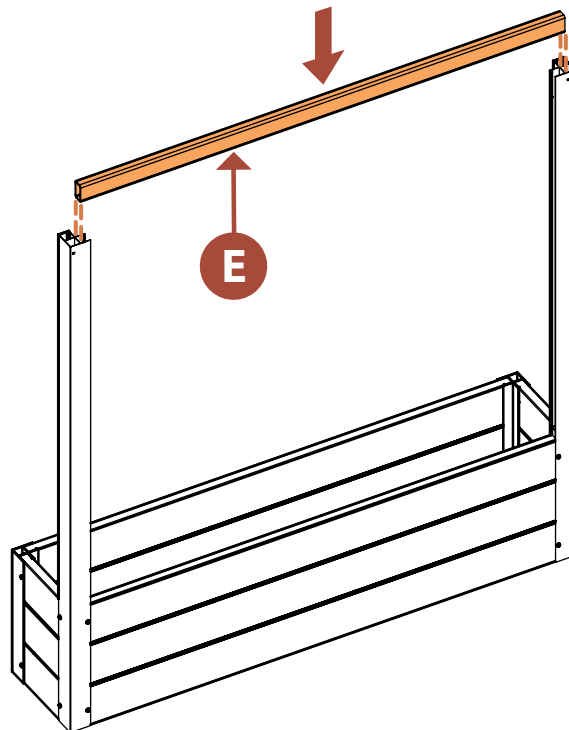





Repeat steps 16 and 17, following the pattern shown below

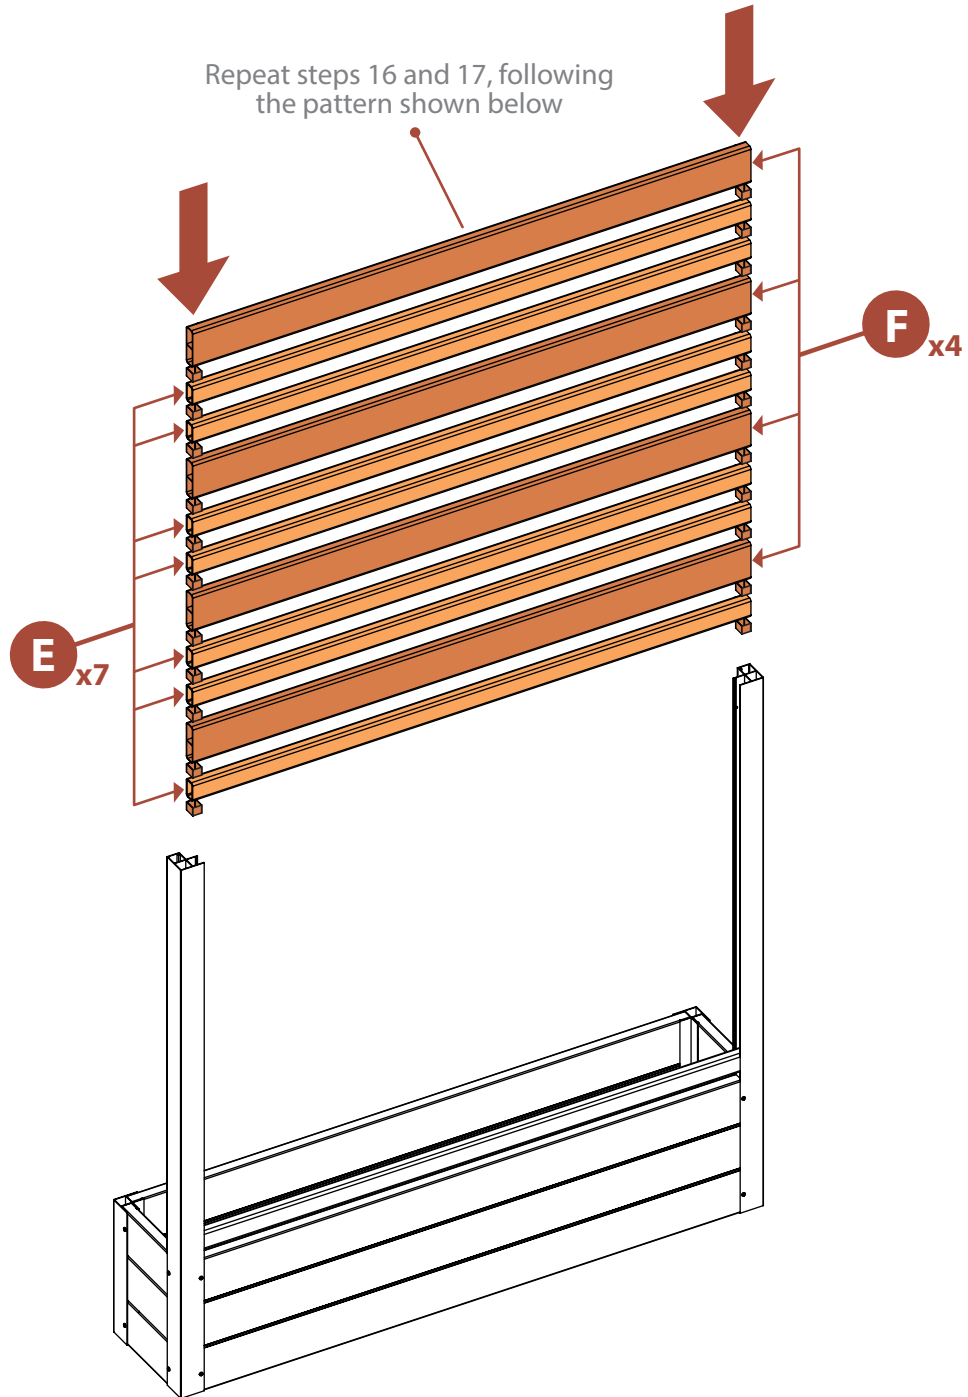



19


 **M** x2

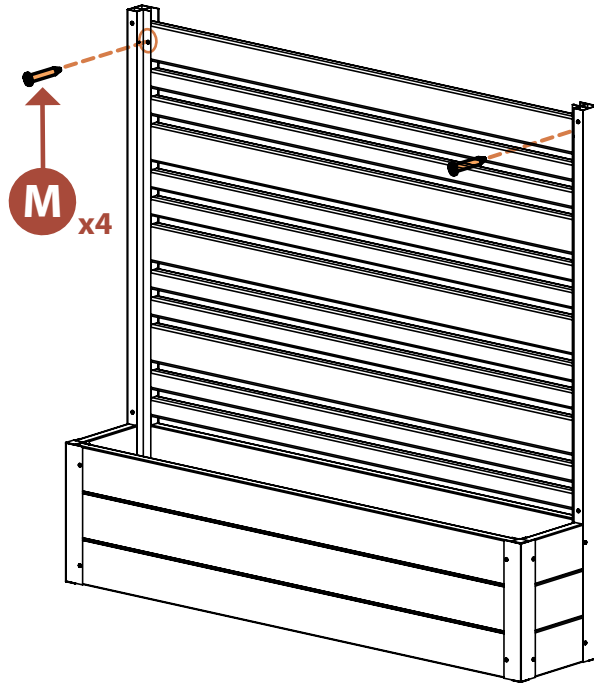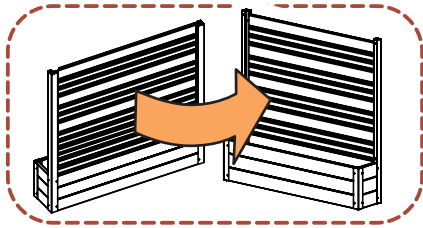

20

 **N** x4

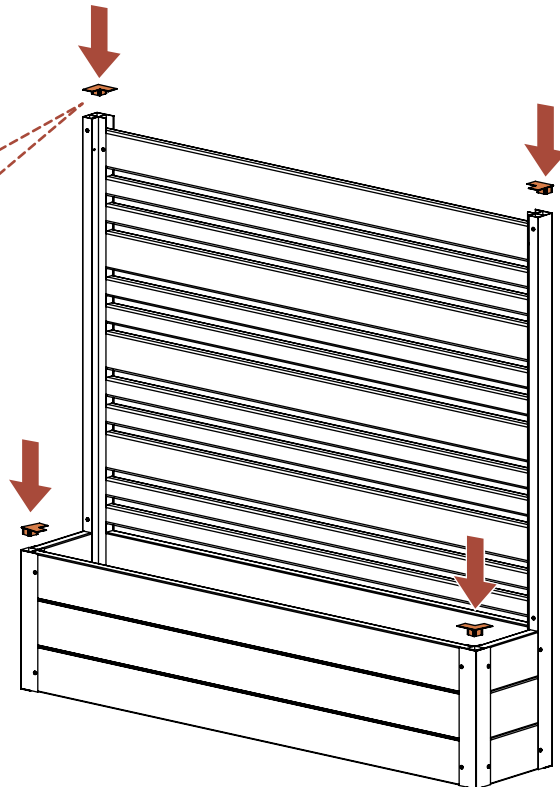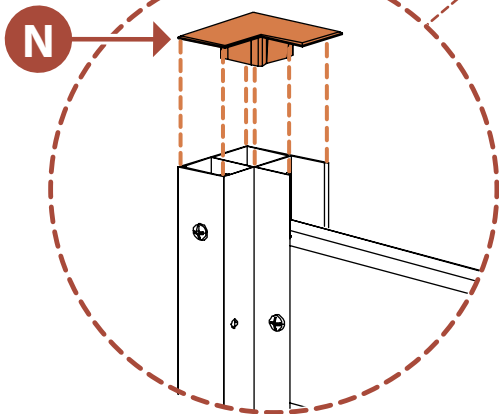

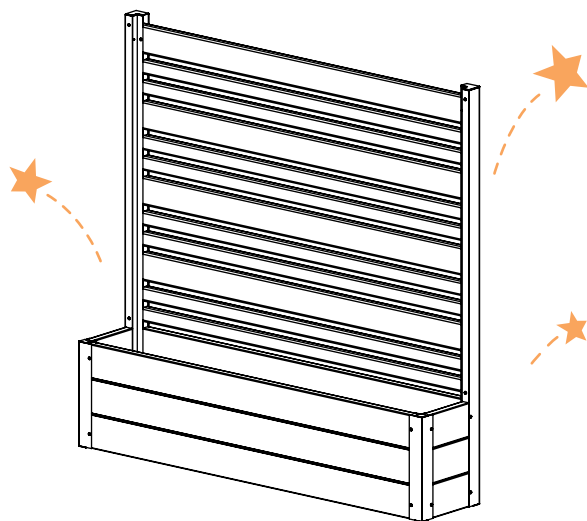


SURFACE MOUNTED INSTALLATION (OPTIONAL)


- ! Recommended if installing into high wind environment
- ! Surface mounting screws not included

DIRT

STEP 22

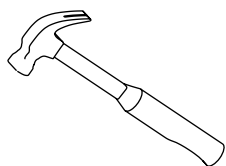


- ▶ Hammer




- ▶ 3/4" Rebar (2)

DECK

STEP 23

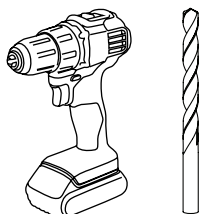


- ▶ Power Drill
- ▶ Wood Drill Bit




- ▶ 1/4" Lag Screws
3" Length (4)
- ▶ Matching Driver Bit

PATIO

STEP 23

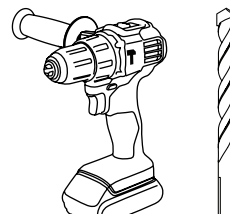

- ▶ Hammer Drill
- ▶ Concrete Drill Bit



- ▶ 1/4" Concrete Screws
2 1/4" Length (4)
- ▶ Matching Driver Bit


22

(Optional)


Recommended if installing into
high wind environment

DIRT INSTALLATION

22.1

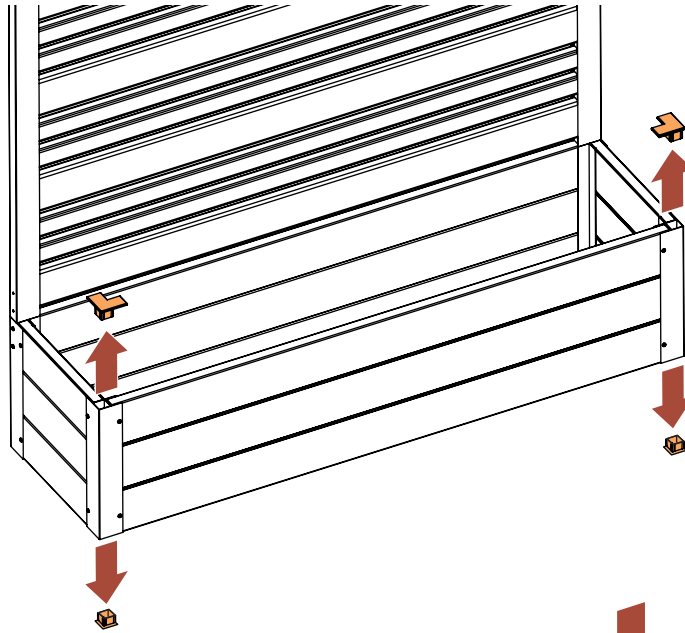

22.2

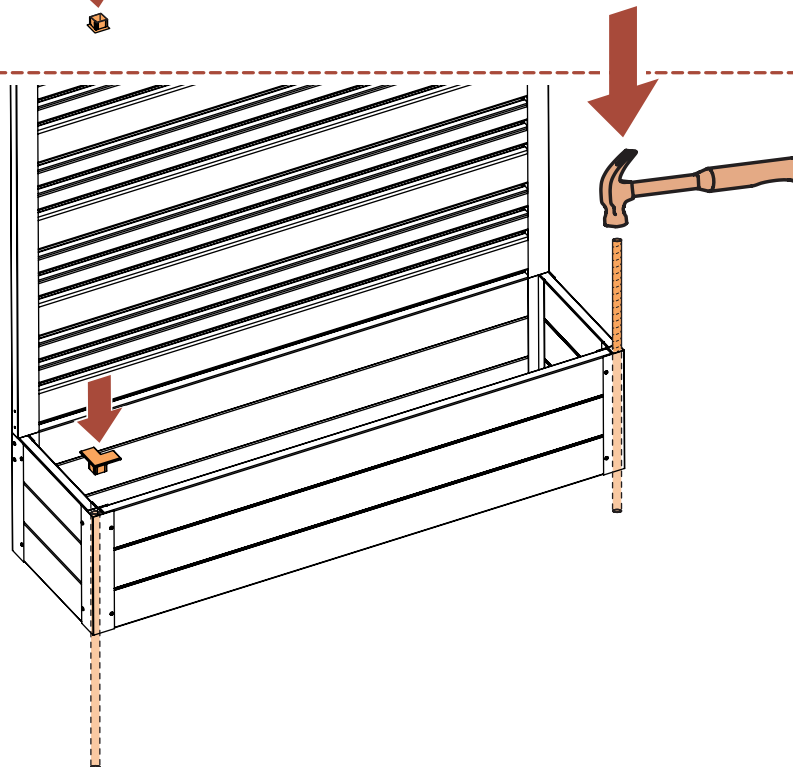


(Optional)


Recommended if installing into high wind environment

PATIO / DECK INSTALLATION


23.1

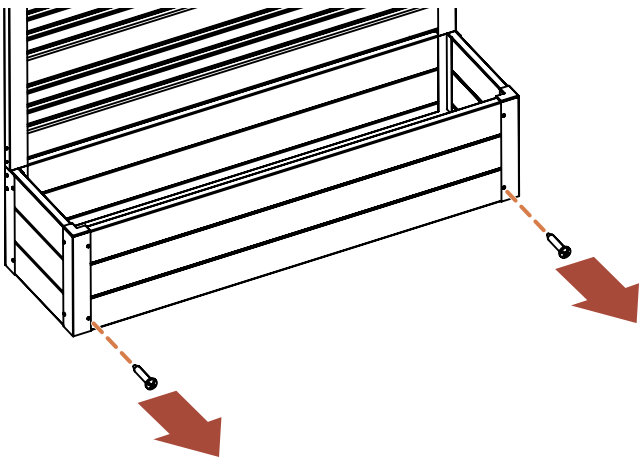


23.2

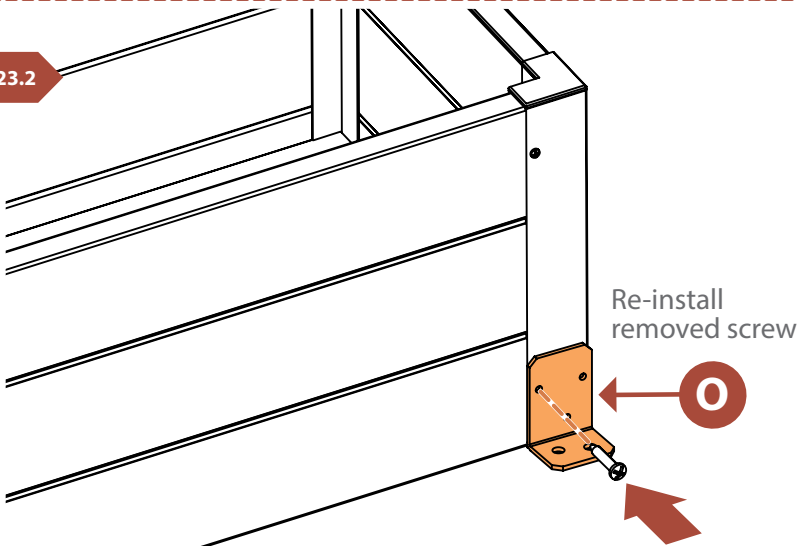


23.3

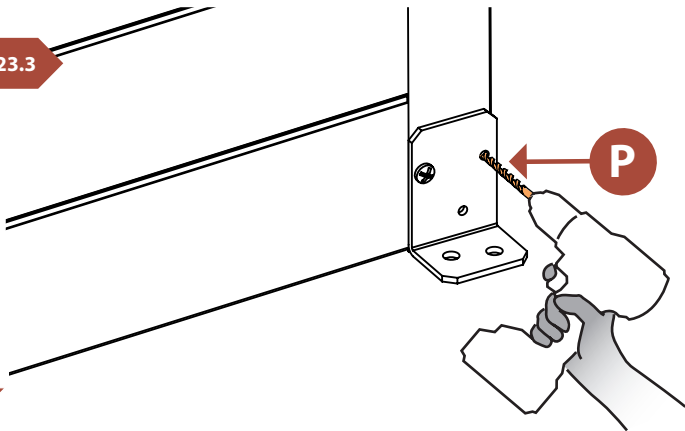


23.4

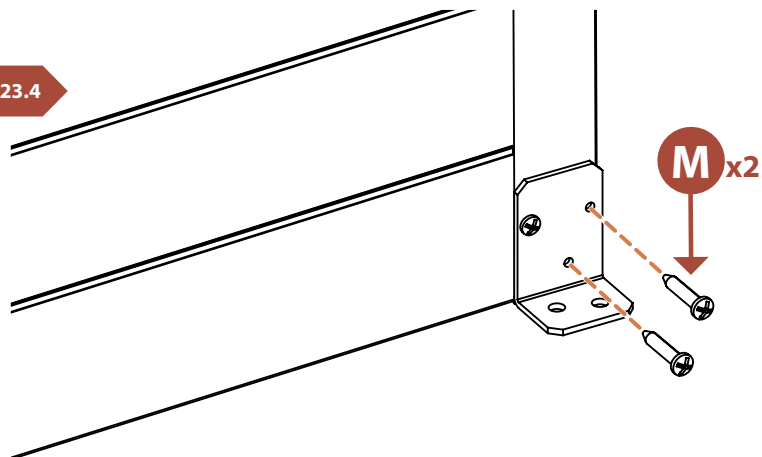

23.5

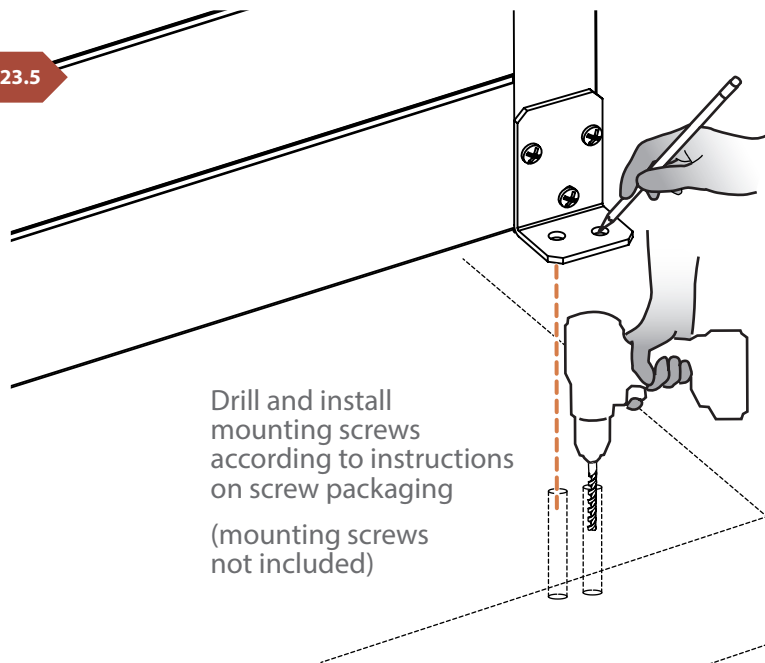

23.6

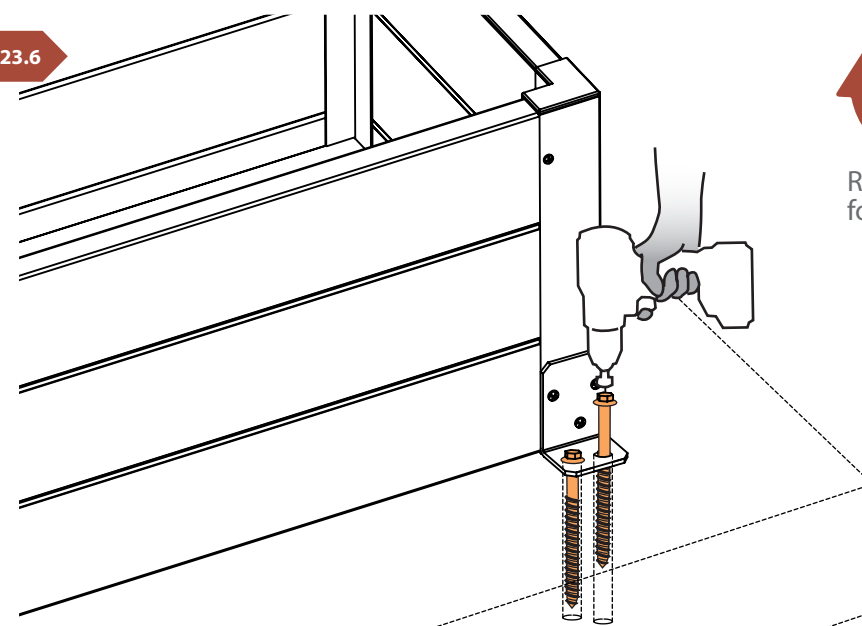

Repeat steps
for left post



HIDE IT WITH STYLE

www.encloscreens.com

support@encloscreens.com



704-892-5222
877-234-6196



6935 Reames Rd. Ste. K.
Charlotte, NC 28216



ASSEMBLY INSTRUCTIONS

EC18006 (CEDAR COLOR)

EC18007 (ASH COLOR)