


ENCLO

HIDE IT WITH STYLE

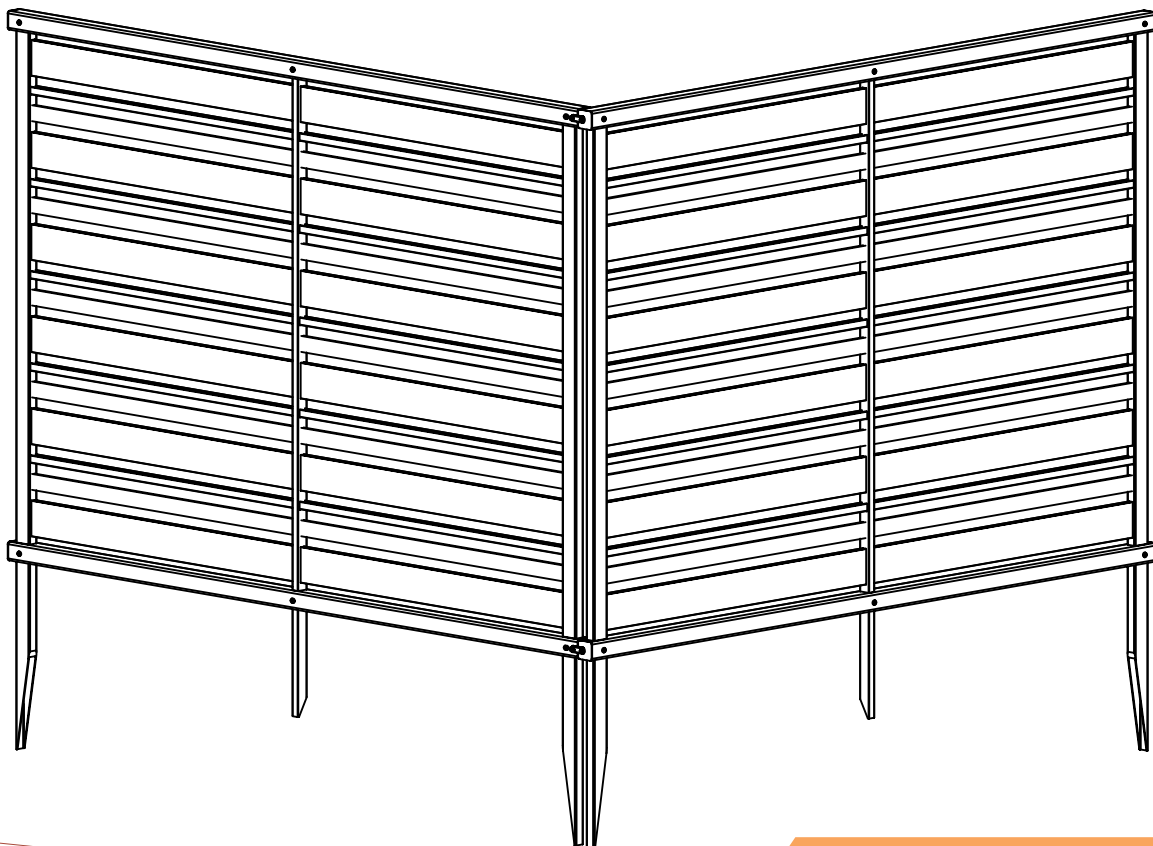

Fresno Screen Kit

(2 PACK)



60 min
*Approximate assembly
time for 2 panels*



Scan the QR code
for an assembly video



www.encloscreens.com

ASSEMBLY INSTRUCTIONS

EC18014 (CEDAR COLOR)
EC18015 (CHARCOAL COLOR)

VER. 060922

GENERAL INFORMATION



IMPORTANT

- « Check the inside of the larger pieces in your box for other materials packed inside.
- « When assembling components, place on a non-abrasive surface (i.e. shipping box) to avoid scratching.
- « We recommend an area approximately 5'x 8' for unobstructed assembling.
- « You should not need to use excessive force when assembling components.

MISSING OR DAMAGED PARTS?

VISIT OUR WEBSITE FIRST, SO WE CAN HELP YOU RIGHT AWAY!

Although great care has been taken to ensure proper packaging and handling of this product, occasionally problems occur. If you discover any missing, damaged or defective parts, please visit our website to order replacement parts. If you experience any further trouble with your product, please contact our customer service department.

 parts.nychbrands.com

 support@encloscreens.com

 **704-892-5222 / 877-234-6196**

Customer service agents are available to take calls weekdays from 9am-5pm EST. If you call outside of business hours, please leave a voicemail.

To help you quickly and accurately, please have reference item number **EC18014 (CEDAR COLOR)** / **EC18015 (CHARCOAL COLOR)** and the specific part name which can be found on page 4. It is helpful if you can provide the batch lot which is a stamped number on the end of the box.


NEED ASSEMBLY HELP?

If you are having problems with the assembly or installation of this product, we are happy to assist you with the process, **so please give us a call at 704-892-5222 / 877-234-6196.**

NEED TO RETURN?

If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**


Detailed Product Dimensions & Specifications

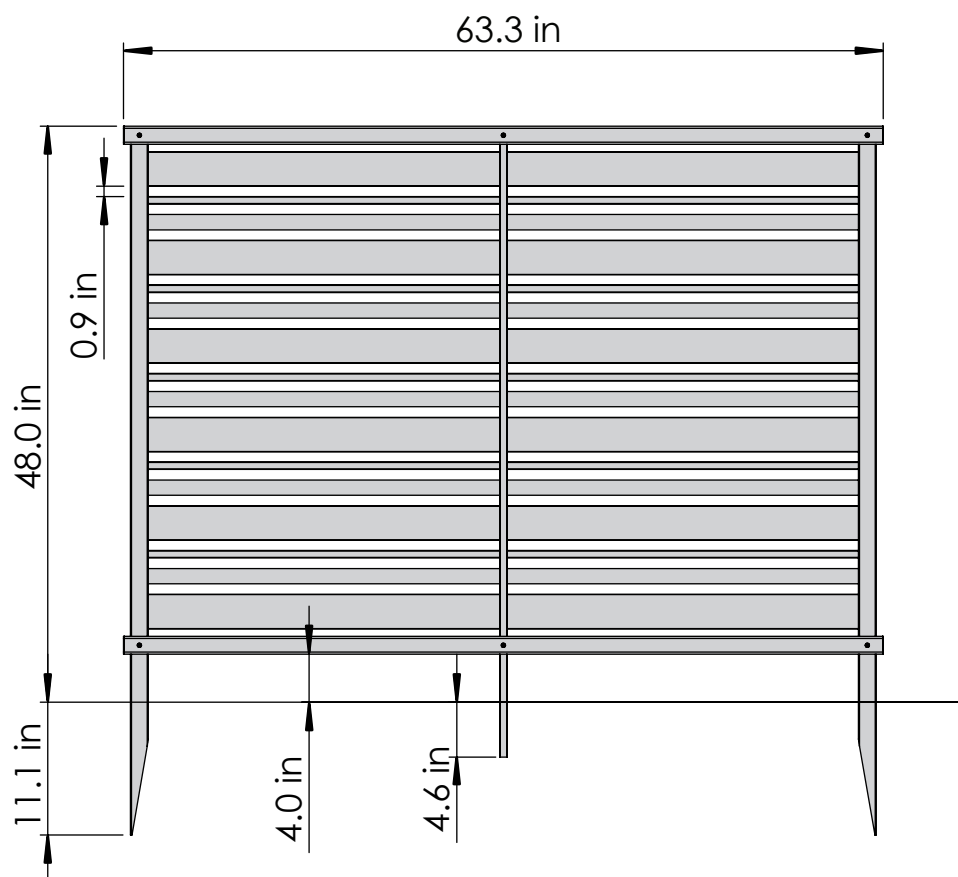




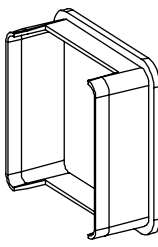




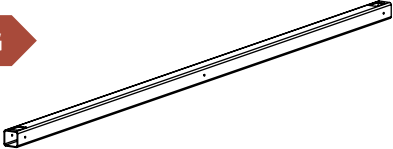
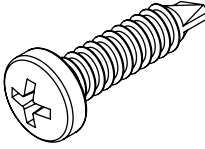
STEP 1: INSPECT PARTS

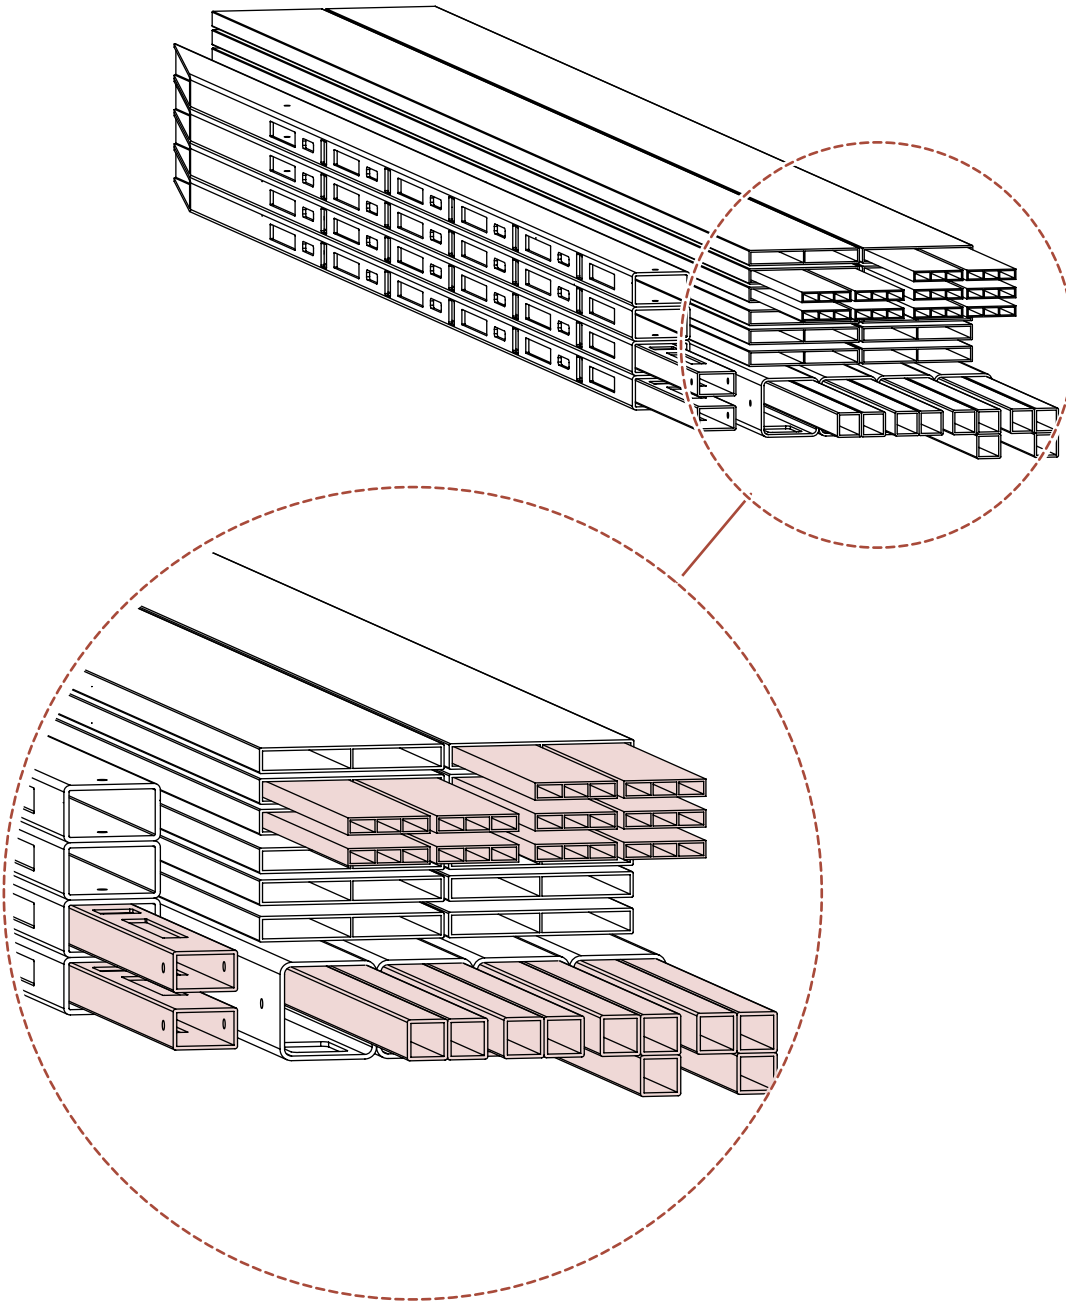STEP 1.1

- Check the inside of the larger pieces in your box for other materials packed inside.



STEP 2: LAY OUT MATERIALS

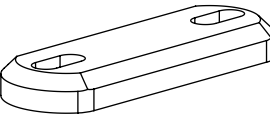
<div>A</div> <div></div> <div>Thin Slat (10) 1/4" x 1 1/4" x 62"</div>	<div>B</div> <div></div> <div>Square Slat (10) 5/8" x 5/8" x 62"</div>	<div>C</div> <div></div> <div>Wide Slat (12) 3/8" x 2 7/8" x 62"</div>	<div>H</div> <div></div> <div>Rail End Cap (8) 4 installed; 4 loose</div>
<div>D</div> <div></div> <div>Middle Post (2) 5/8" x 1" x 52 1/2"</div>	<div>E</div> <div></div> <div>End Post (4) 7/8" x 1 1/2" x 59"</div>	<div>I</div> <div></div> <div>Joiner Clip (4)</div>	
<div>F</div> <div><div>NOTE: Top rail has large cut holes on one side only</div></div> <div>Top Rail (2) 1 1/2" x 1 1/2" x 63 1/4"</div>	<div>G</div> <div></div> <div>Bottom Rail (2) 1 1/2" x 1 1/2" x 63 1/4"</div>	<div>J</div> <div></div> <div>3/4" Self-Drilling Steel Screws (32)</div>	

STEP 3: ASSEMBLE FIRST PANEL

STEP 3.1


1. Slide (6) Wide Slats (C), (5) Square Slats (B), and (5) Thin Slats (A) into the routed holes in one of the End Posts (E).
2. Slide the Middle Post (D) over the slats until it sits in the middle of the slats as shown.
3. Slide a second end post over the slats.

NOTE: Ensure all slats are pushed tightly up to the back wall of the posts.

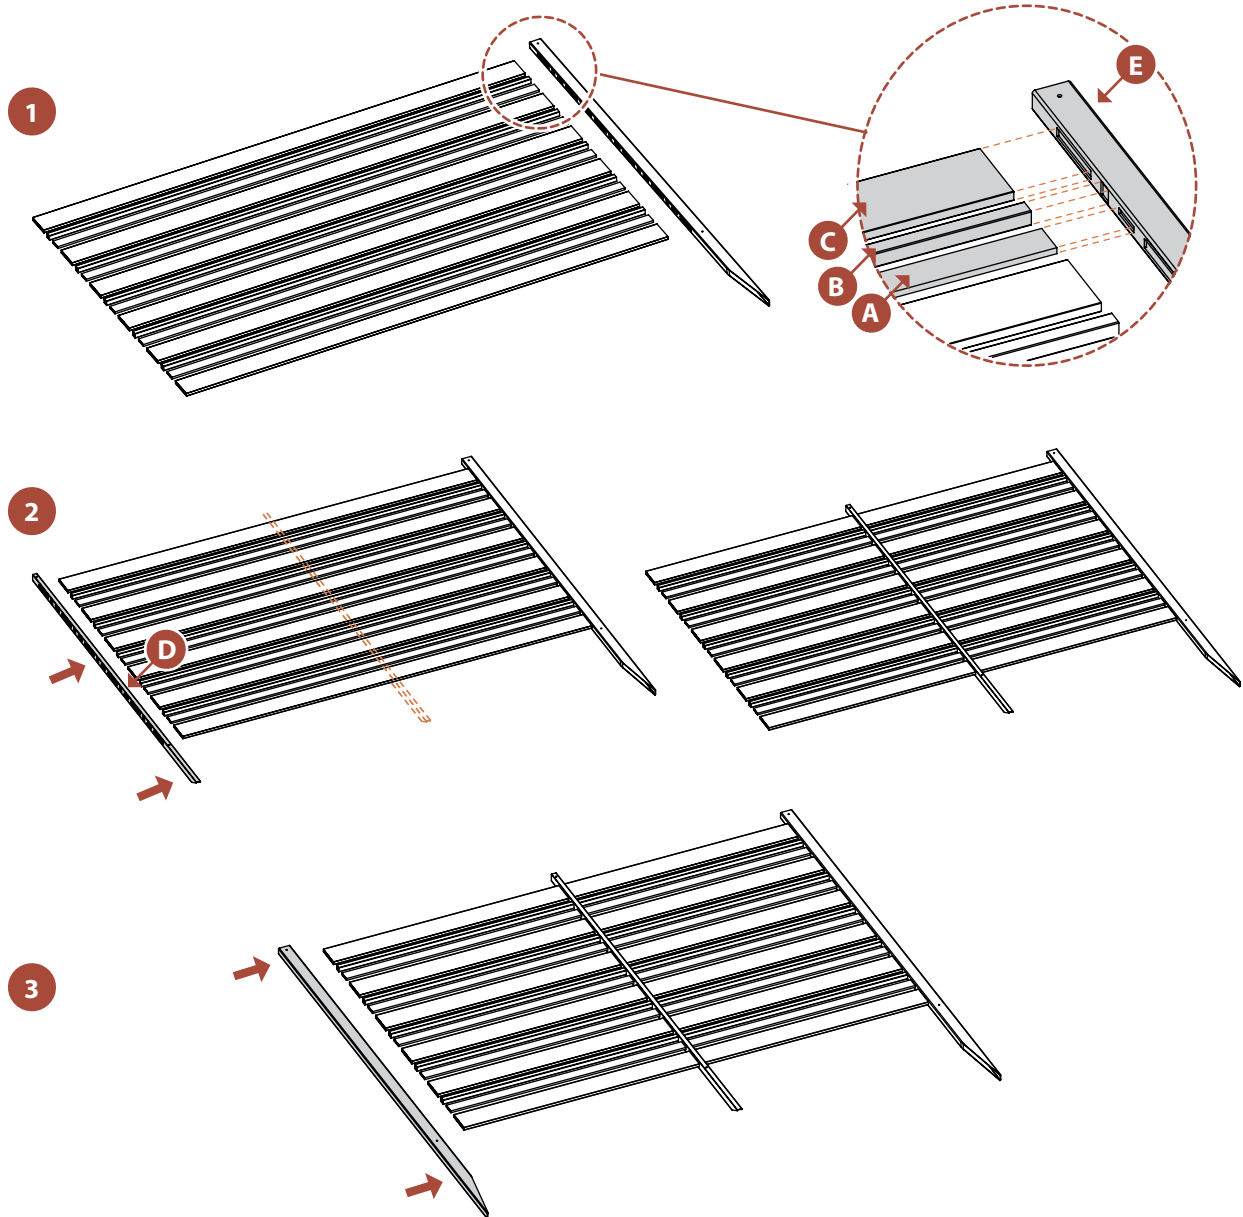


STEP 3.2

1. Slide the Bottom Rail **(G)** over the bottoms of the posts until the pre-drilled holes in the (3) posts and the bottom rail align.
2. Drive (3) total $\frac{3}{4}$ " self-drilling steel screws into the pre-drilled holes in the bottom rail.

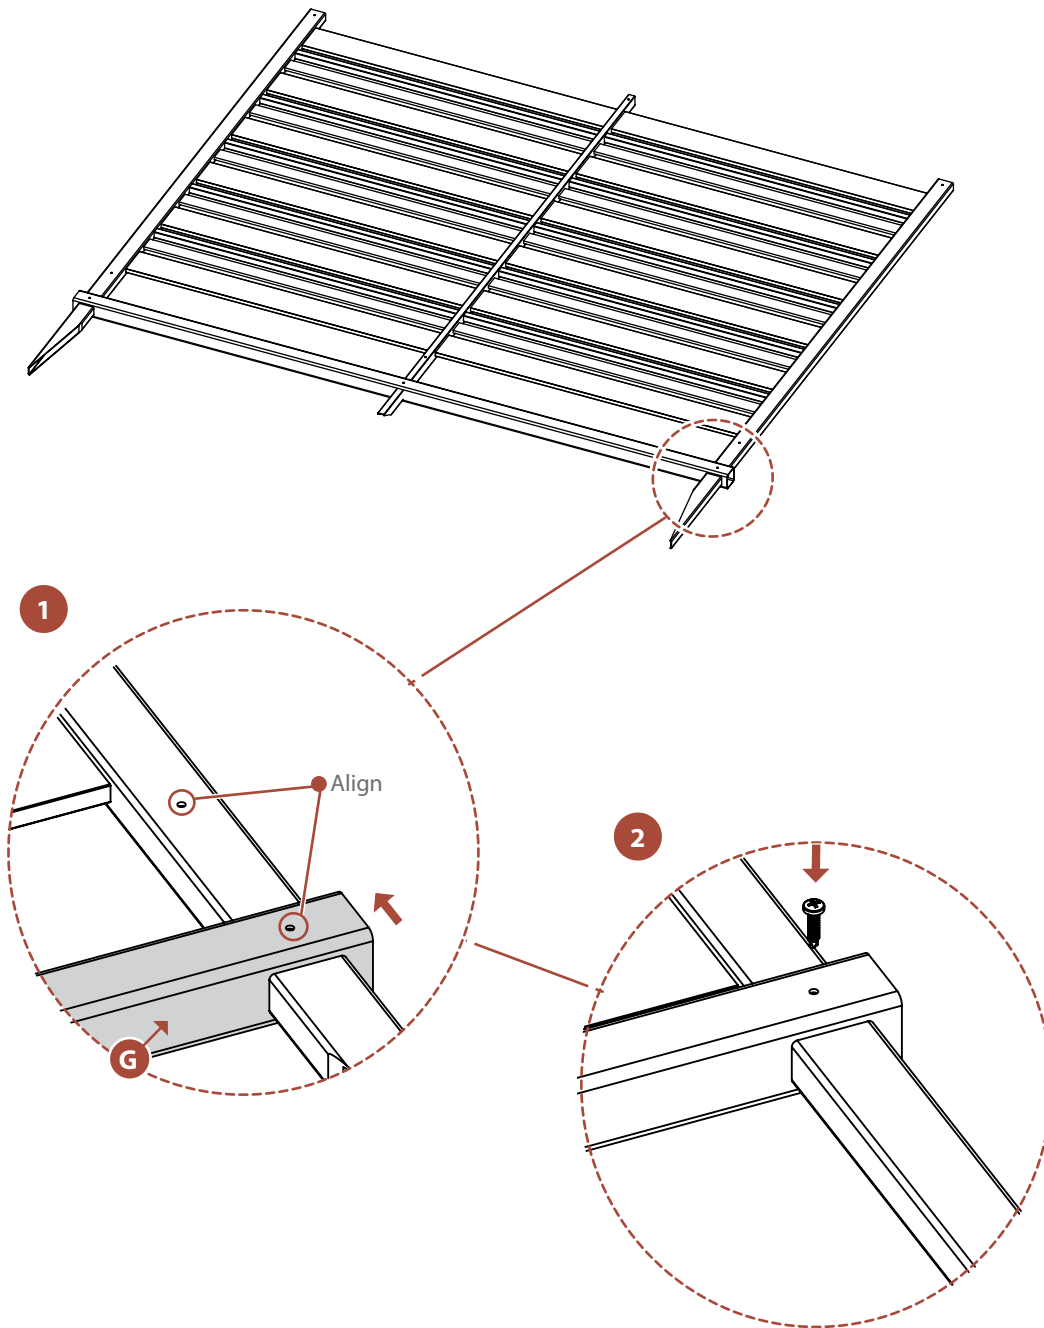


STEP 3.3

1. Slide the Top Rail (**F**) over the tops of the posts until the pre-drilled holes in the posts and the top rail align.
2. Drive (3) total $\frac{3}{4}$ " Self-Drilling Screws (**J**) into the pre-drilled holes in the top rail.

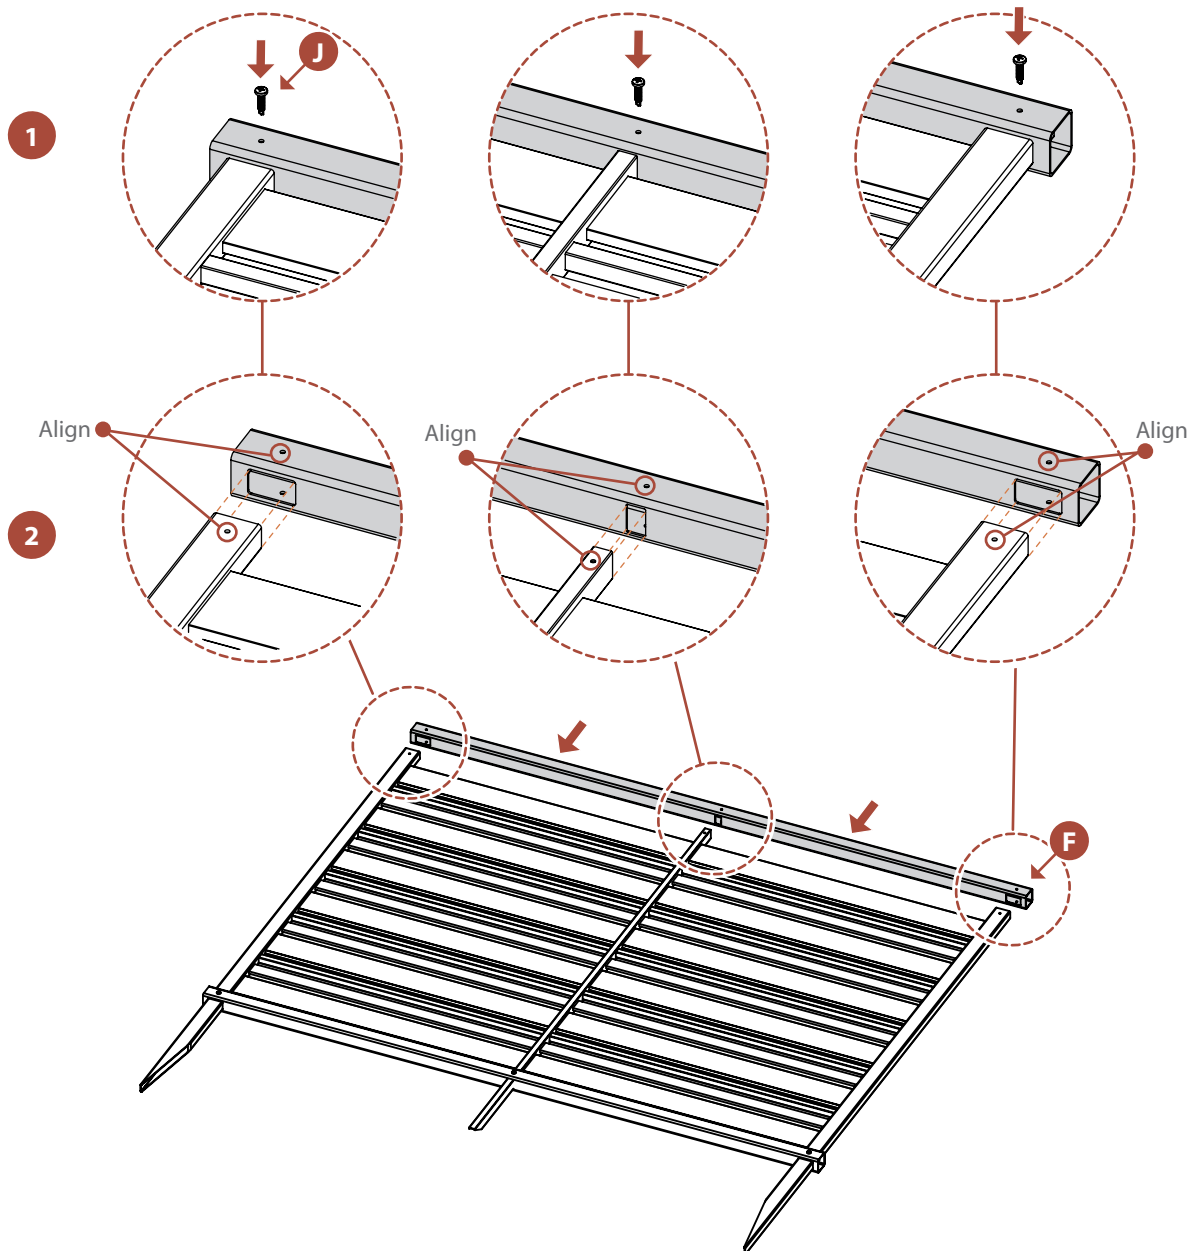


STEP 3.4

- Turn the panel to the other side and drive (6) total $\frac{3}{4}$ " self-drilling steel screws through the pre-drilled holes in the top and bottom rail.

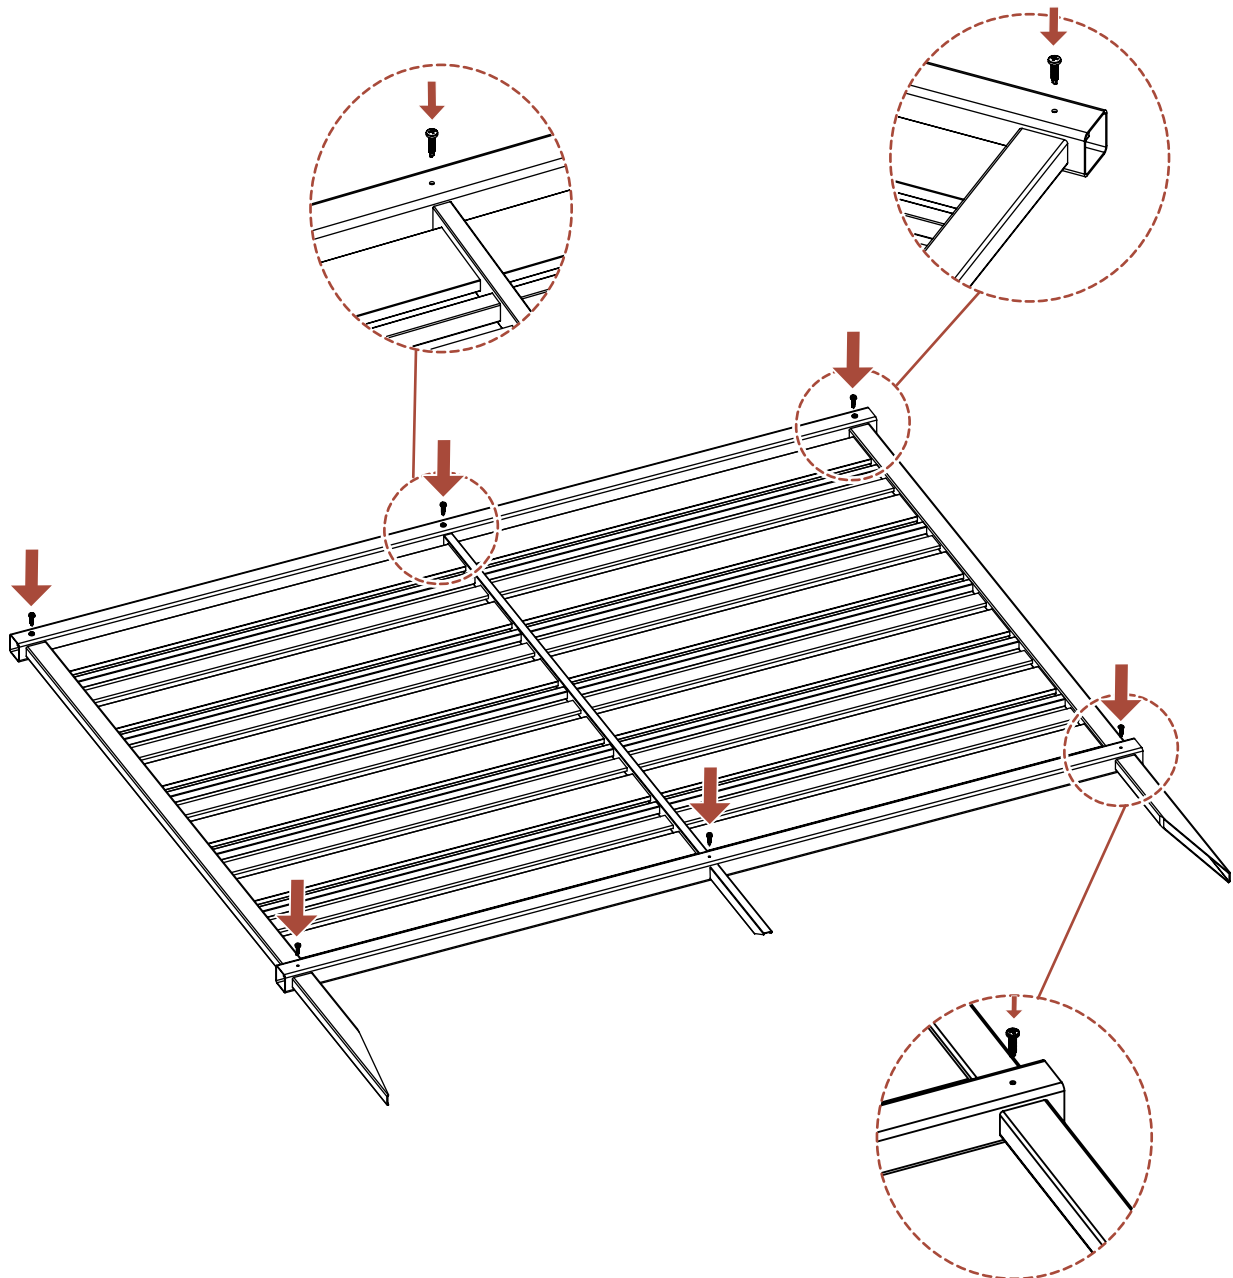


STEP 3.5

► Insert (2) Rail End Caps (**H**) into the ends of the rails.

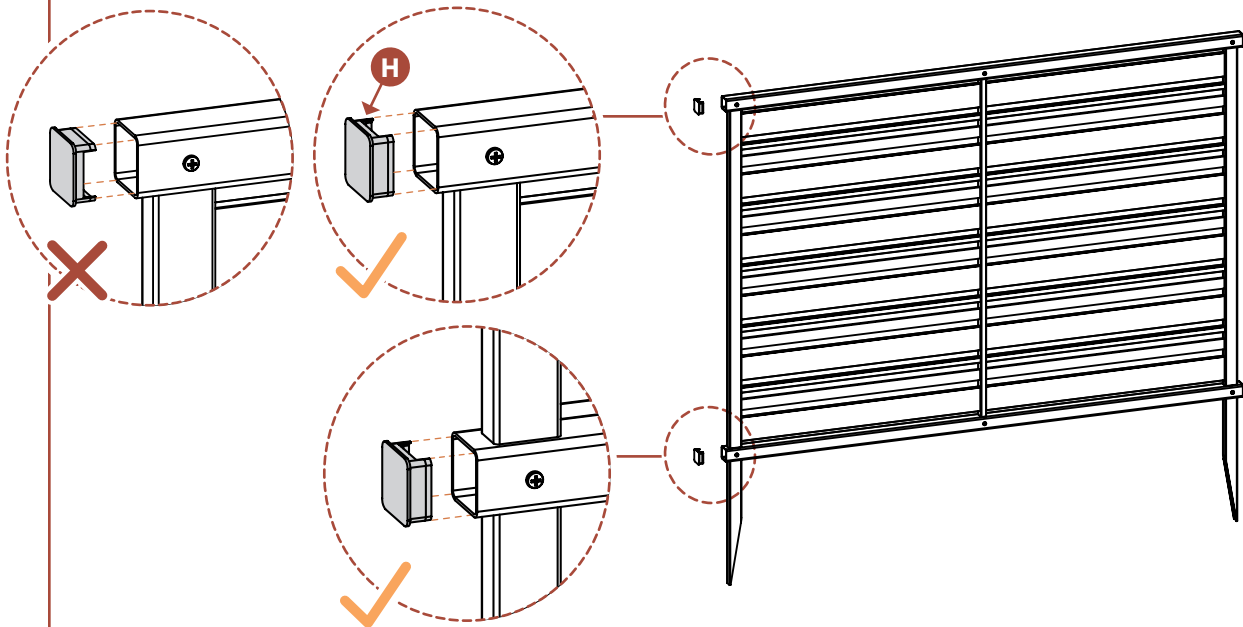**STEP 4: ASSEMBLE SECOND PANEL****STEP 4.1**

► Repeat Steps 2-3 to assemble the second panel.


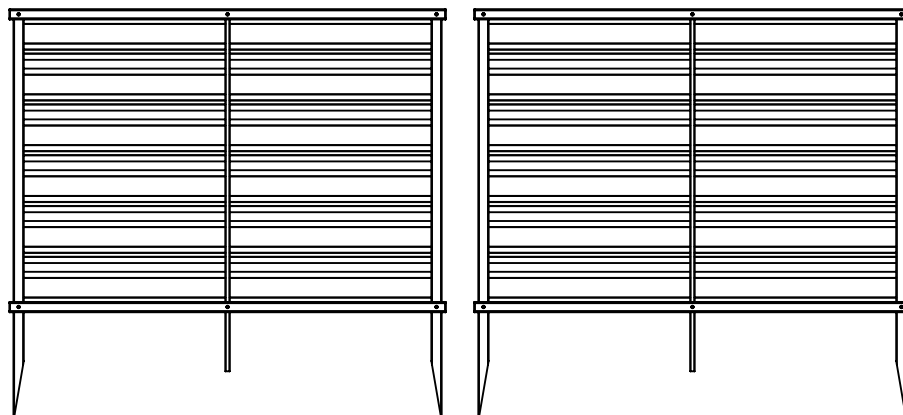


STEP 5: INSTALL IN THE GROUND

STEP 5.1

1. Move the screen to its final location.
2. Attempt to push the panel into the ground.
3. Ensure the unit is properly level in both directions as you push it into the ground.



NOTE: It is highly recommended to use 2 people for this portion of the installation.

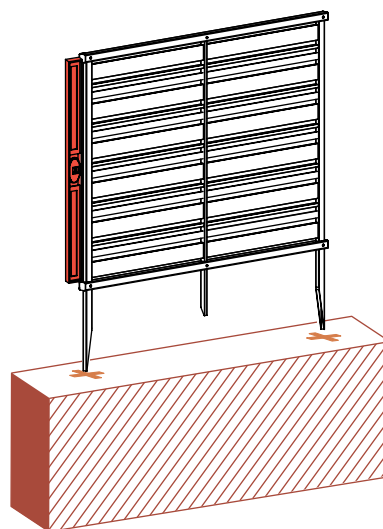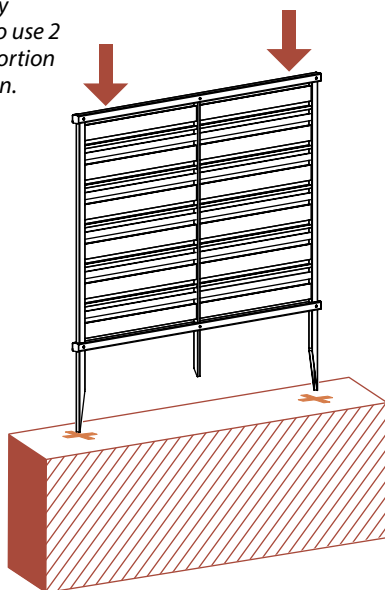

STEP 5.2

► If your panel cannot be pushed into the ground, follow these steps:




1. Loosen the top 6" of the ground with a claw hammer.
2. Add water to loosened soil.
3. Use a block of wood to protect the post and gently hammer each post into the ground.

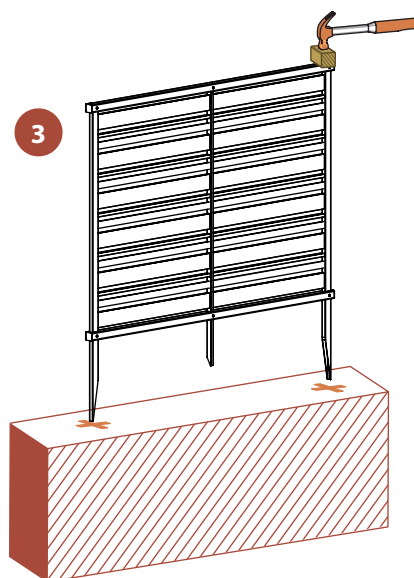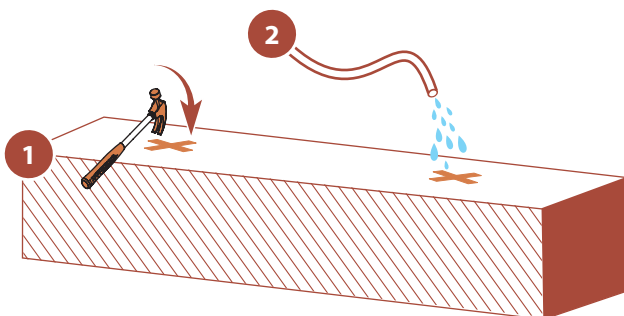

STEP 5.3

► **Optional in hard ground:** If your ground is too hard, or you have more than 3 or 4 panels to install, please consider these options:



1. Use a 1¼" diameter auger bit (commonly used for planting tulips) as illustrated (\$15-\$20 on Amazon.com).
2. Drill a hole about 12" to 16" deep at the desired location, and fill the holes with water as illustrated.
3. Push the panel posts into the holes.

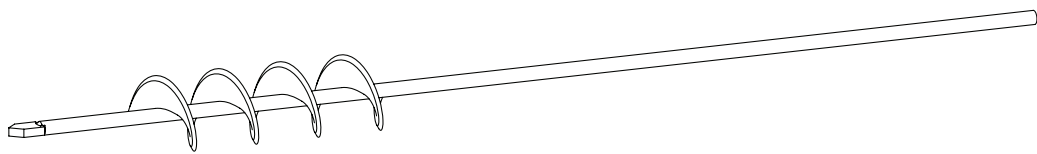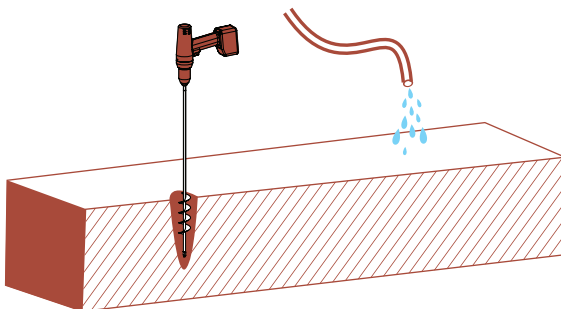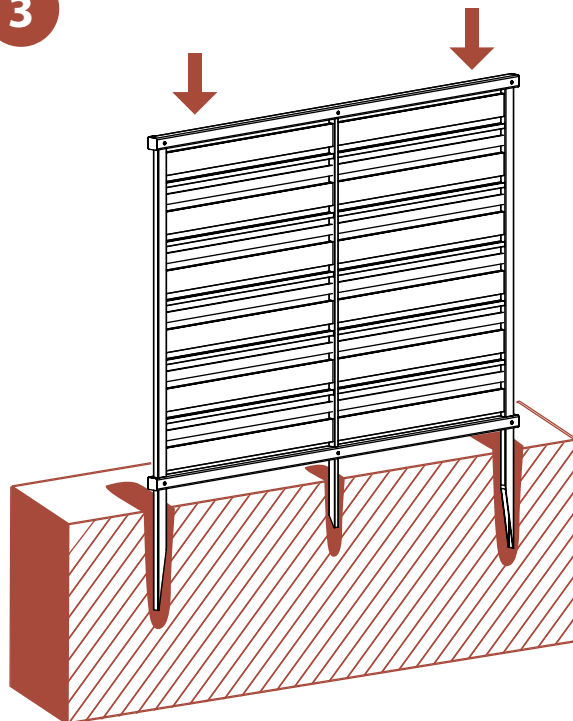1**2****3**

STEP 6: CONNECTING THE PANELS

STEP 6.1

1. **Corner Application:** Install the Joiner Clips (I) as shown below.
2. **Straight Line Application:** Install the Joiner Clips (I) as shown below.

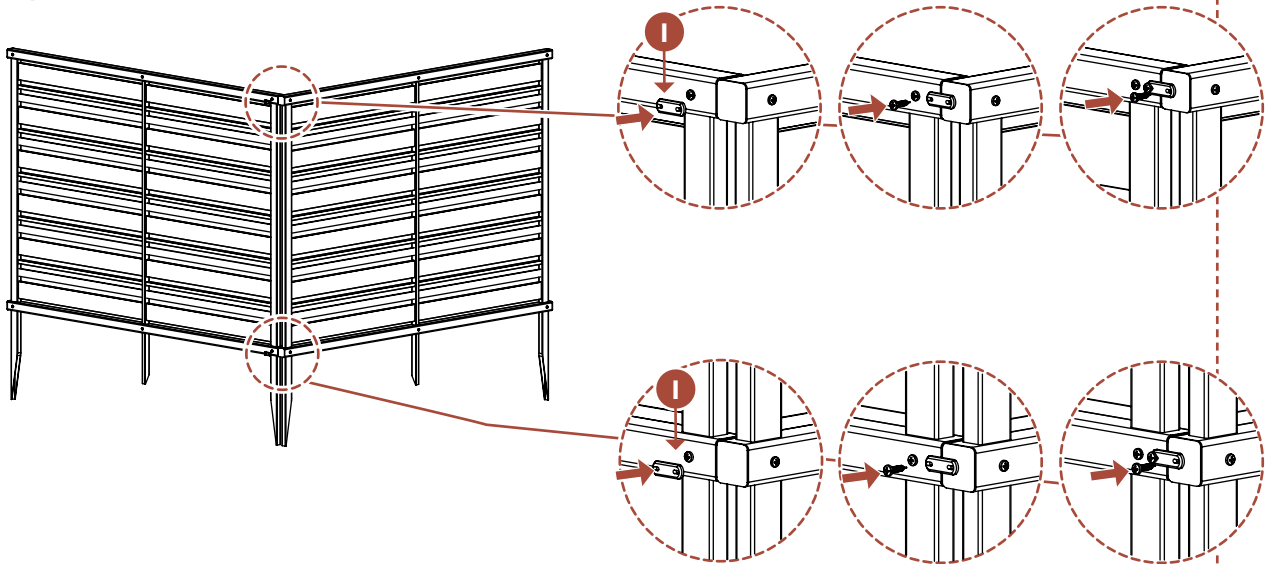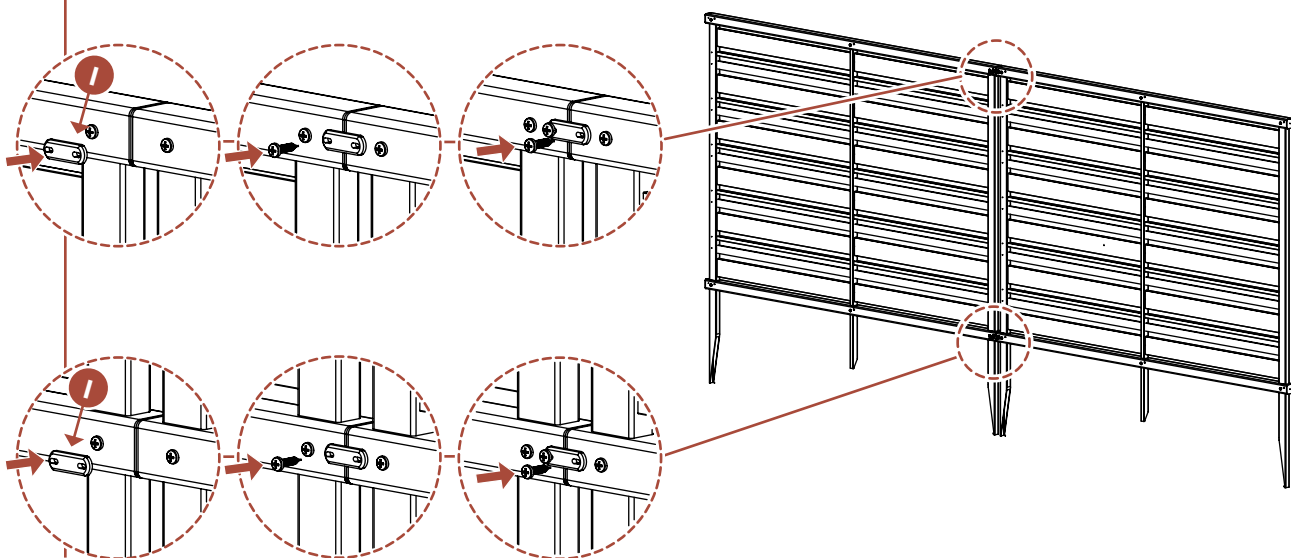1**2**



HIDE IT WITH STYLE

www.encloscreens.com

support@encloscreens.com



704-892-5222
877-234-6196



6935 Reames Rd. Ste. K.
Charlotte, NC 28216



ASSEMBLY INSTRUCTIONS

EC18014 (CEDAR COLOR)

EC18015 (CHARCOAL COLOR)