




HIDE IT WITH STYLE

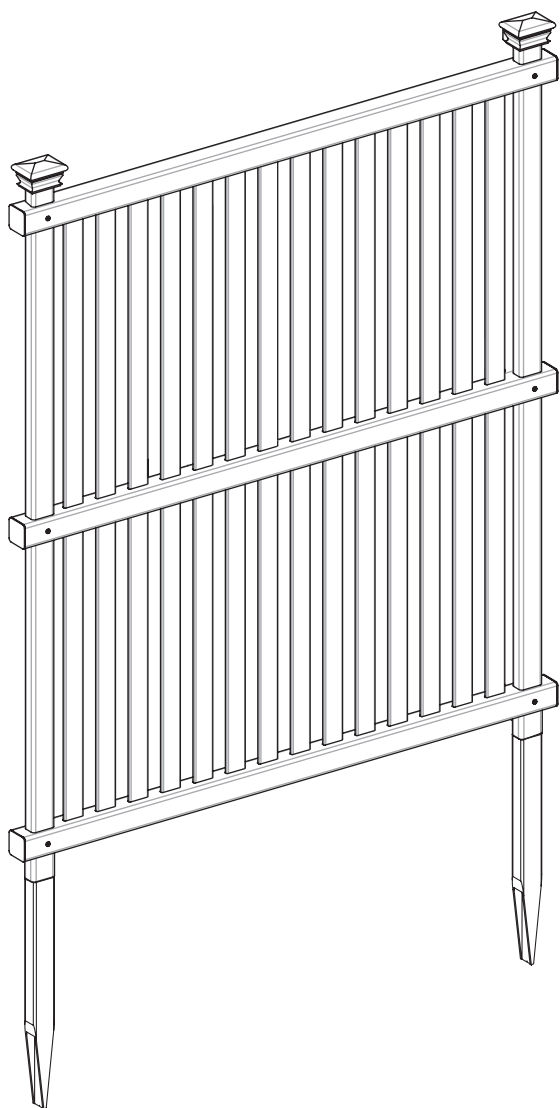

## Wilmington Screen Kit 36" W x 45" H

**45 min**  
*Approximate assembly time*



**Scan the QR code**  
*for an assembly video*



**ASSEMBLY  
INSTRUCTIONS**  
ZP19074

[www.encloscreens.com](http://www.encloscreens.com)

VER. 091222

## GENERAL INFORMATION



### IMPORTANT


- Check the inside of the larger pieces in your box for other materials packed inside.
- When assembling components, place on a non-abrasive surface (i.e. shipping box) to avoid scratching.
- We recommend an area approximately 5'x 8' for unobstructed assembling.
- You should not need to use excessive force when assembling components.

## MISSING OR DAMAGED PARTS?

### VISIT OUR WEBSITE FIRST, SO WE CAN HELP YOU RIGHT AWAY!

Although great care has been taken to ensure proper packaging and handling of this product, occasionally problems occur. If you discover any missing, damaged or defective parts, please visit our website to order replacement parts. If you experience any further trouble with your product, please contact our customer service department.

 [parts.nychbrands.com](https://parts.nychbrands.com)

 [support@encloscreens.com](mailto:support@encloscreens.com)

 **704-892-5222 / 877-234-6196**

*Customer service agents are available to take calls weekdays from 8am-5pm EST. If you call outside of business hours, please leave a voicemail.*

To help you quickly and accurately, please have reference item number **EC18019** and the specific part name which can be found on page 4. It is helpful if you can provide the batch lot which is a stamped number on the end of the box.


## NEED ASSEMBLY HELP?

If you are having problems with the assembly or installation of this product, we are happy to assist you with the process, **so please give us a call at 704-892-5222 / 877-234-6196.**


## NEED TO RETURN?

If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**

## Detailed Product Dimensions & Specifications

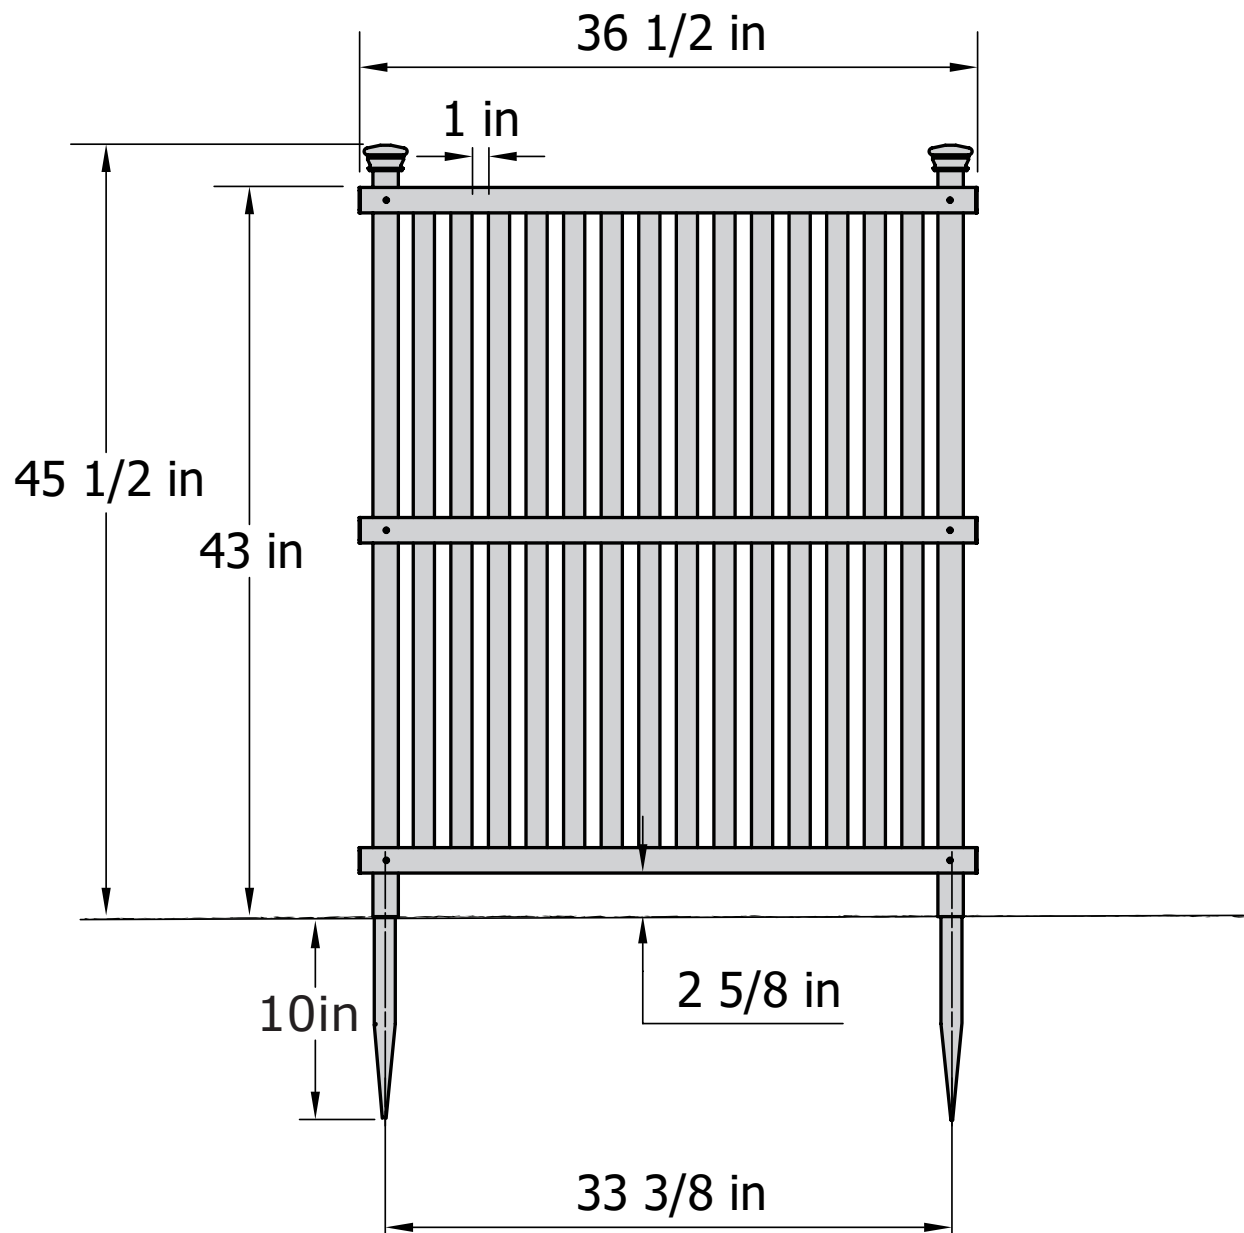


## STEP 1: LAY OUT MATERIALS

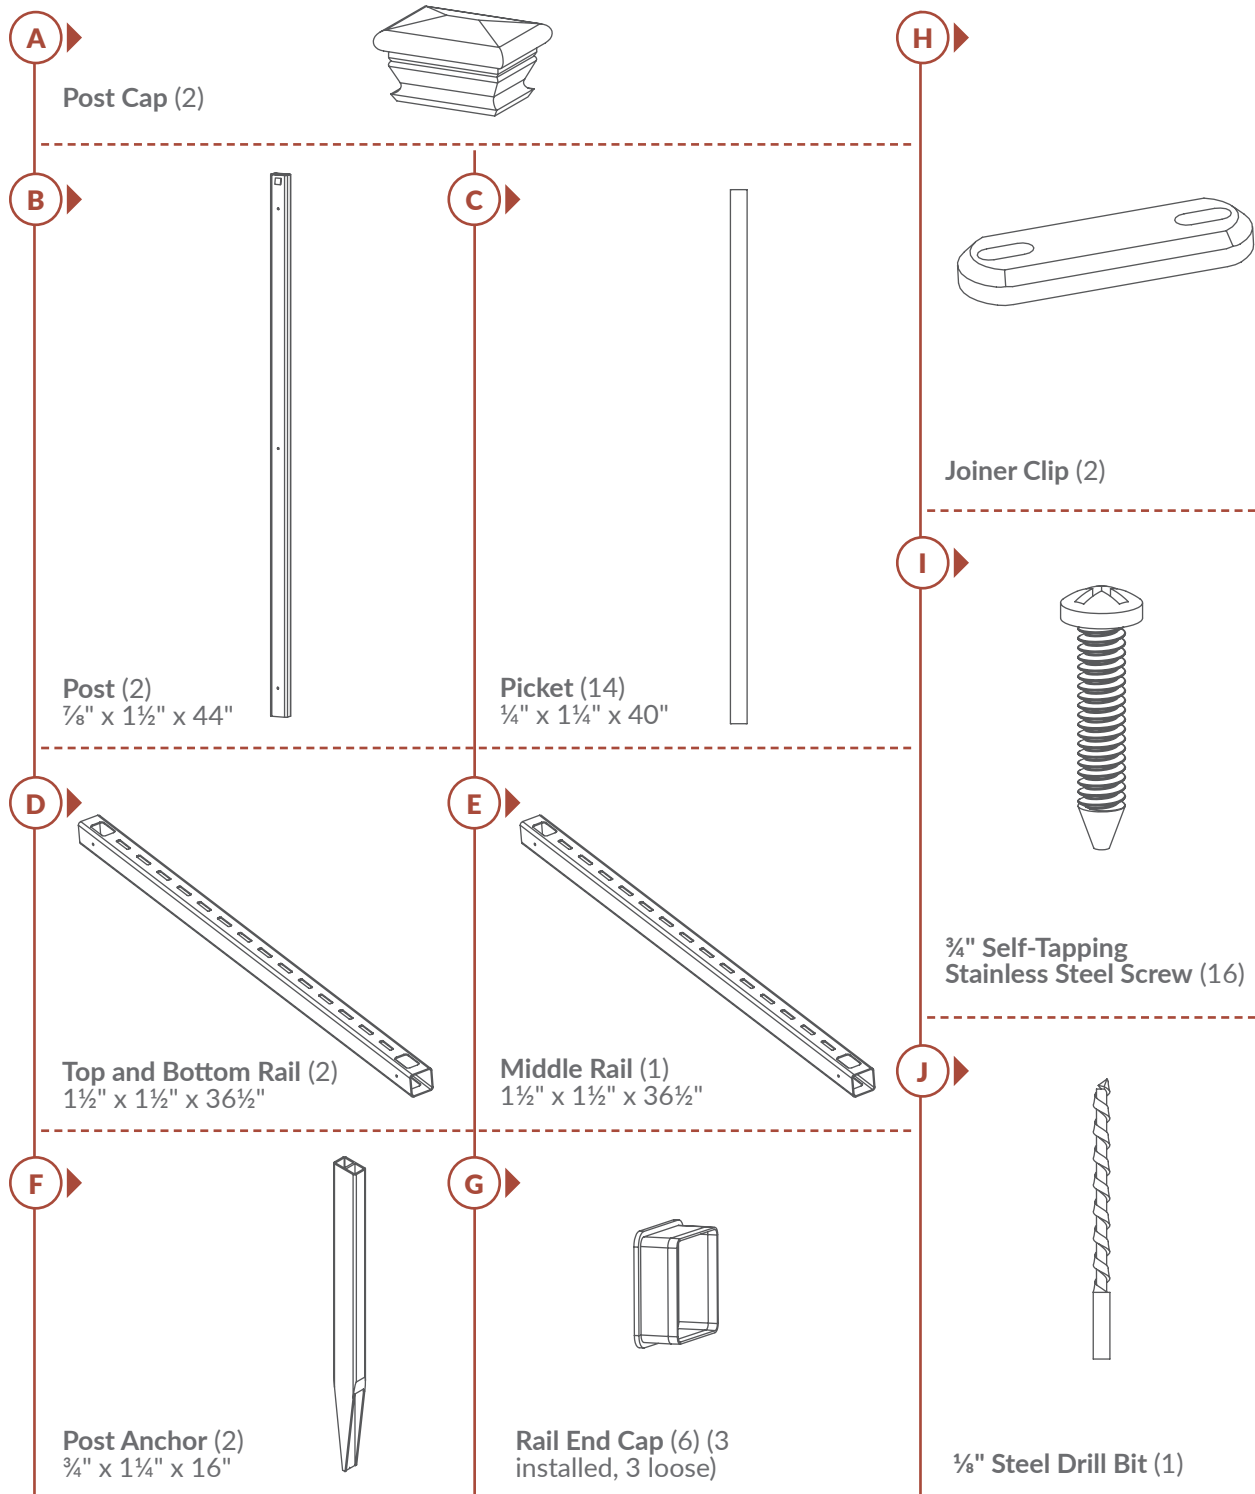


## STEP 2: ASSEMBLE SCREEN FRAME


### STEP 2.1

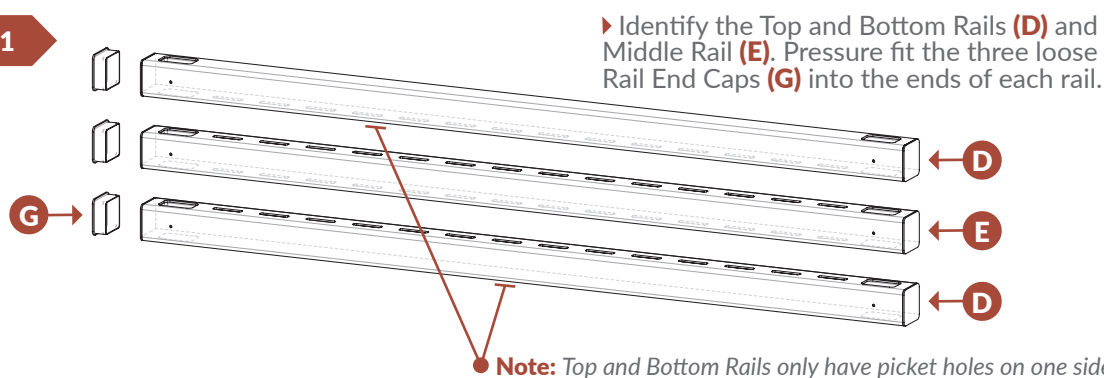


### STEP 2.2

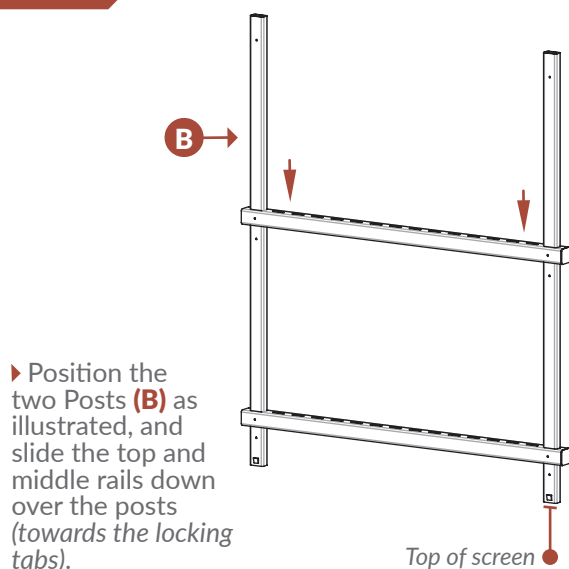

### STEP 2.3

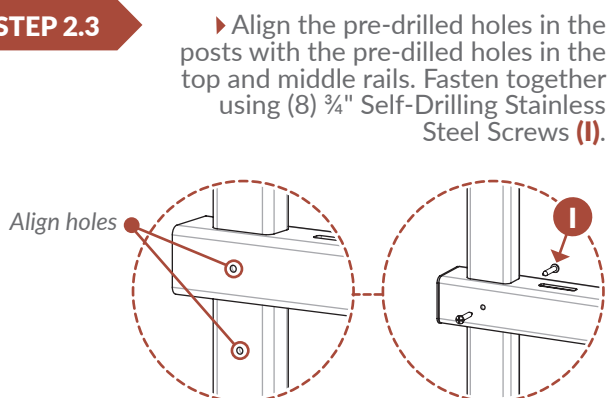


### STEP 2.4

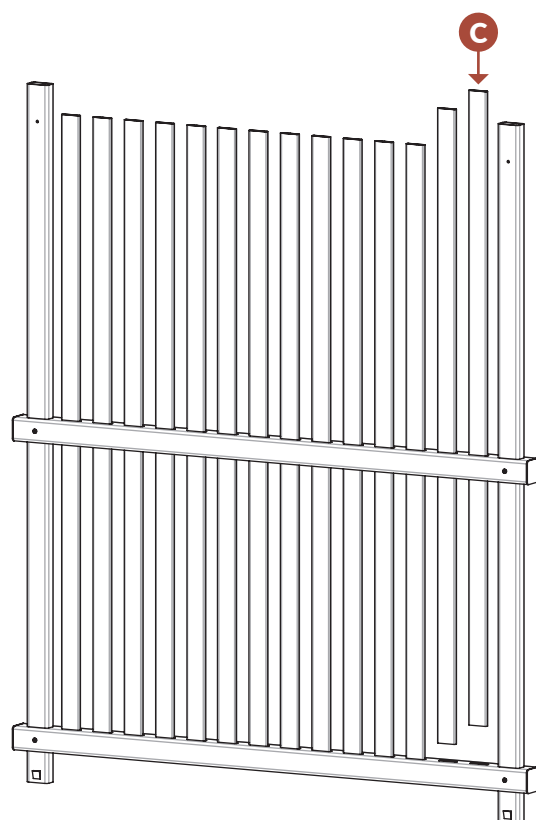

## STEP 3: FINISH ASSEMBLING SCREEN


### STEP 3.1

- Slide the bottom rail down over the bottom of the posts, aligning the pre-drilled holes on the bottom rail with the pre-drilled holes in the posts. Insert each picket into the bottom rail.

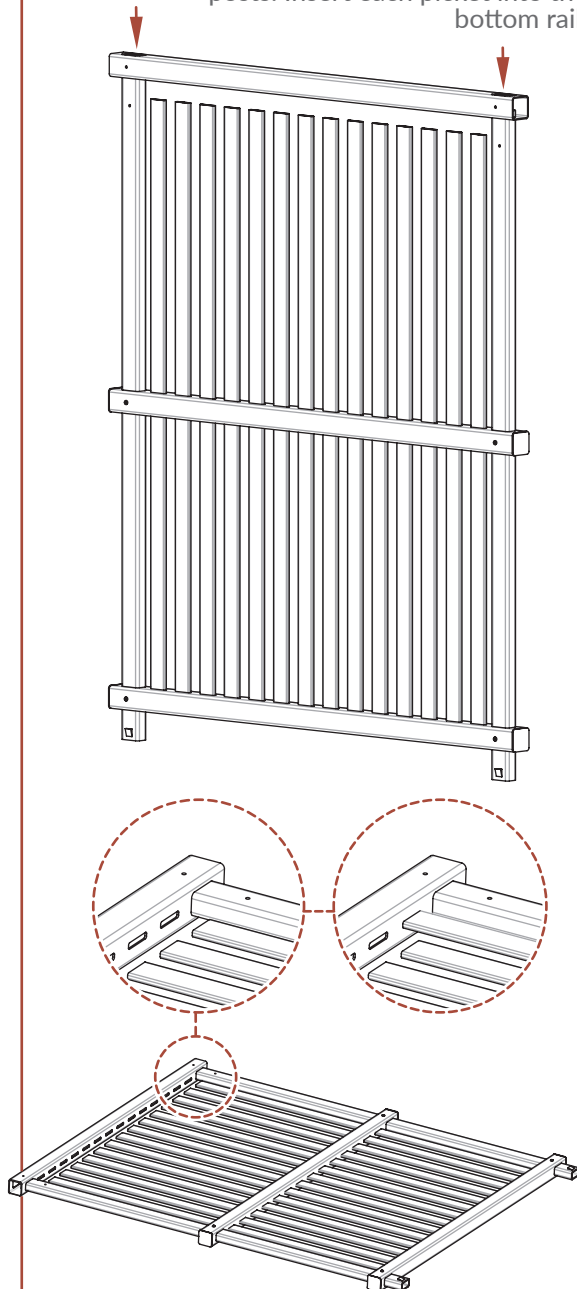

### STEP 3.2


1. Slide the Post Anchors (**F**) into the post until the pre-drilled hole in the anchor aligns with the pre-drilled hole in the post.
2. Drive (2)  $\frac{3}{4}$ " self-drilling stainless steel screws into the pre-drilled holes in the posts.
3. Use the  $\frac{1}{8}$ " Drill Bit (**J**) to drill (4) total holes in the post anchor through the pre-drilled holes in the bottom rail.
4. Drive (4)  $\frac{3}{4}$ " self-drilling stainless steel screws into the pre-drilled holes in the bottom rail.

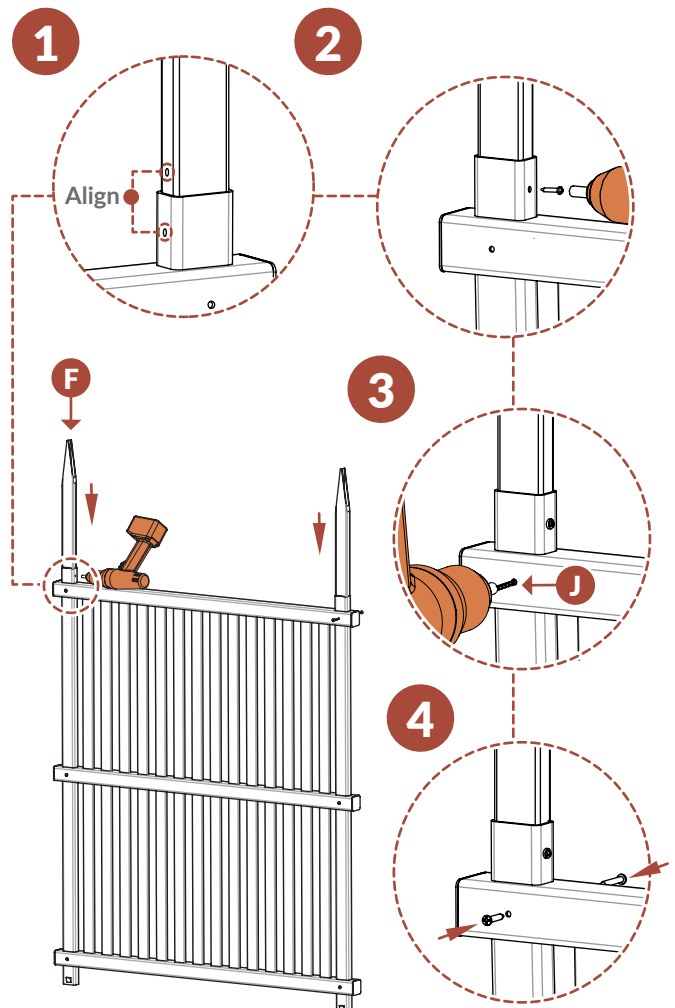

## STEP 4: POSITION AND INSTALL SCREEN


### STEP 4.1

- Move the screen to its final location, and identify the location of posts.

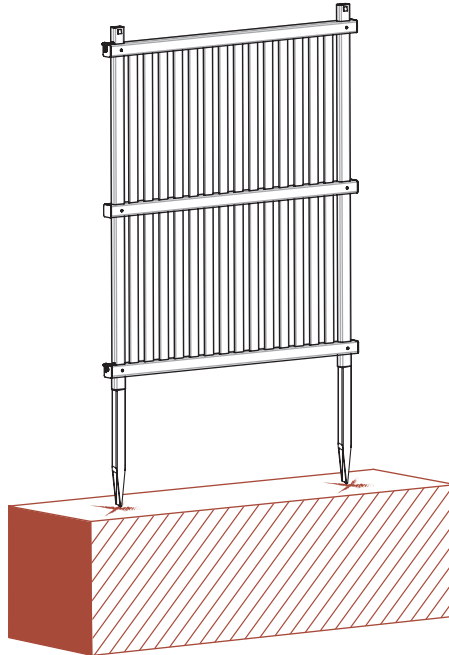


### STEP 4.2

- Attempt to push the unit into the ground as illustrated. All 10" of the post anchors should be inserted into the ground, so that they are no longer visible.

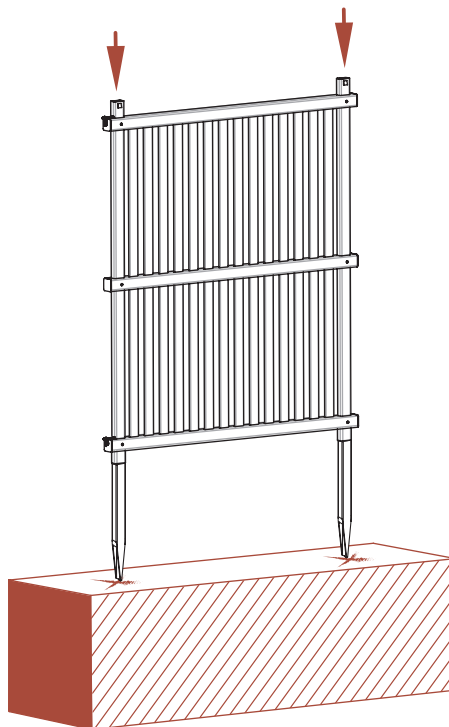

**STEP 4.3**

- 1.** Loosen the top 6" or 7" of the ground with a claw hammer as illustrated.
- 2.** Add water to loosened soil.
- 3.** Use a block of wood to protect the top of post, and gently hammer the post into the ground.



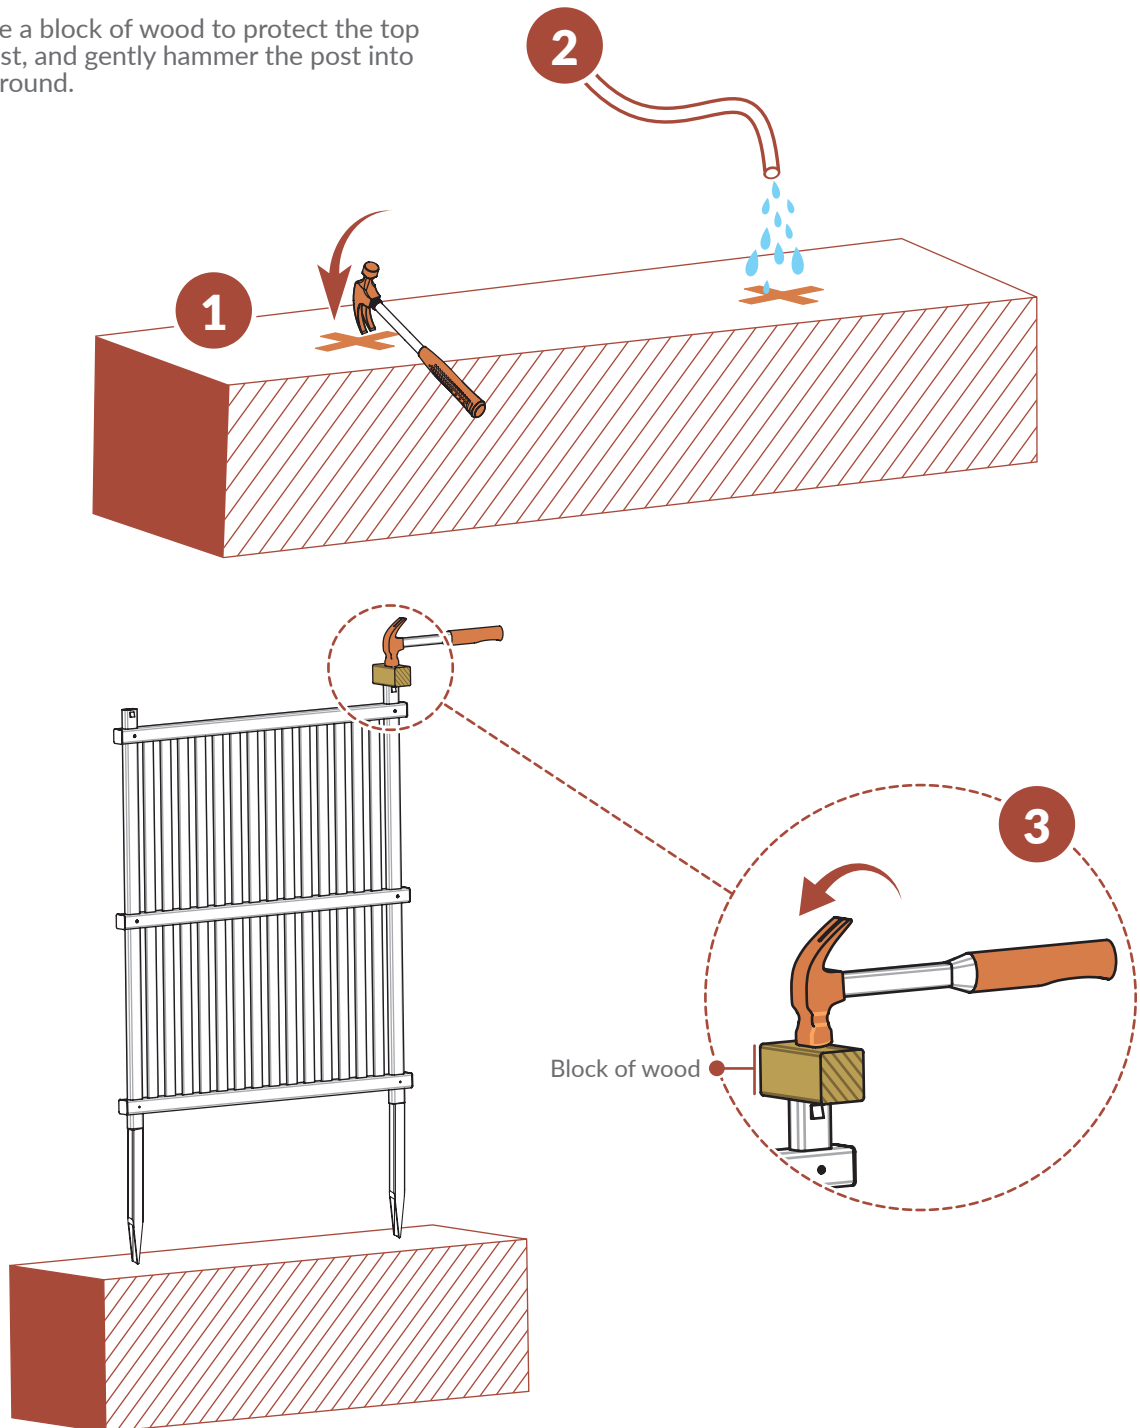




**STEP 4.4**


► **Optional in hard ground:** If your ground is too hard, or you have more than 3 or 4 panels to install, please consider these options:

1. Use a 1¼" diameter auger bit (commonly used for planting tulips) as illustrated (\$15-\$20 on Amazon.com).
2. Drill a hole about 12" to 16" deep at the desired location, and fill the holes with water as illustrated.
3. Push the panel posts into the holes.

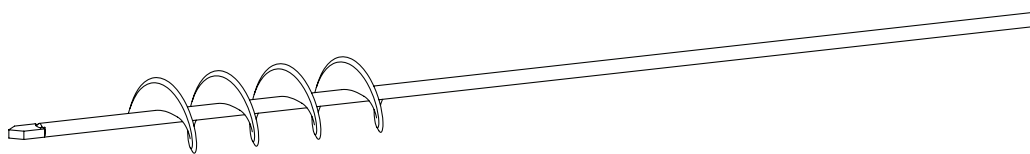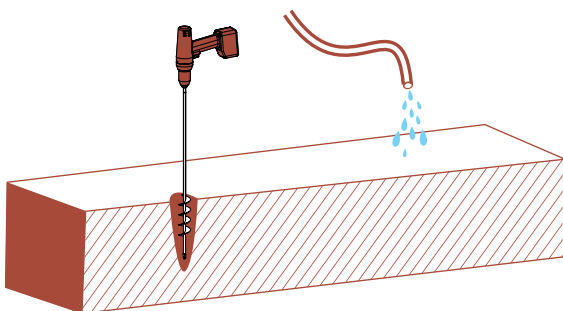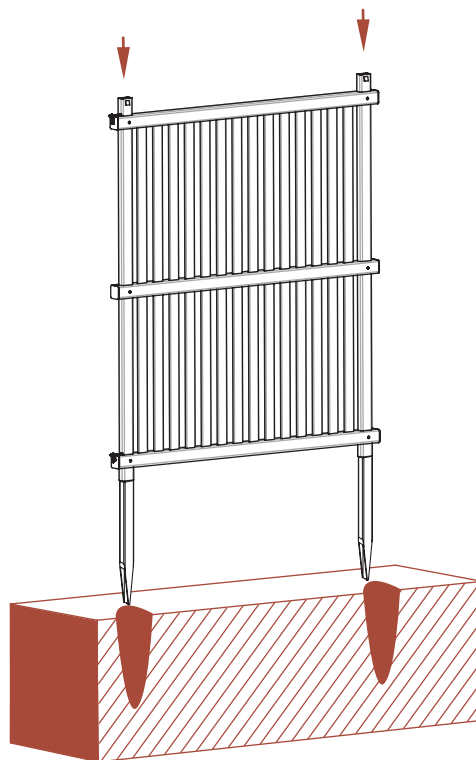
**1****2****3**

**STEP 4.5**

- ▶ Level the screen as necessary, and backfill excavated dirt.

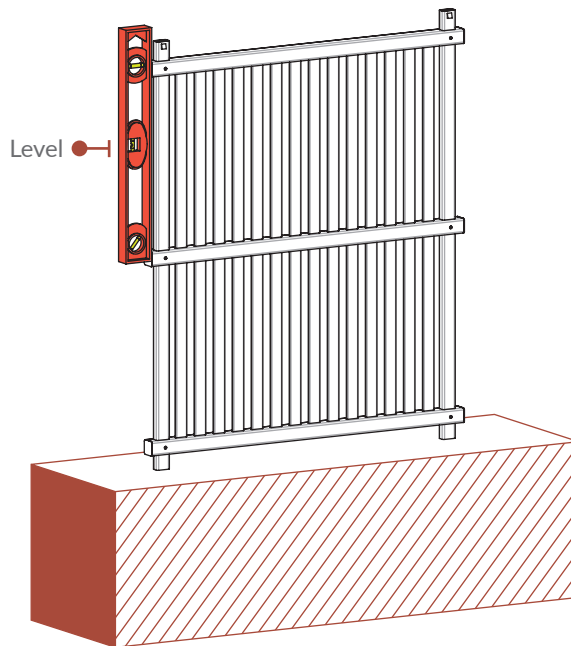
**STEP 4.6**

- ▶ If you purchase additional panels and your ground is really hard, you may need to dig a hole large enough to accommodate one post into hole - *Approximately 8" in diameter and 10" deep.* Backfill and compact the dirt.


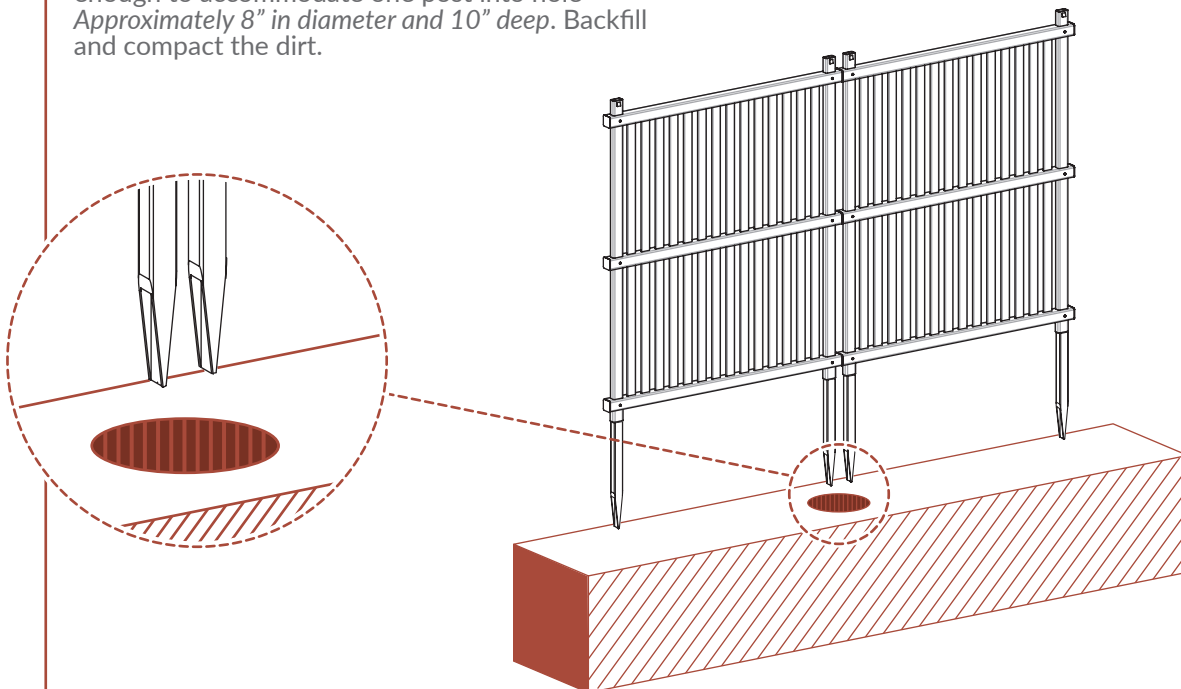


## STEP 5: FASTEN JOINER CLIPS



### STEP 5.1

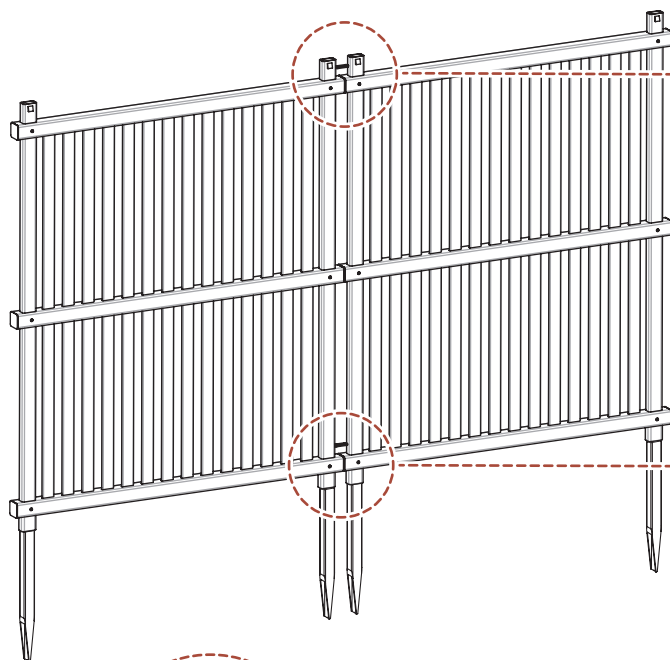


► If you purchase additional panels, fasten screens together with Joiner Clips (**H**) using the  $\frac{3}{4}$ " self-drilling stainless steel screws as illustrated.

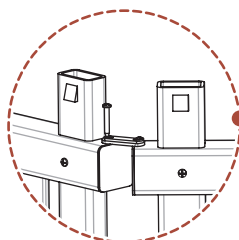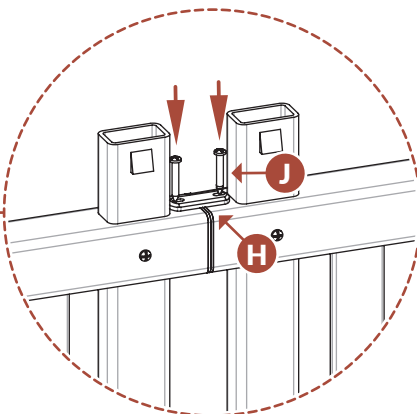

45° degree application

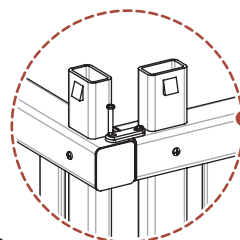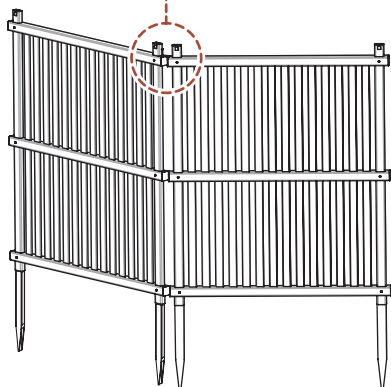


90° degree application

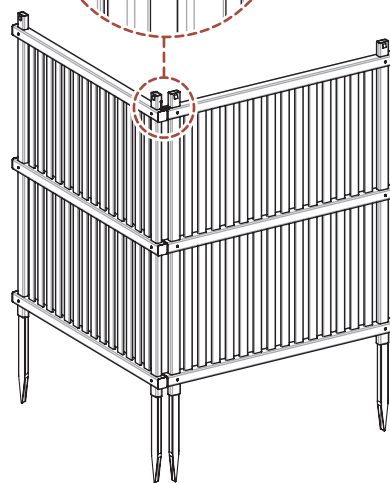

## STEP 6: FASTEN POST CAPS

### STEP 6.1

- ▶ Push the Post Caps (A) down over the posts to lock into place.

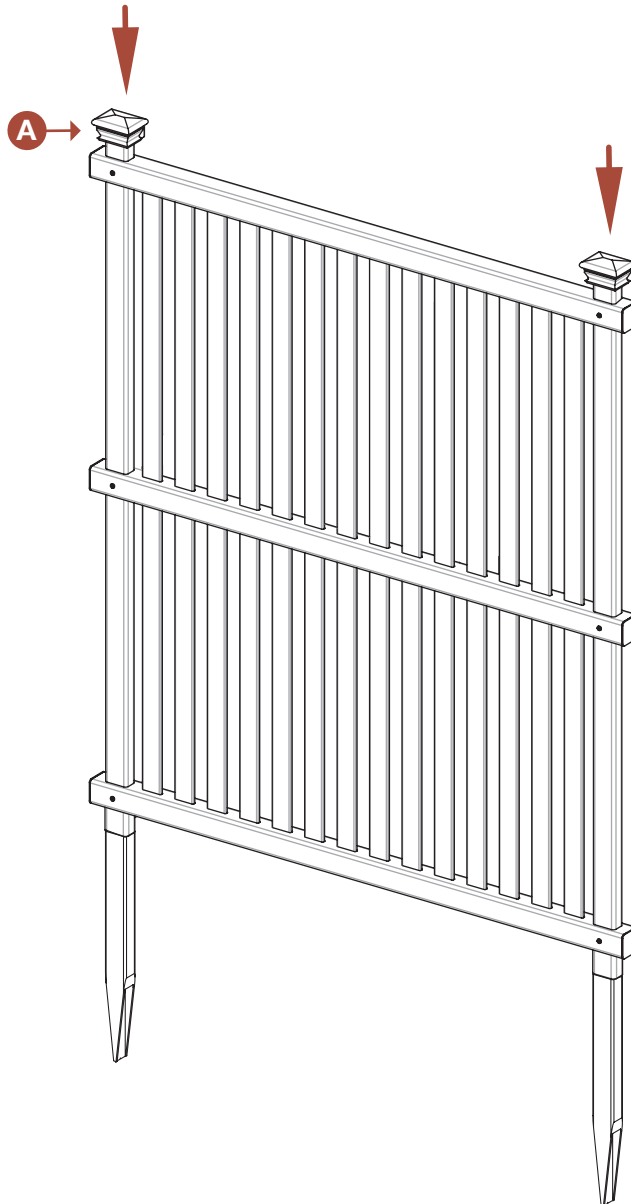

# ENCLO

## HIDE IT WITH STYLE

[www.encloscreens.com](http://www.encloscreens.com)

[support@encloscreens.com](mailto:support@encloscreens.com)



**704-892-5222**  
**877-234-6196**



*6935 Reames Rd. Ste. K.*  
*Charlotte, NC 28216*



**ASSEMBLY**  
**INSTRUCTIONS**  
**ZP19074**