




HIDE IT WITH STYLE

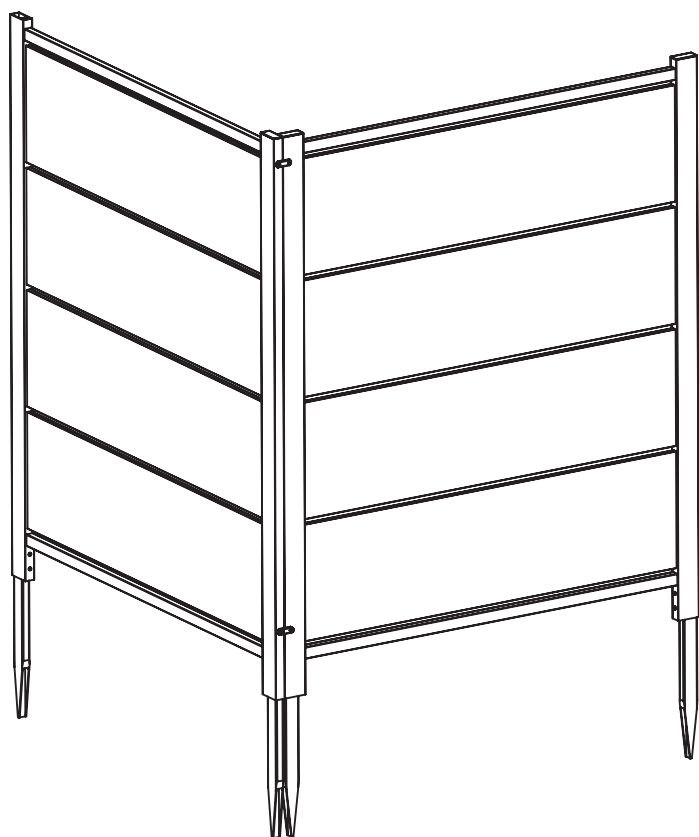

Bessemer Privacy Screen Kit 40" W x 48" H

90 min
Assembly
Approximate time



Assembly Video
Scan the QR Code below



www.encloscreens.com

ASSEMBLY
INSTRUCTIONS
EC18027 (CHARCOAL COLOR)

VER. 022823

GENERAL INFORMATION



IMPORTANT

- Check the inside of the larger pieces in your box for other materials packed inside.
- When assembling components, place on a non-abrasive surface (i.e. shipping box) to avoid scratching.
- We recommend an area approximately 5'x 8' for unobstructed assembling.
- You should not need to use excessive force when assembling components.

MISSING OR DAMAGED PARTS?

VISIT OUR WEBSITE FIRST, SO WE CAN HELP YOU RIGHT AWAY!

Although great care has been taken to ensure proper packaging and handling of this product, occasionally problems occur. If you discover any missing, damaged, or defective parts, please visit our website to order replacement parts. If you experience any further trouble with your product, please contact our customer service department.

 parts.nychbrands.com

 support@encloscreens.com

 **704-892-5222 / 877-234-6196**

Customer service agents are available to take calls weekdays from 9am-5pm EST. If you call outside of business hours, please leave a voicemail.

To help you quickly and accurately, please have reference item number **EC18027** and the specific part name which can be found on page 5. It is helpful if you can provide the batch lot which is a stamped number on the end of the box.


NEED ASSEMBLY HELP?

● If you are having problems with the assembly or installation of this product, we are happy to assist you with the process, **so please give us a call at 704-892-5222 / 877-234-6169**

NEED TO RETURN?


● If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**

PACKAGING DETAIL

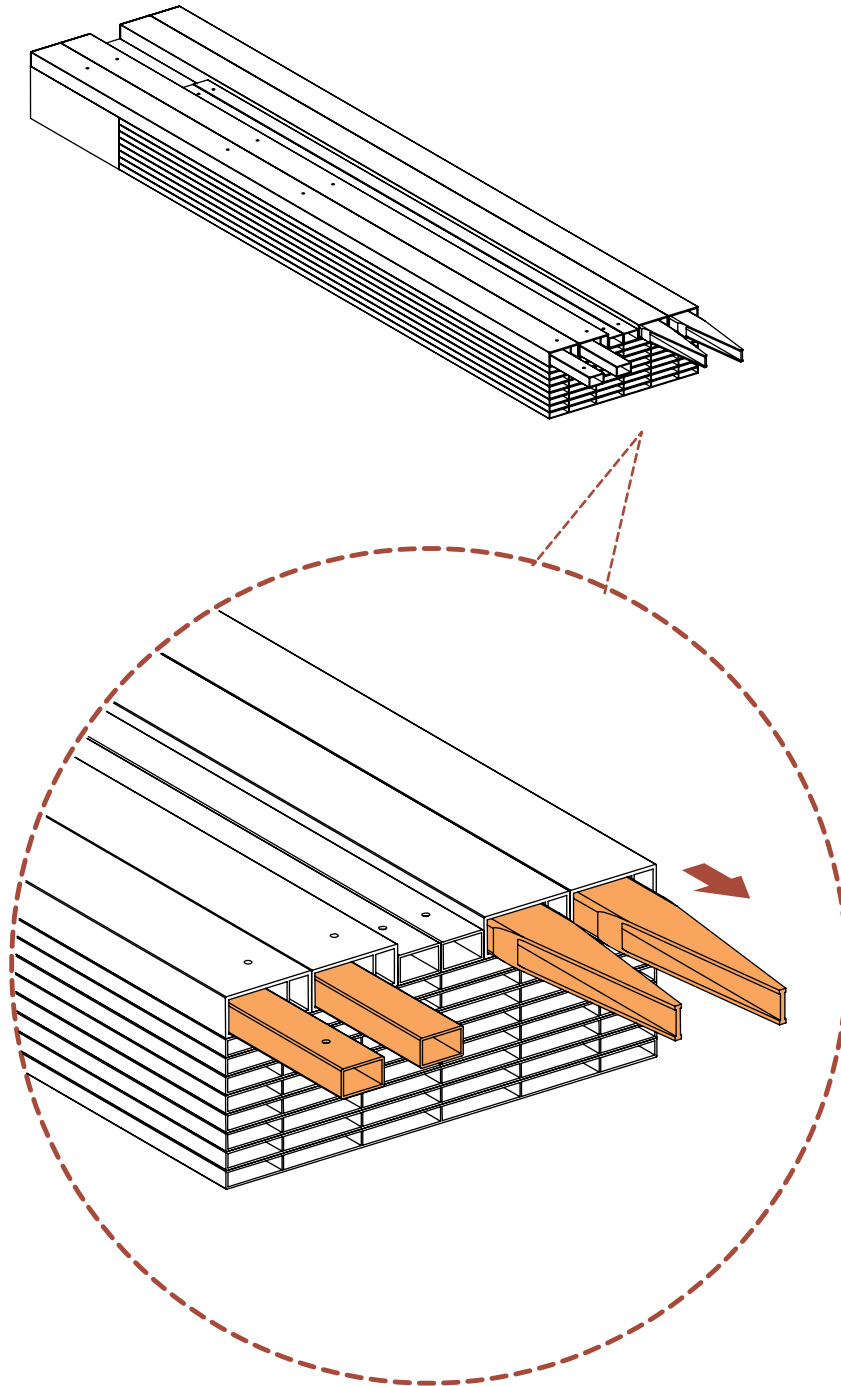

- ▶ Check the inside of the larger pieces in your box for other materials packed inside.

DETAILED **PRODUCT DIMENSIONS & SPECIFICATIONS**

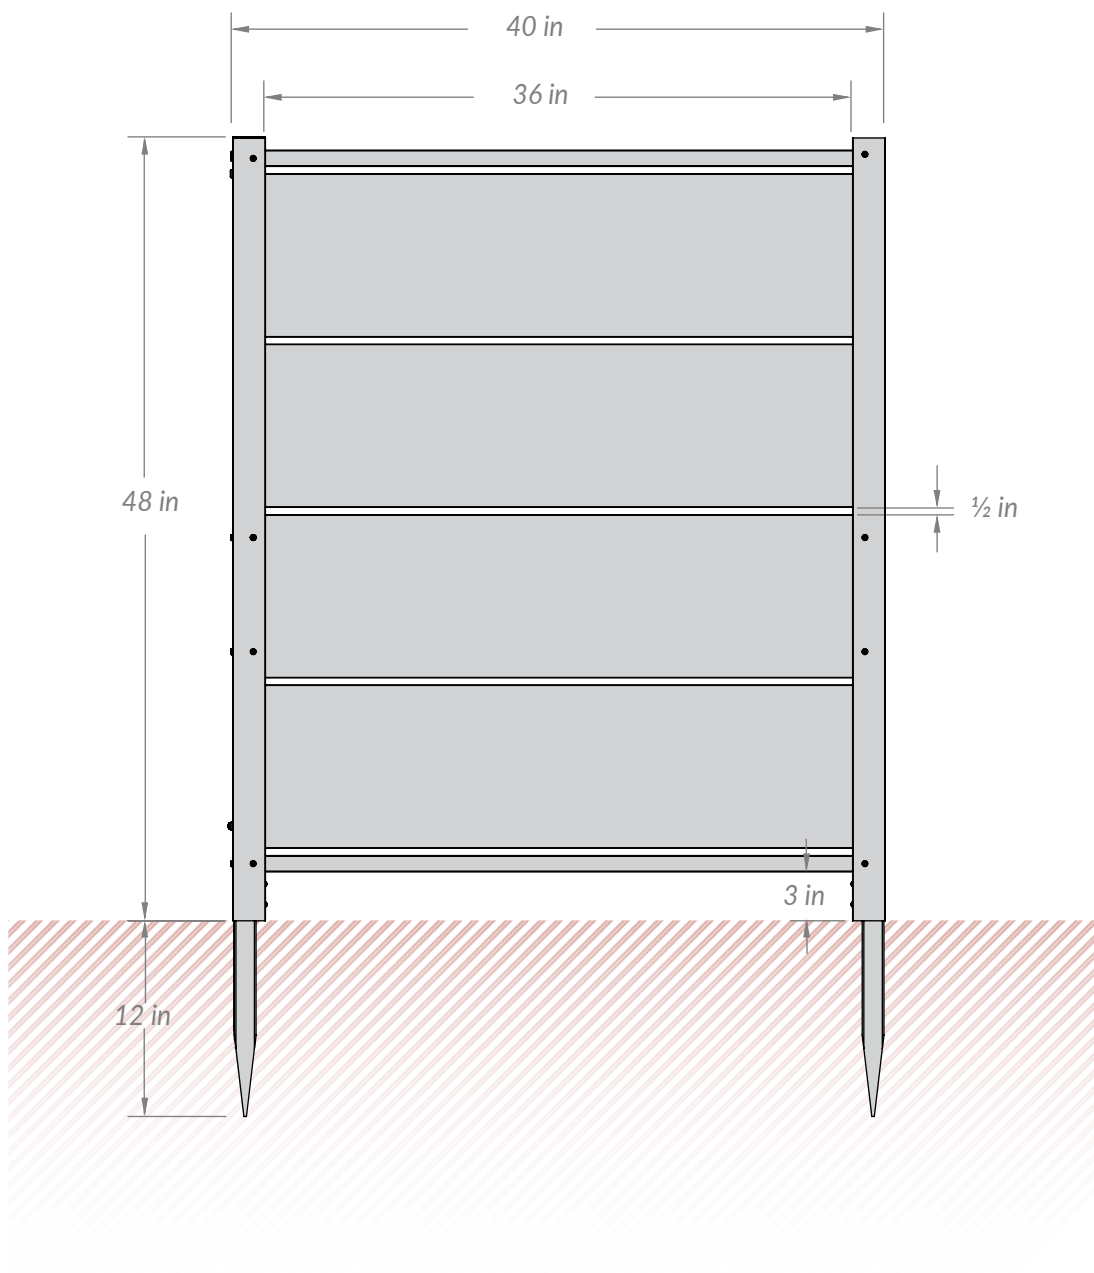

LAY OUT MATERIALS

SCREEN FRAME




A

Left Post (2)
 $\frac{7}{8}$ " x 2" x 48"




B

Right Post (2)
 $\frac{7}{8}$ " x 2" x 48"




C

Post Anchor (4)
 $\frac{3}{4}$ " x 1 $\frac{1}{4}$ " x 15"

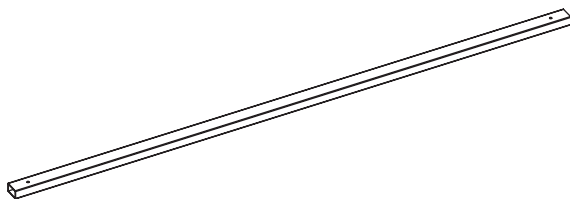

D


Rail (4)
 $\frac{5}{8}$ " x 1" x 39 $\frac{7}{8}$ "

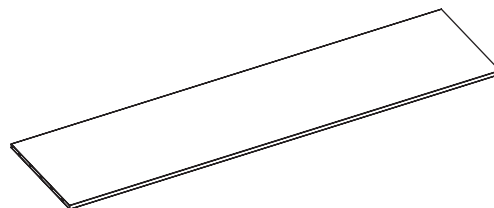

E

Board (8)
 $\frac{3}{8}$ " x 10" x 39 $\frac{7}{8}$ "


SMALL PARTS



F


Joiner Clip (2)

SCREWS



G



$\frac{3}{4}$ " Self-Drilling Stainless Steel Screw (20)



H

1 $\frac{1}{2}$ " Self-Drilling Stainless Steel Screw (8)


ASSEMBLING

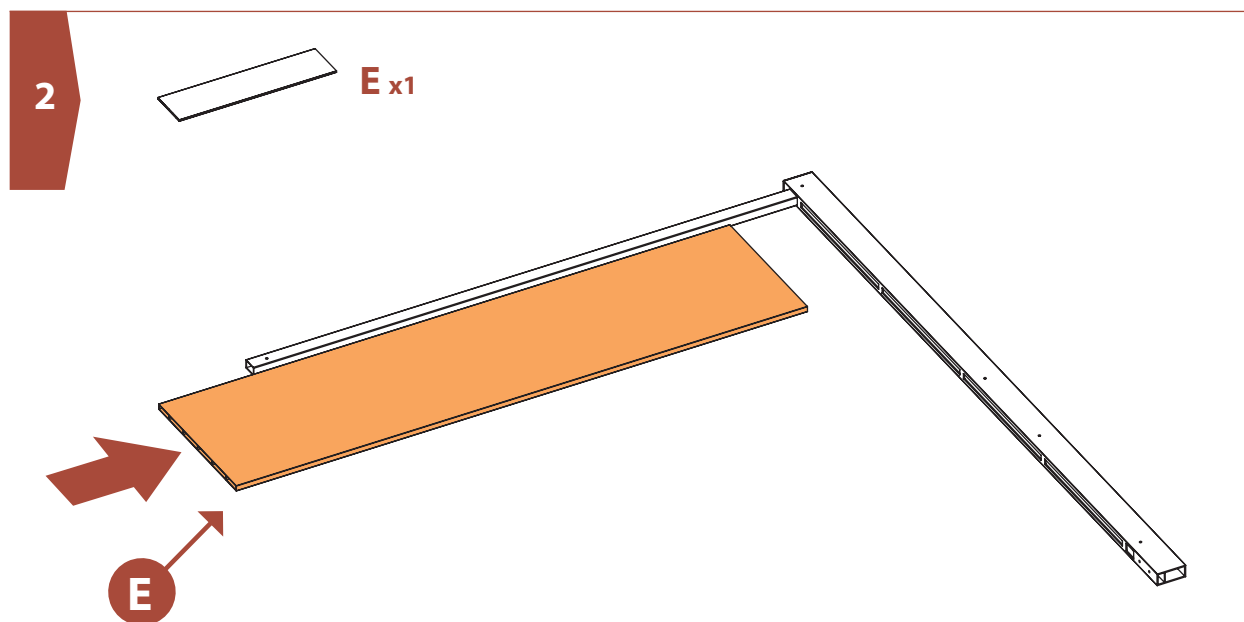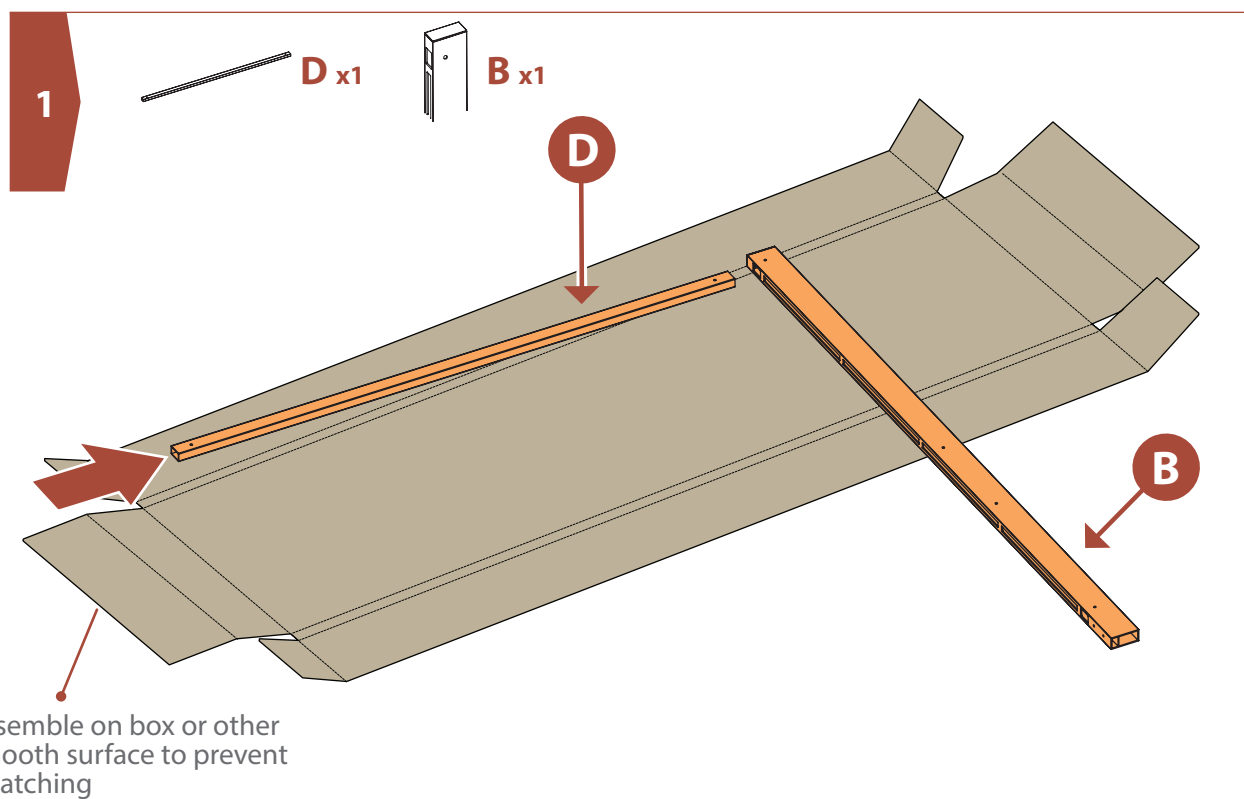

3




E x3

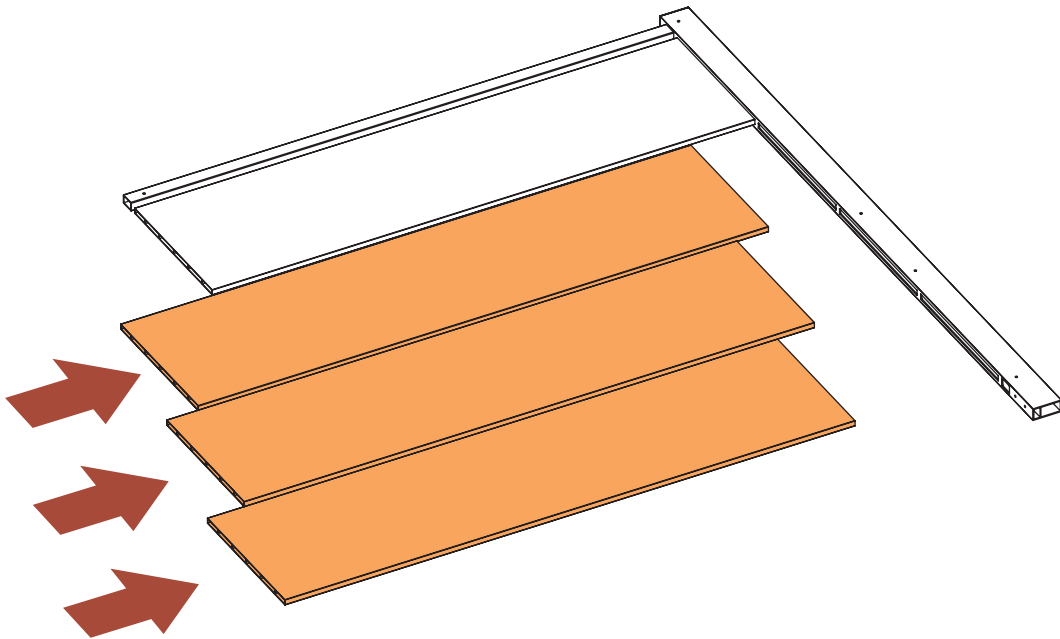

4




D x1

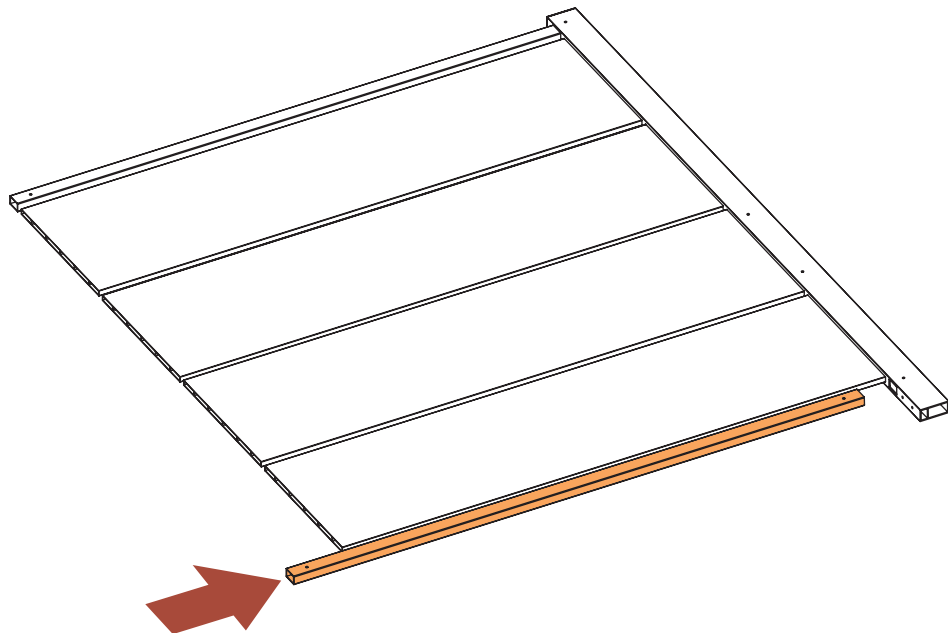

5



A x1

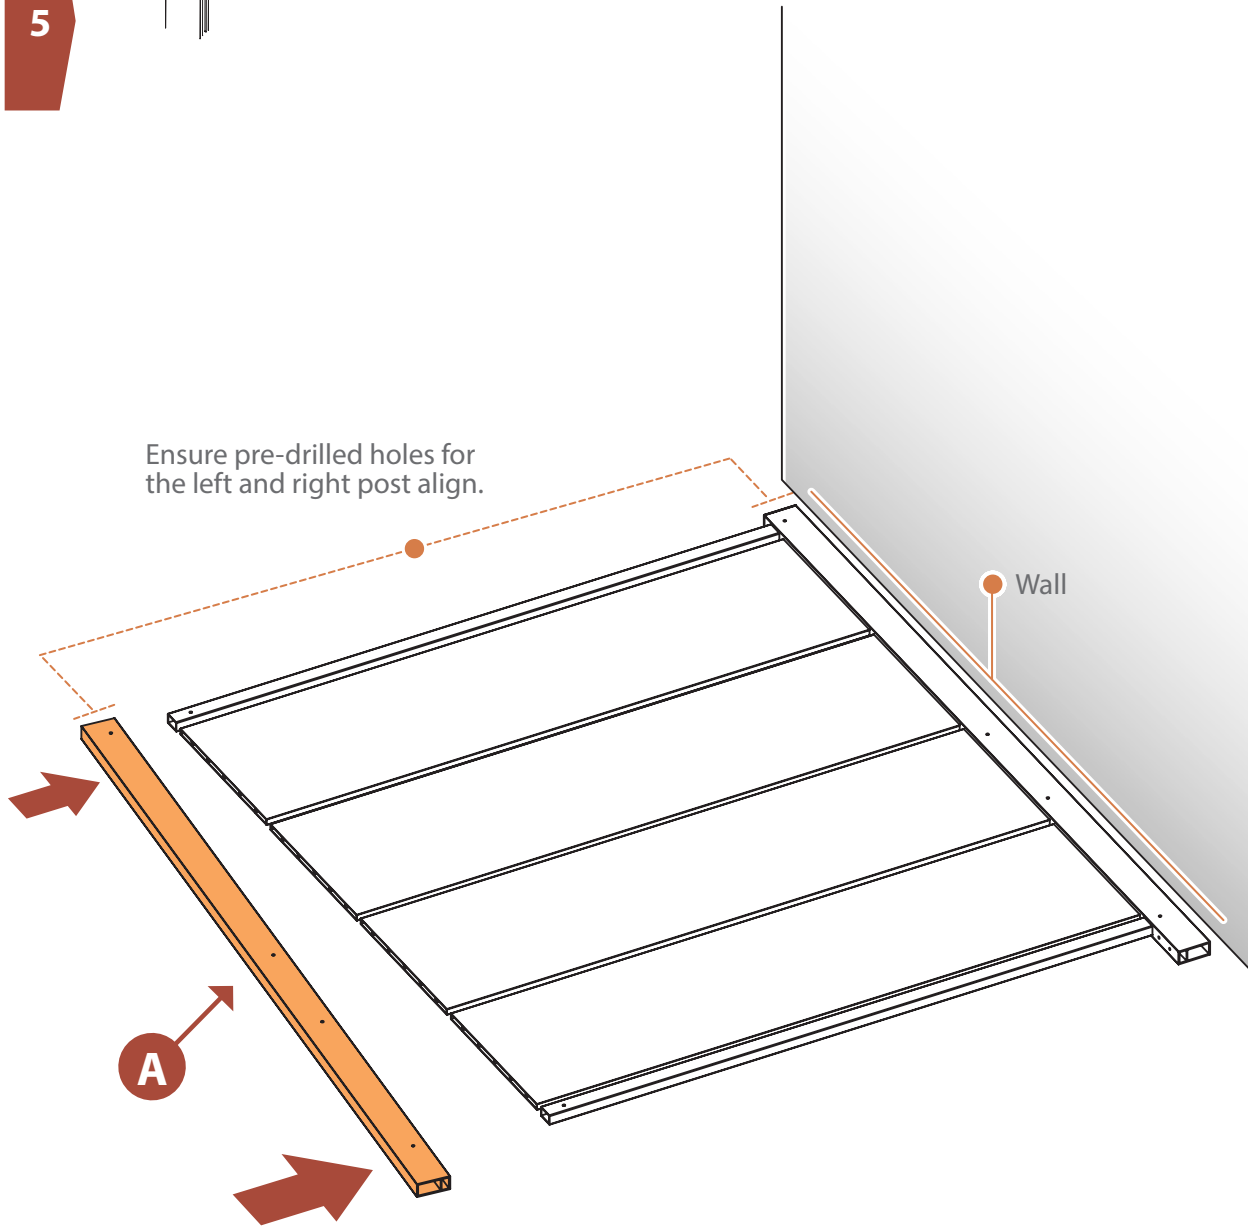

Ensure pre-drilled holes for
the left and right post align.


Wall



For an easier assembly, use a wall as support for the right post.


6

 **G x8**

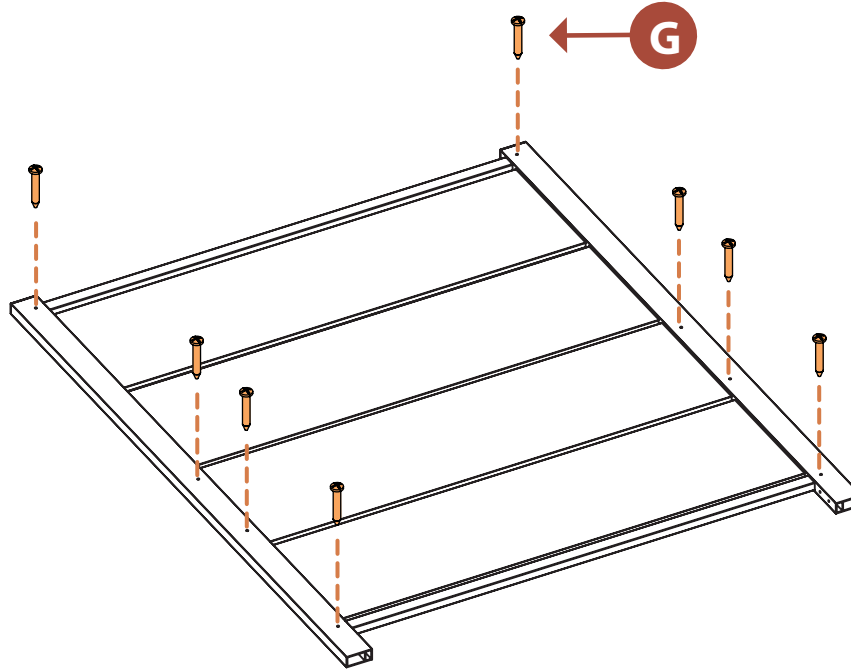


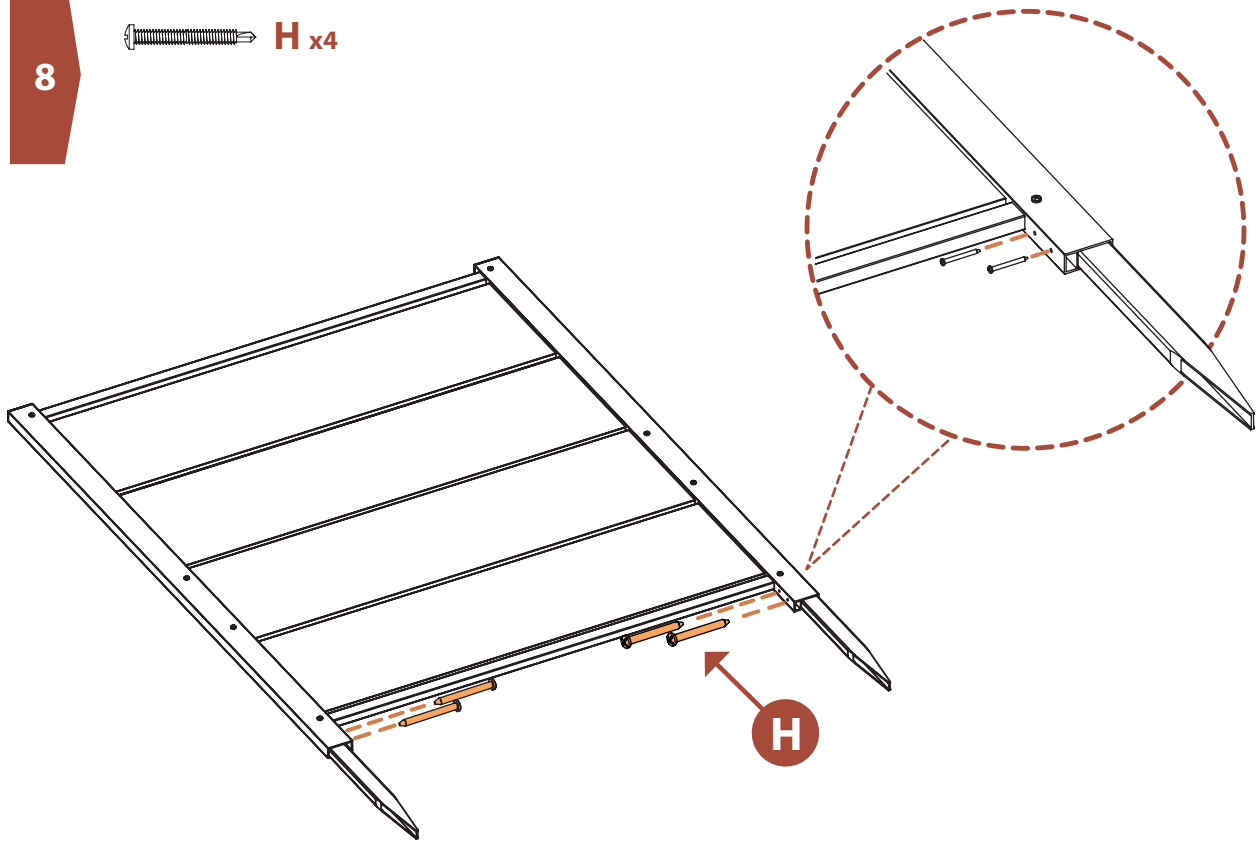
7

 **C x2**

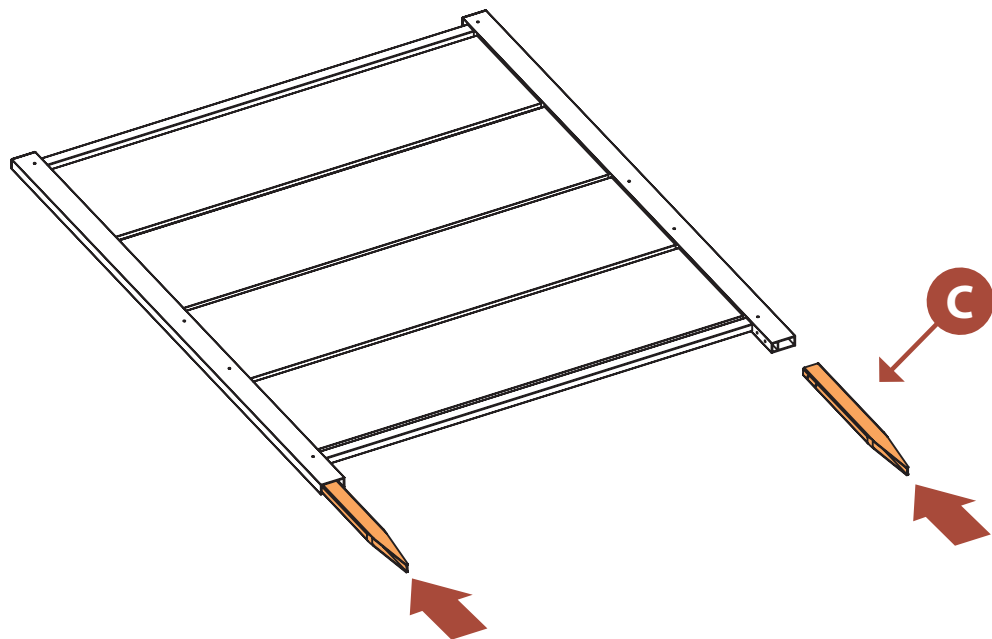

8


 **H x4**



9




Repeat Steps 1-8 to assemble the other panel.

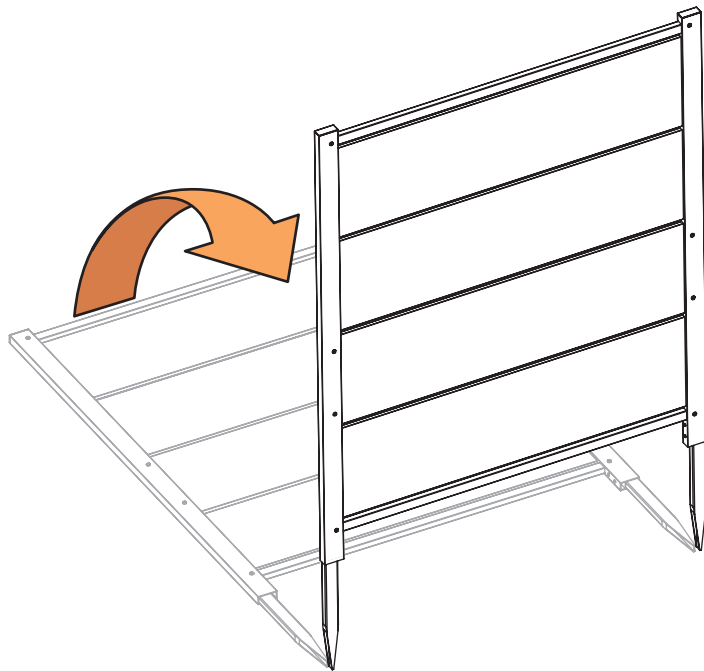


10

! Your screen panels can be rotated to hide the screws from one side.


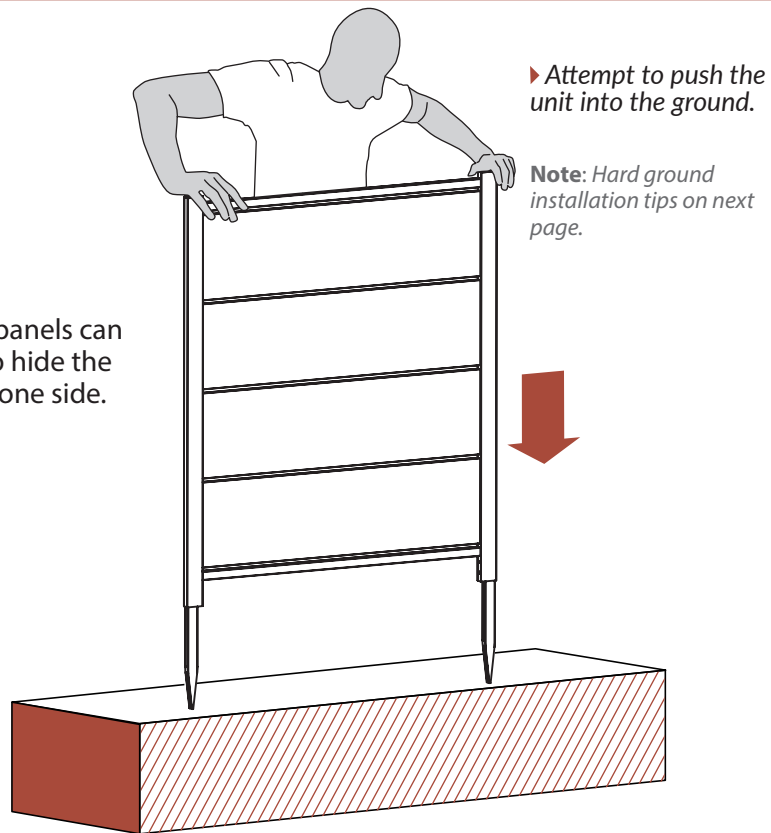


11

▶ All 12" of the post anchors should be inserted into the ground, so that they are no longer visible.

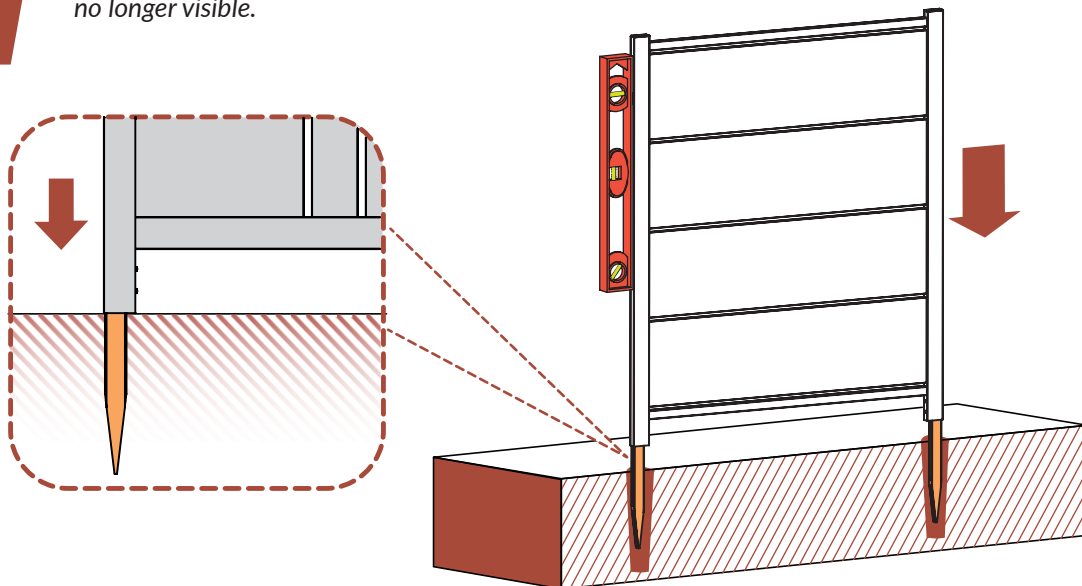


► Hammer and switch posts every few taps.

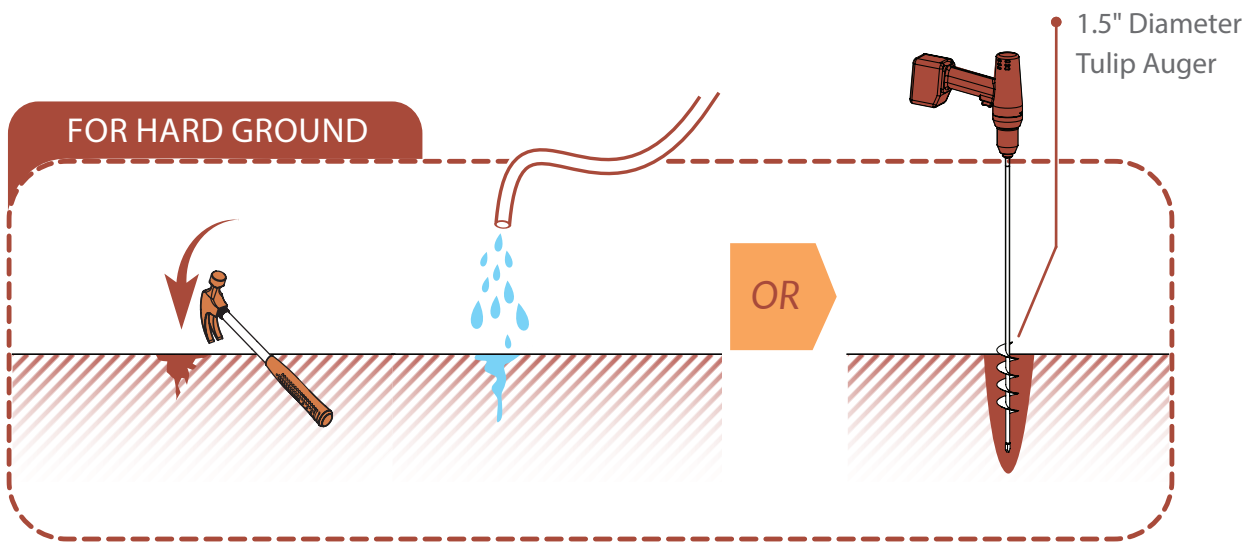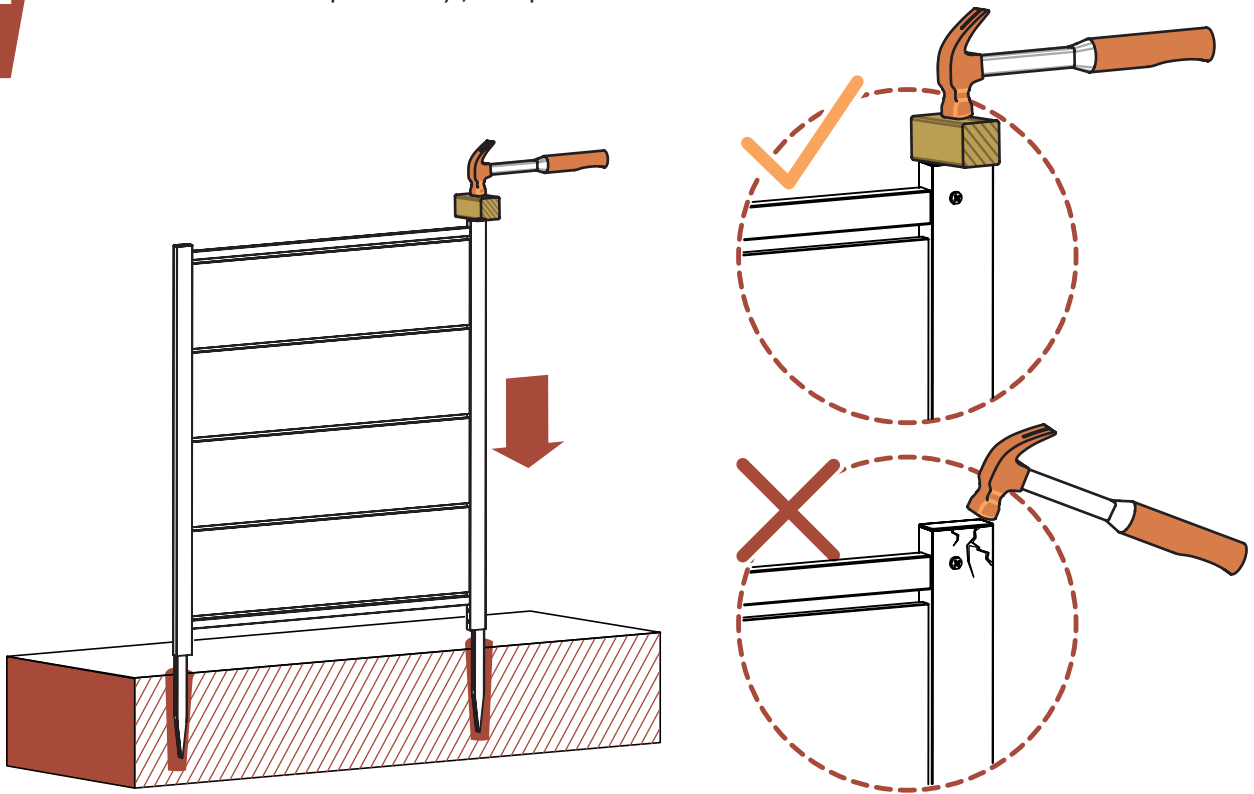


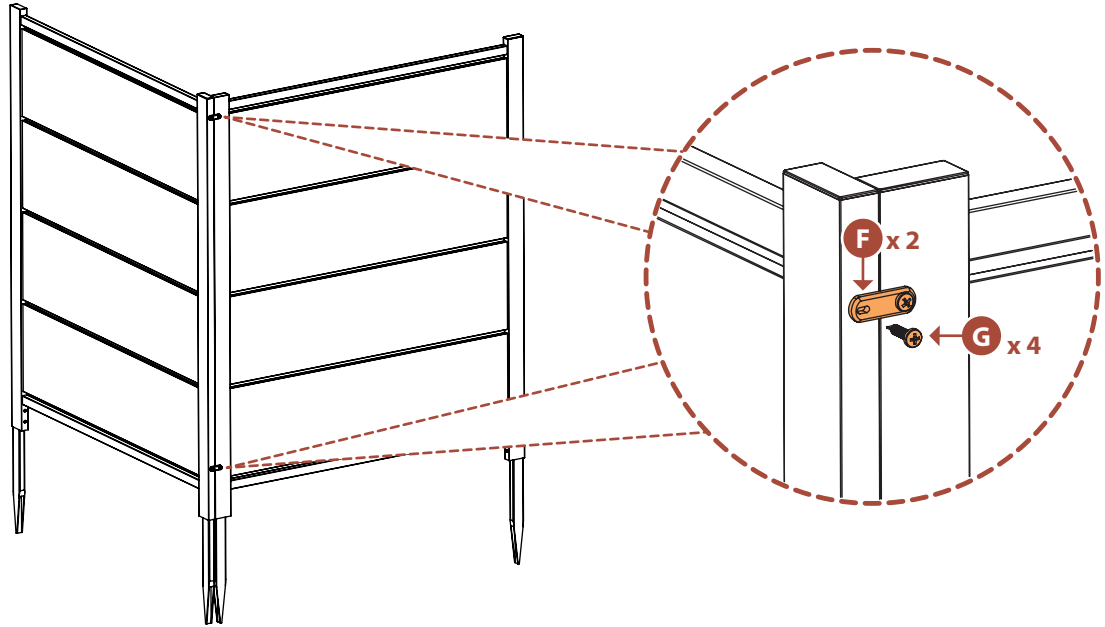
FOR HARDER GROUND

► If your ground is really hard, you may need to dig a hole large enough to accommodate one post from each panel - Approximately 8" in diameter and 12" deep. Backfill and compact the dirt.

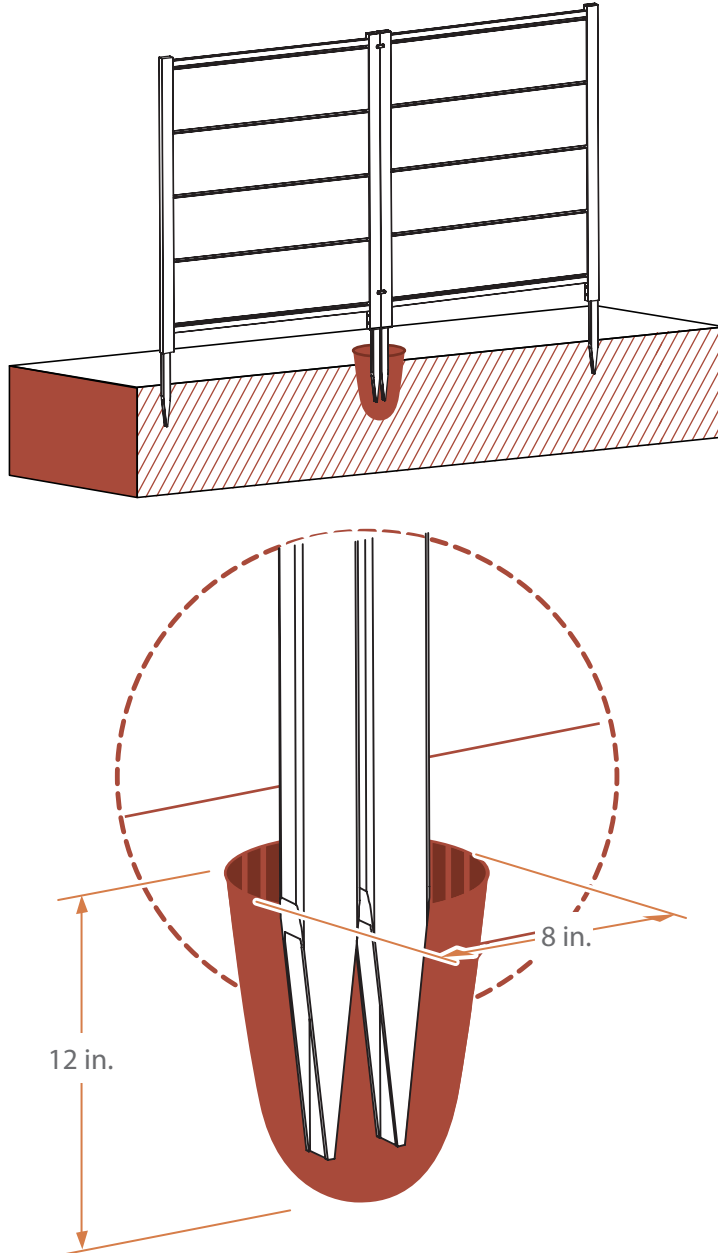

13


 **F** x2  **G** x4



OR

90°

180°

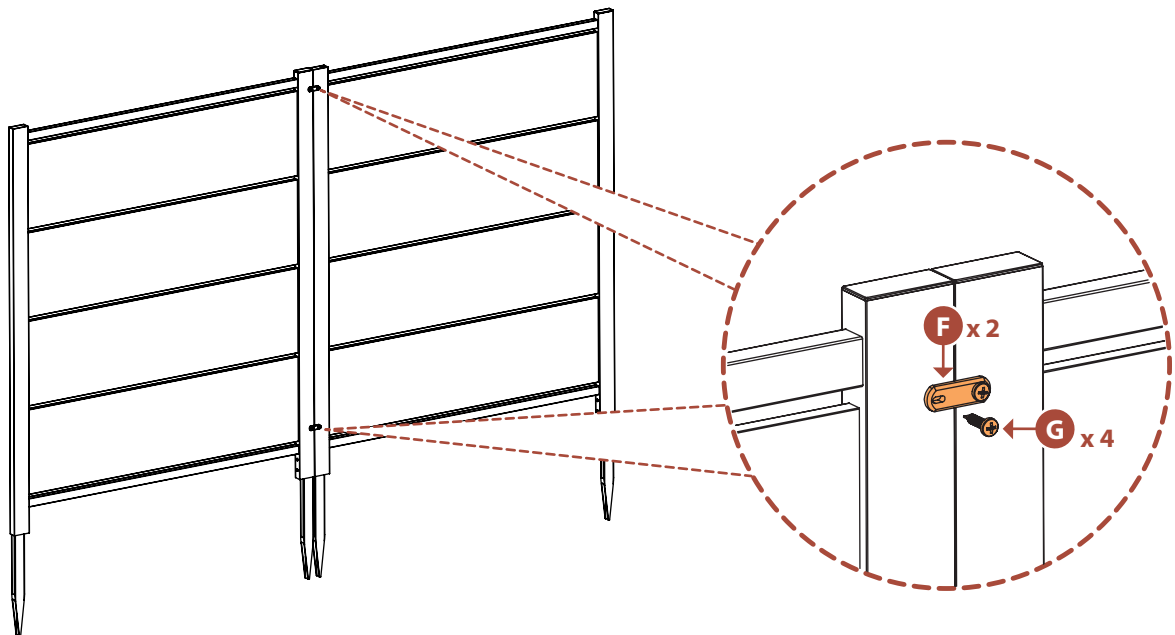



HIDE IT WITH STYLE

www.encloscreens.com

support@encloscreens.com



704-892-5222
877-234-6196



6935 Reames Rd. Ste. K.
Charlotte, NC 28216



ASSEMBLY
INSTRUCTIONS
EC18027 (CHARCOAL COLOR)

VER. 022823