


ENCLO

HIDE IT WITH STYLE

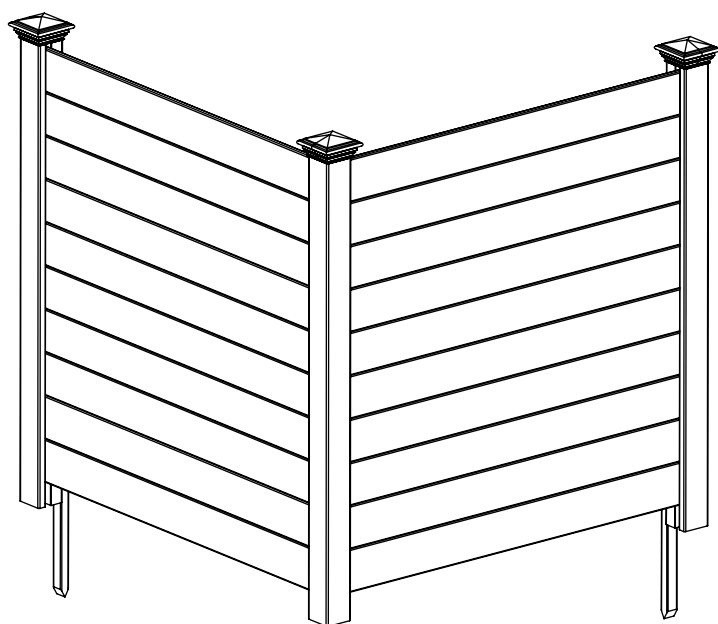

Wood Premium Privacy Screen

2-Panel Kit

90 min
Assembly
Approximate time



Assembly Video
Scan the QR Code below



ASSEMBLY
INSTRUCTIONS
EC18029

www.encloscreens.com

VER. 050523

GENERAL INFORMATION



IMPORTANT

- Check the inside of the larger pieces in your box for other materials packed inside.
- When assembling components, place on a non-abrasive surface (i.e. shipping box) to avoid scratching.
- We recommend an area approximately 5'x 8' for unobstructed assembling.
- You should not need to use excessive force when assembling components.

MISSING OR DAMAGED PARTS?

VISIT OUR WEBSITE FIRST, SO WE CAN HELP YOU RIGHT AWAY!

Although great care has been taken to ensure proper packaging and handling of this product, occasionally problems occur. If you discover any missing, damaged, or defective parts, please visit our website to order replacement parts. If you experience any further trouble with your product, please contact our customer service department.

 parts.nychbrands.com

 support@encloscreens.com

 **704-892-5222 / 877-234-6196**

Customer service agents are available to take calls weekdays from 9am-5pm EST. If you call outside of business hours, please leave a voicemail.

To help you quickly and accurately, please have reference item number **EC18029** and the specific part name which can be found on page 5. It is helpful if you can provide the batch lot which is a stamped number on the end of the box.

NEED ASSEMBLY HELP?


● If you are having problems with the assembly or installation of this product, we are happy to assist you with the process, **so please give us a call at 704-892-5222 / 877-234-6169**

NEED TO RETURN?


● If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**

PREPARATION


► Tools required for a smoother installation experience.

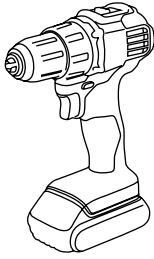

► **Drill**

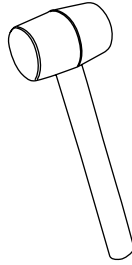


► **Mallet**

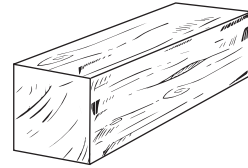


► **Wood Block***

**- May be needed depending on soil condition*

OPTIONAL

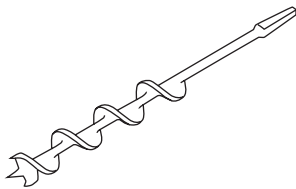


► **1½" Tulip Auger***

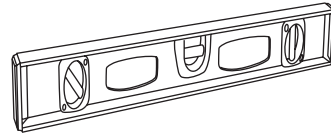


► **Level**

► We recommend
2 people for a
smoother
assembly.

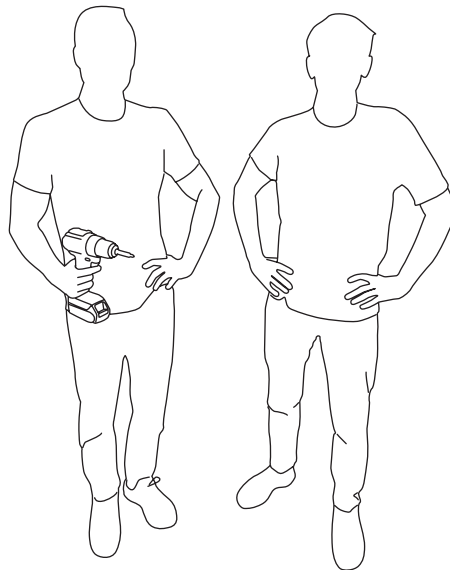


DETAILED **PRODUCT DIMENSIONS & SPECIFICATIONS**

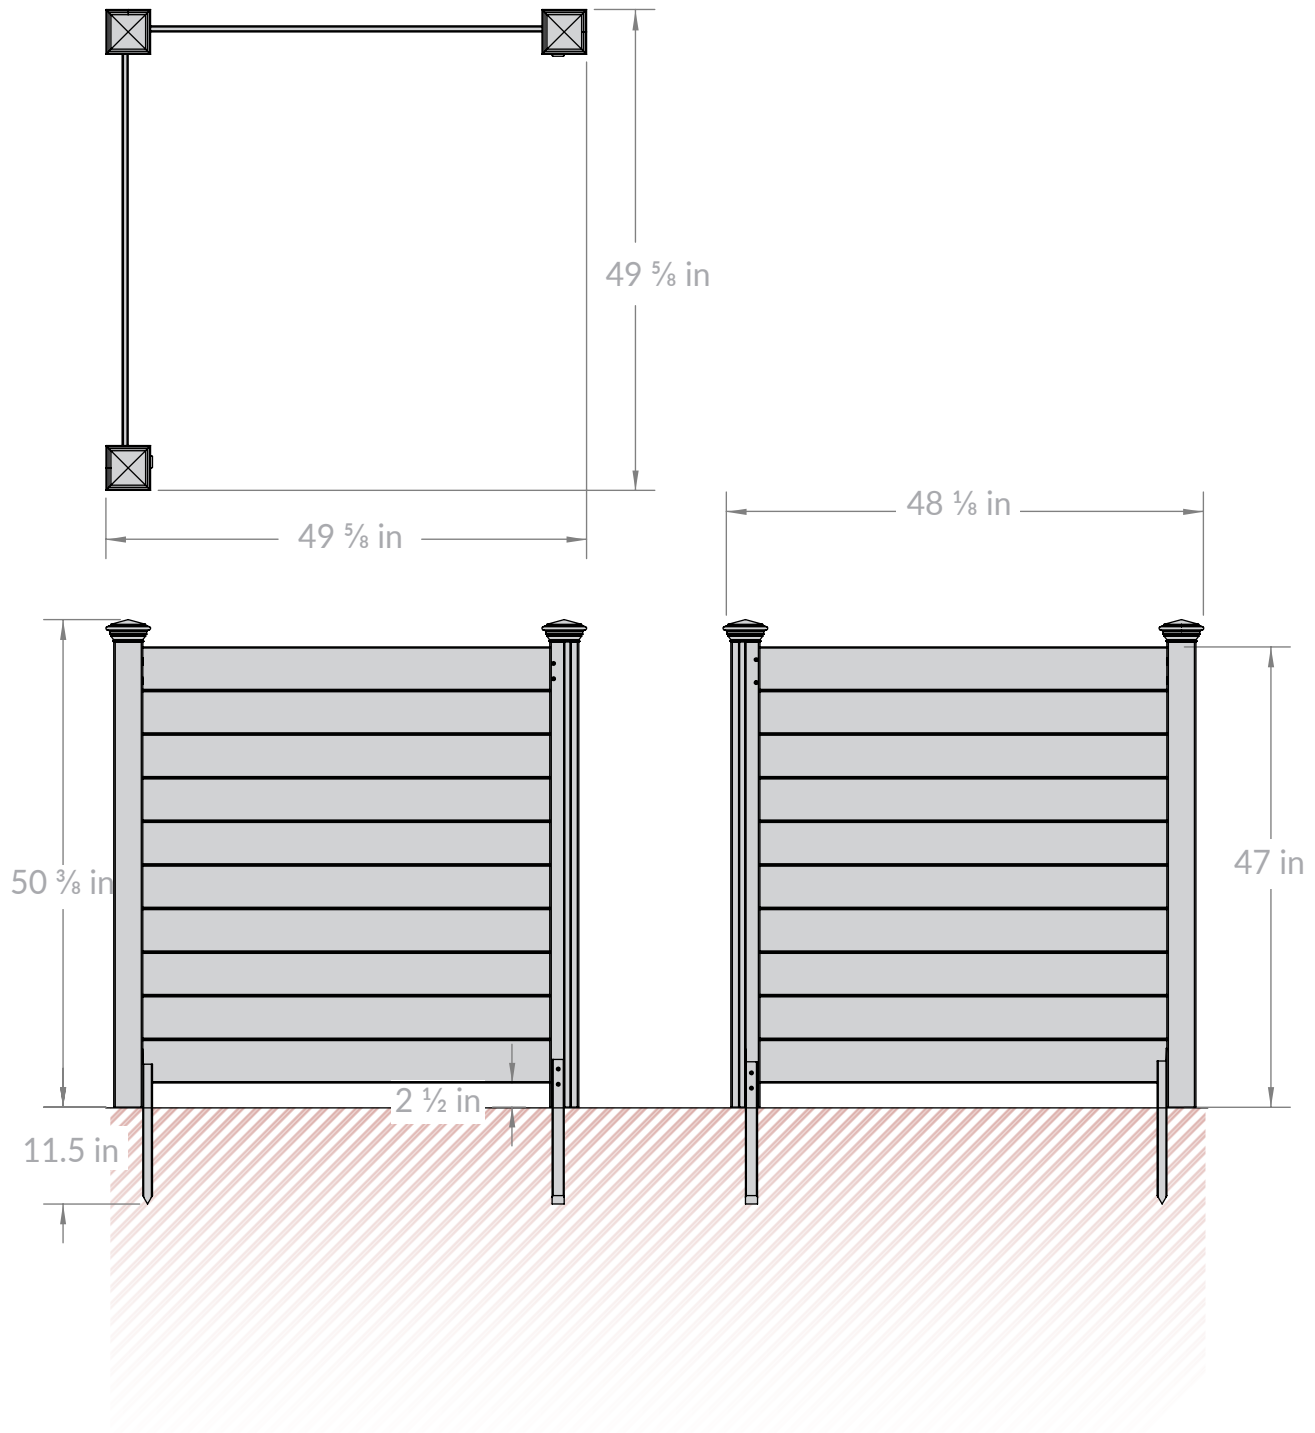

LAY OUT MATERIALS

SCREEN FRAME




A

Post (3)
3" x 3" x 48"



B

Board (20)
 $\frac{5}{8}$ " x 4 $\frac{1}{2}$ " x 44"



C

Stake (2)
1 $\frac{1}{4}$ " x 1" x 16"


The wooden stakes are pressure treated to be more durable when installed in the ground.

ACCENT PIECES



D


Dowel (6)

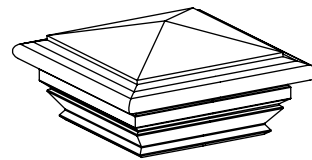

E

Post Cap (3)

SCREWS



F


#10 2 $\frac{3}{8}$ " Wood Screw (4)
Bag (F)



G

#8 2 $\frac{1}{2}$ " Wood Screw (16)
Bag (G)

SPACER

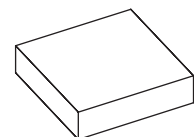

H

Wood Spacer (2)

ASSEMBLING


1



A x1



H x1

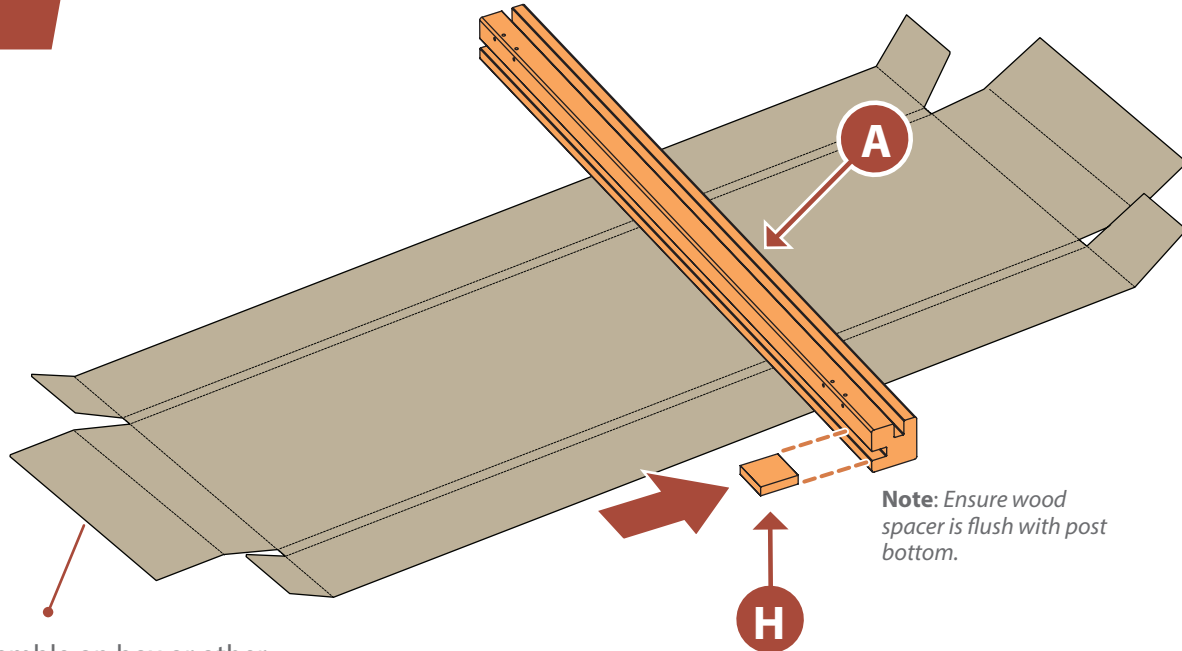


Assemble on box or other smooth surface.

Note: Ensure wood spacer is flush with post bottom.

2



B x1


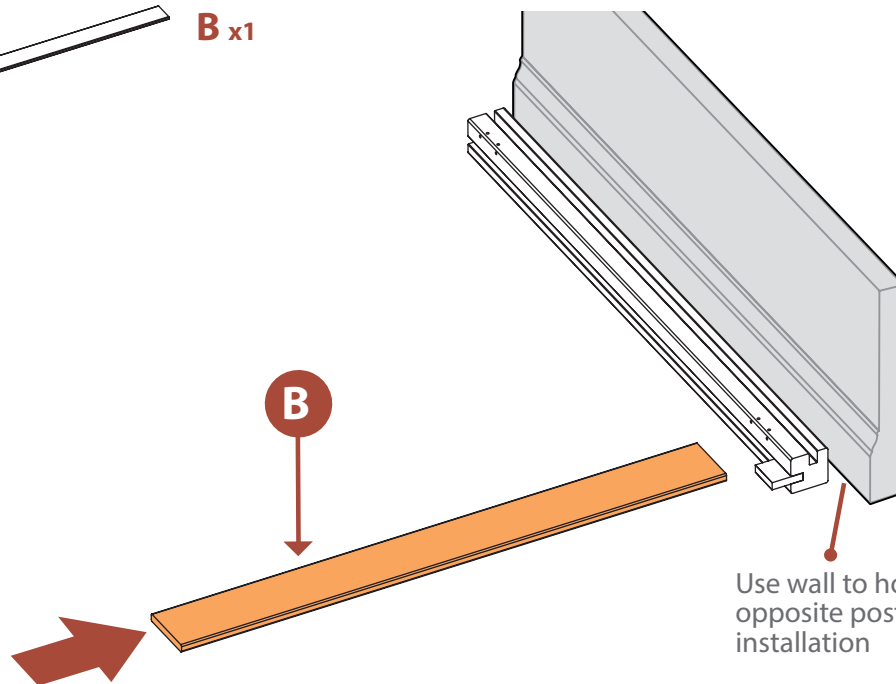


Use wall to hold slats in opposite post during installation

3




A x1

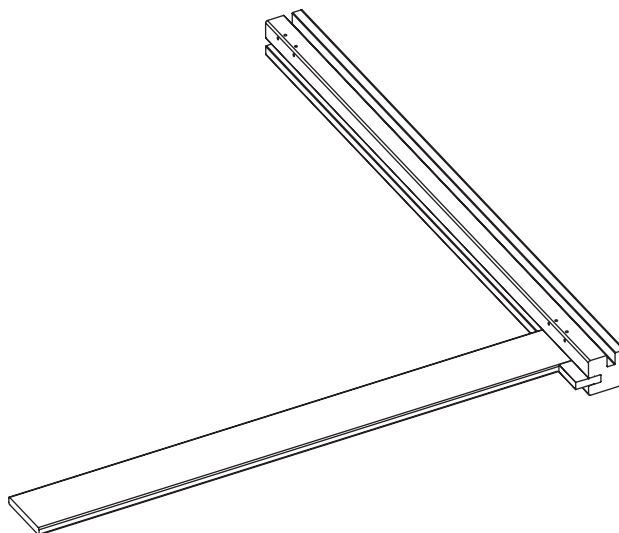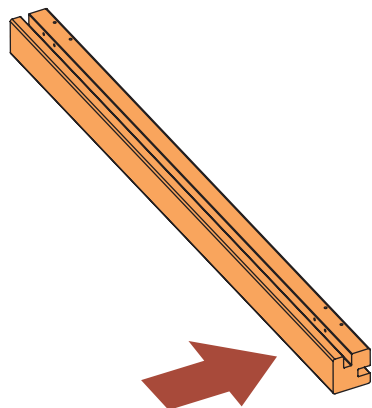


4




H x1

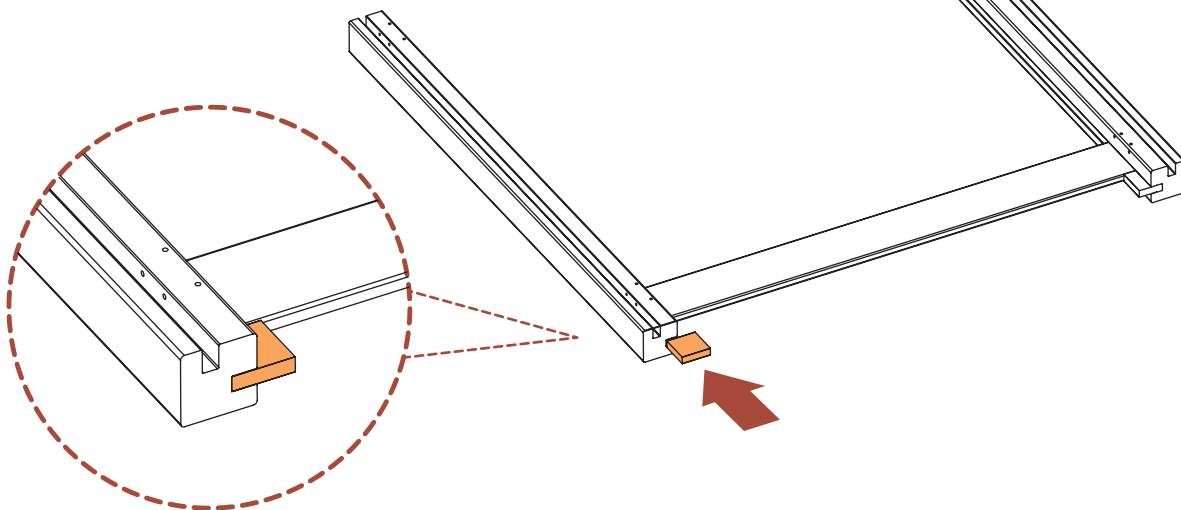

5


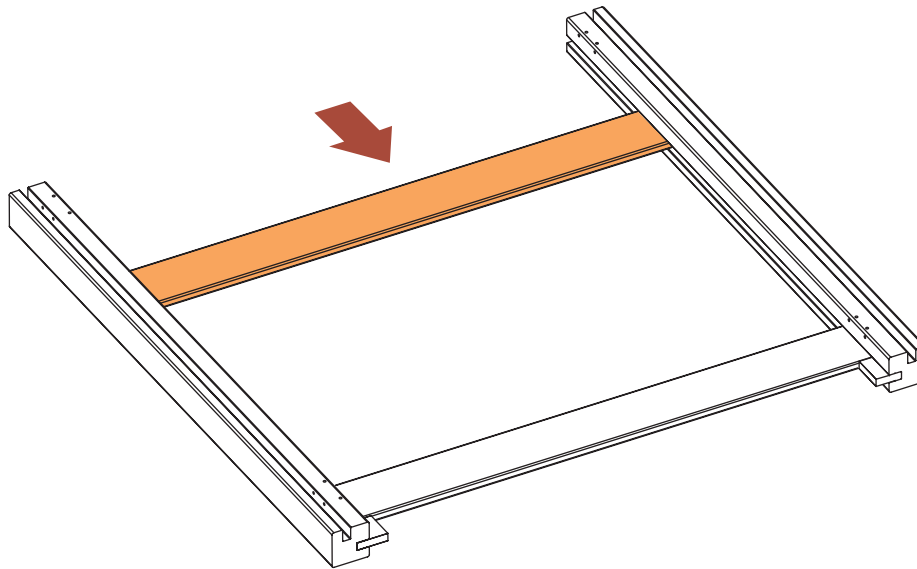



6

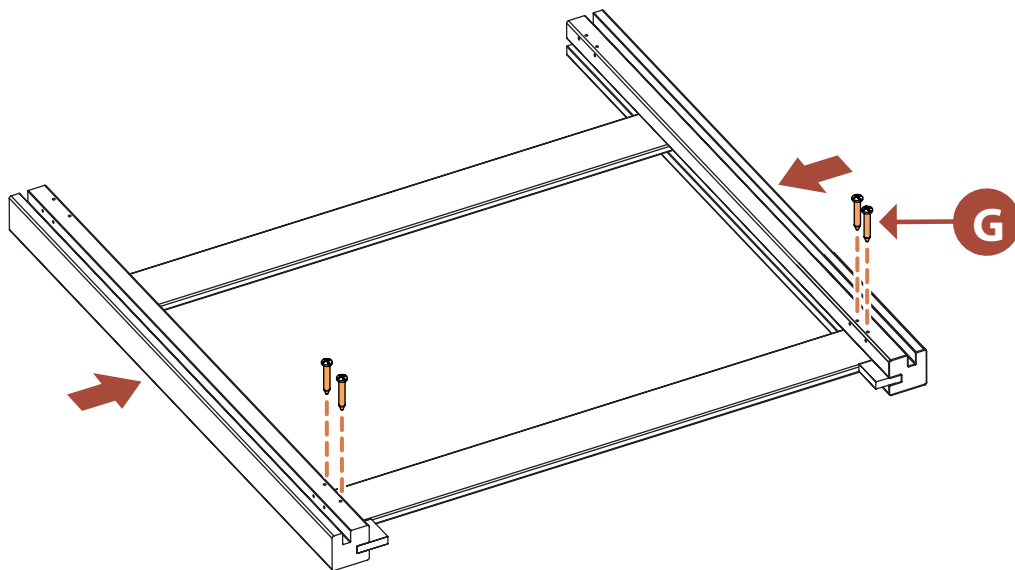

7

 **B x9**

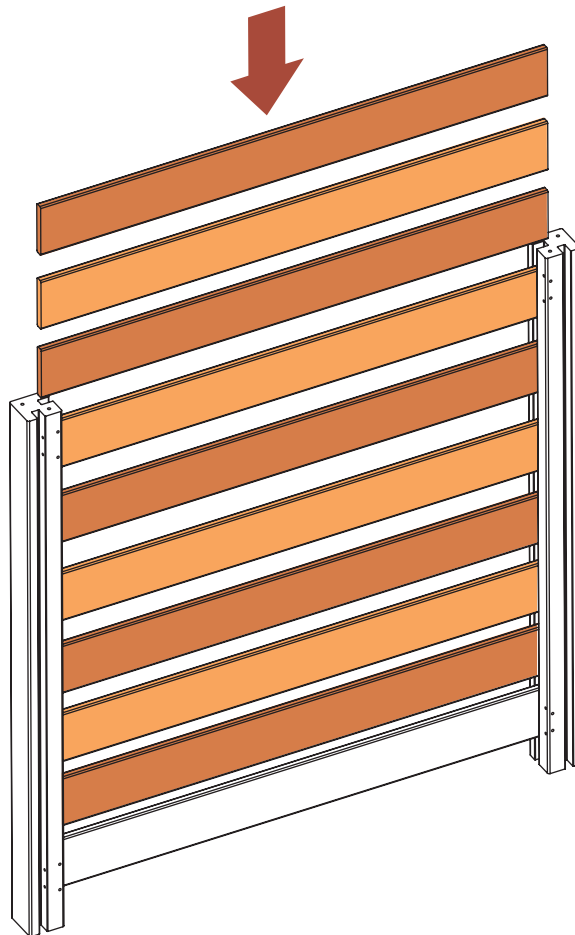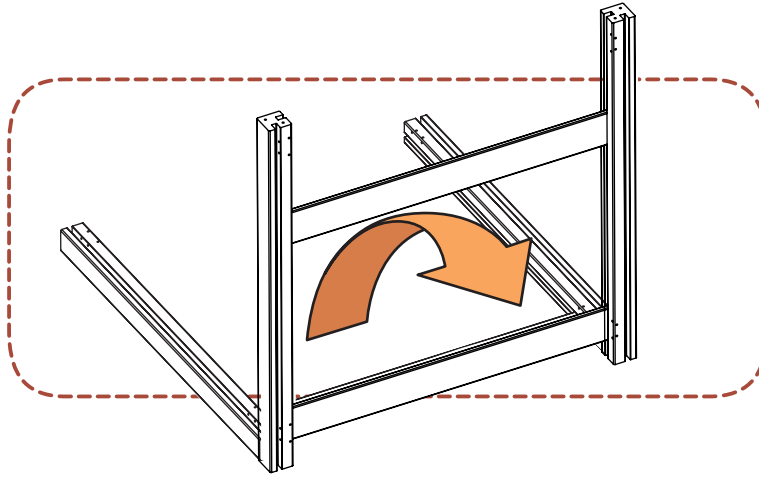


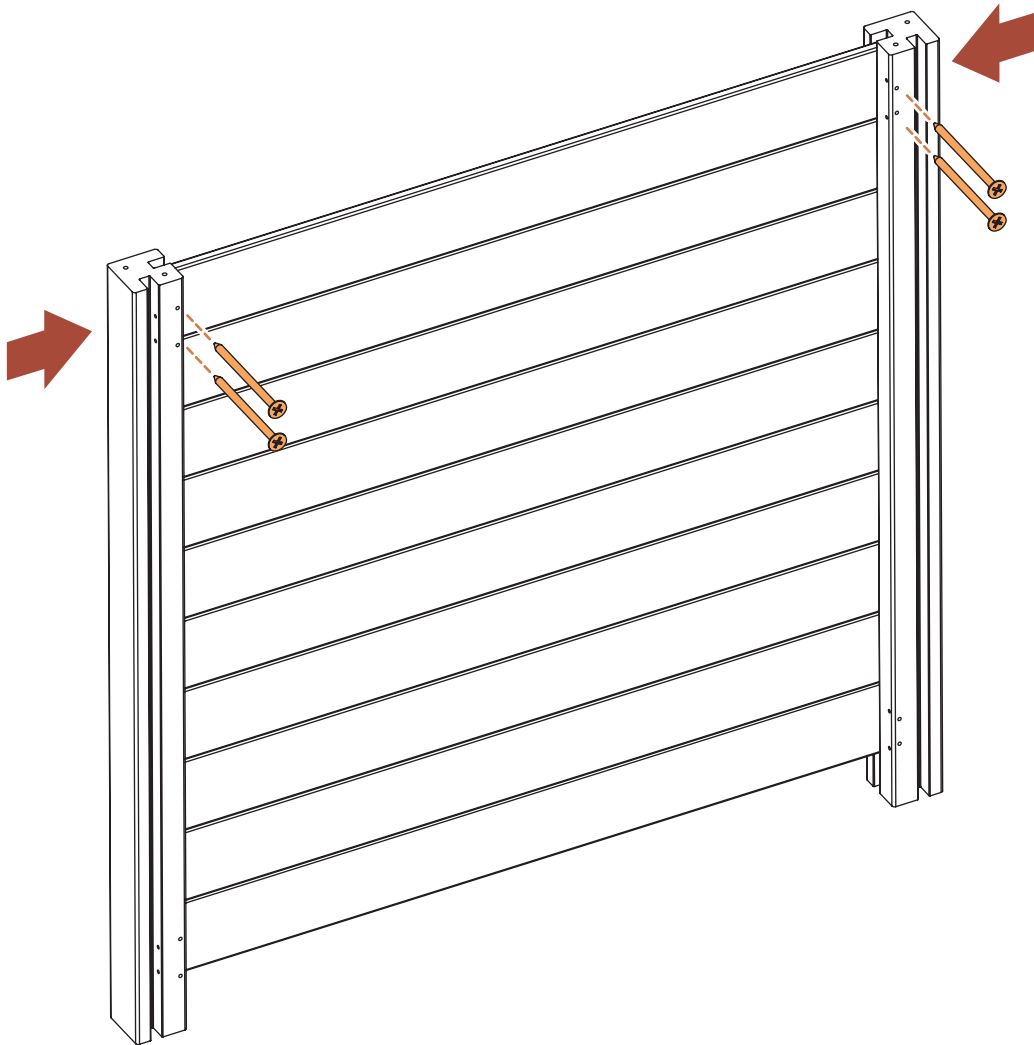

9




H x1

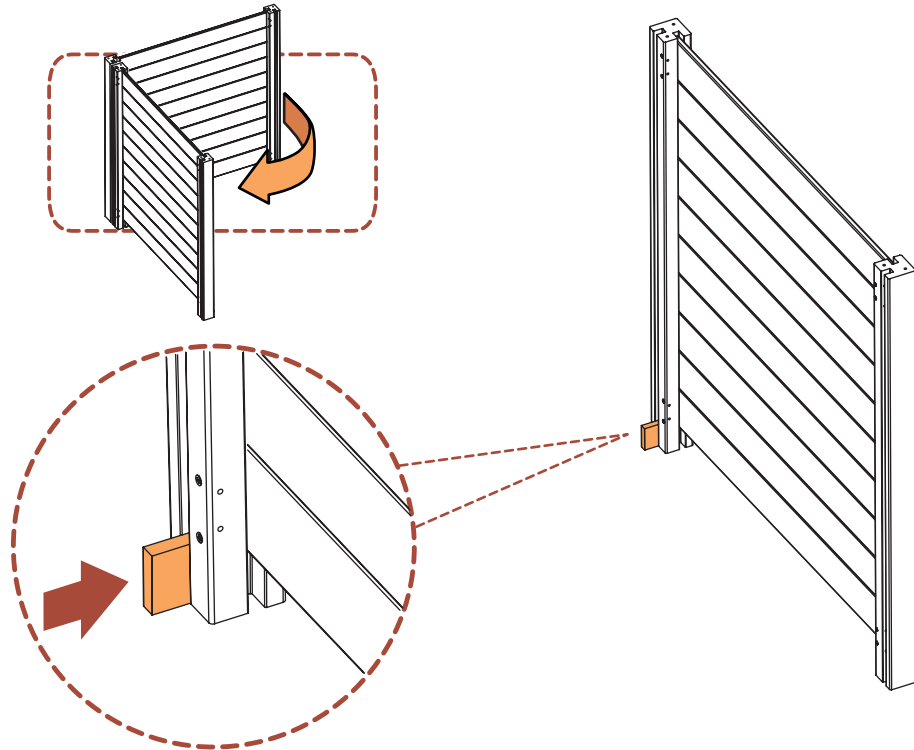

10




B x1

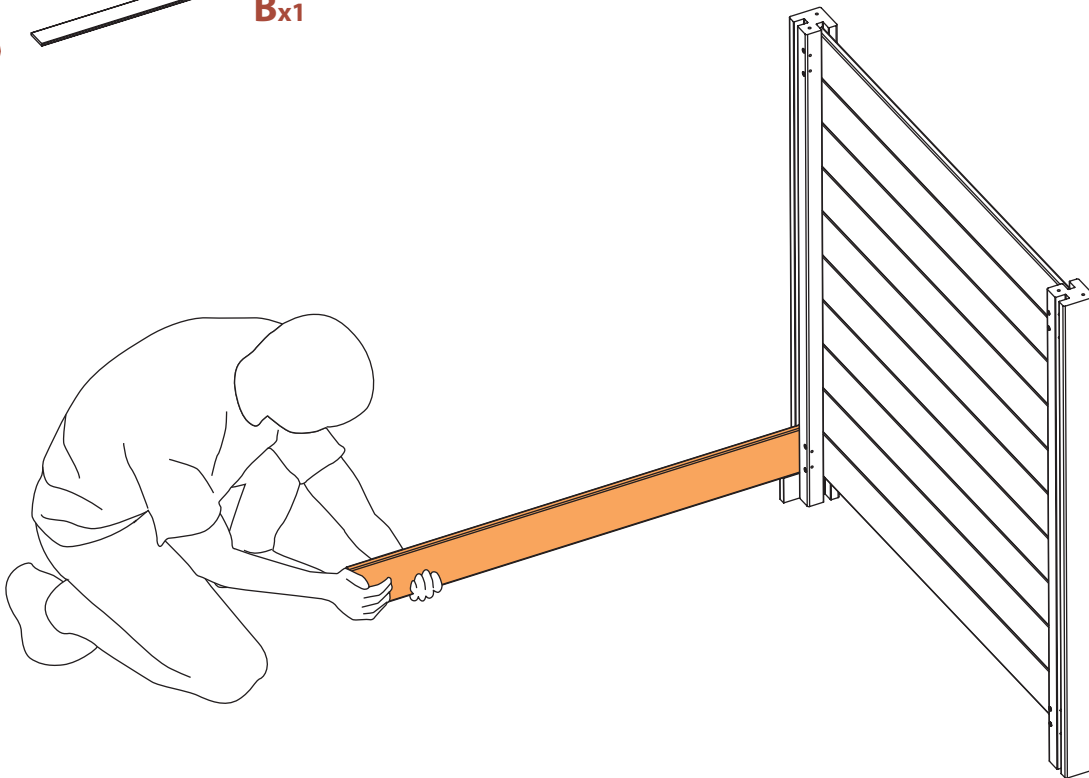


11



A x1




G x4

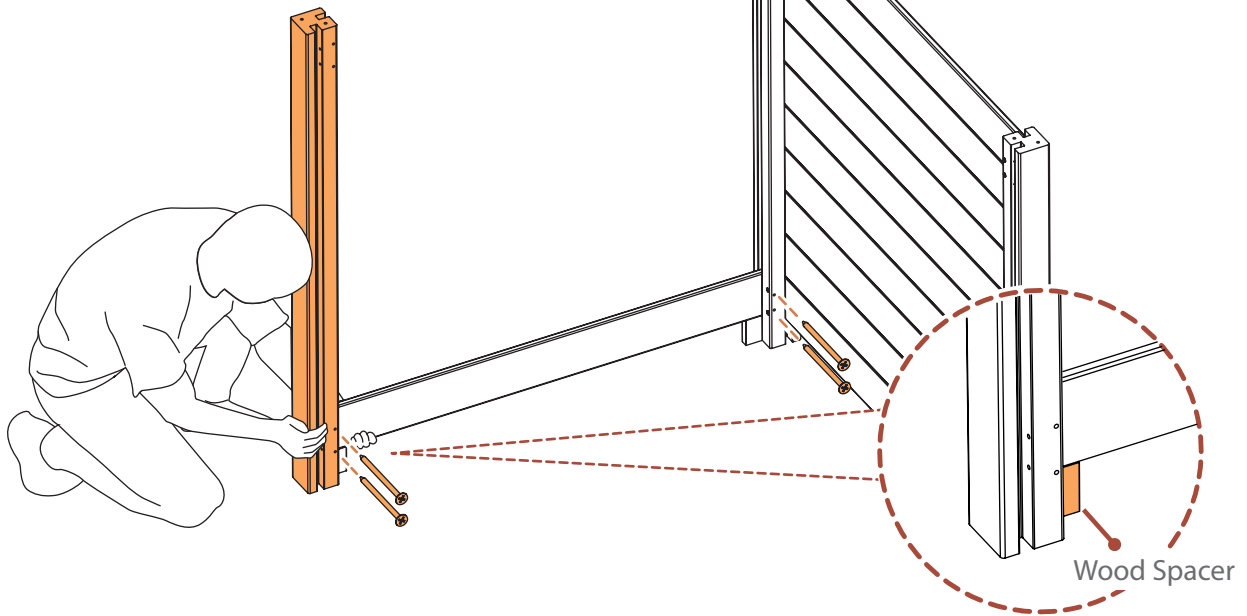


12




B x9

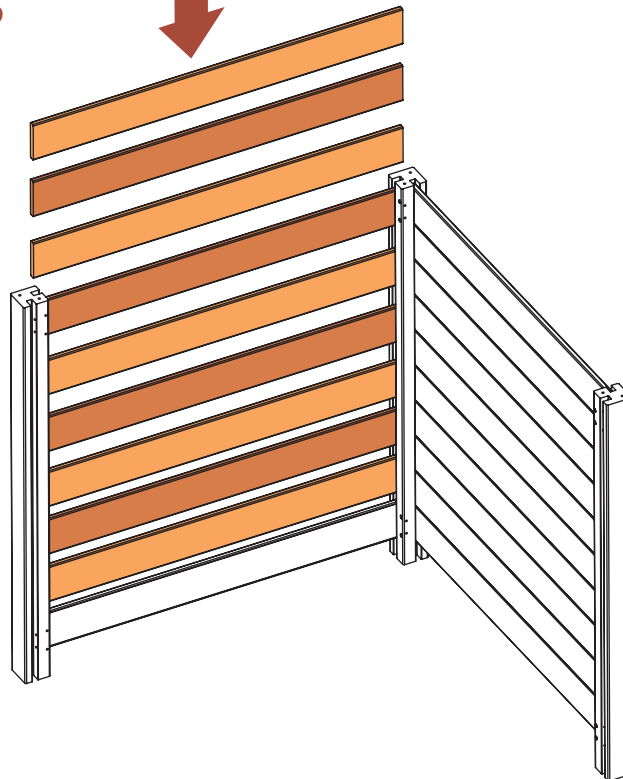

13

 **G x4**




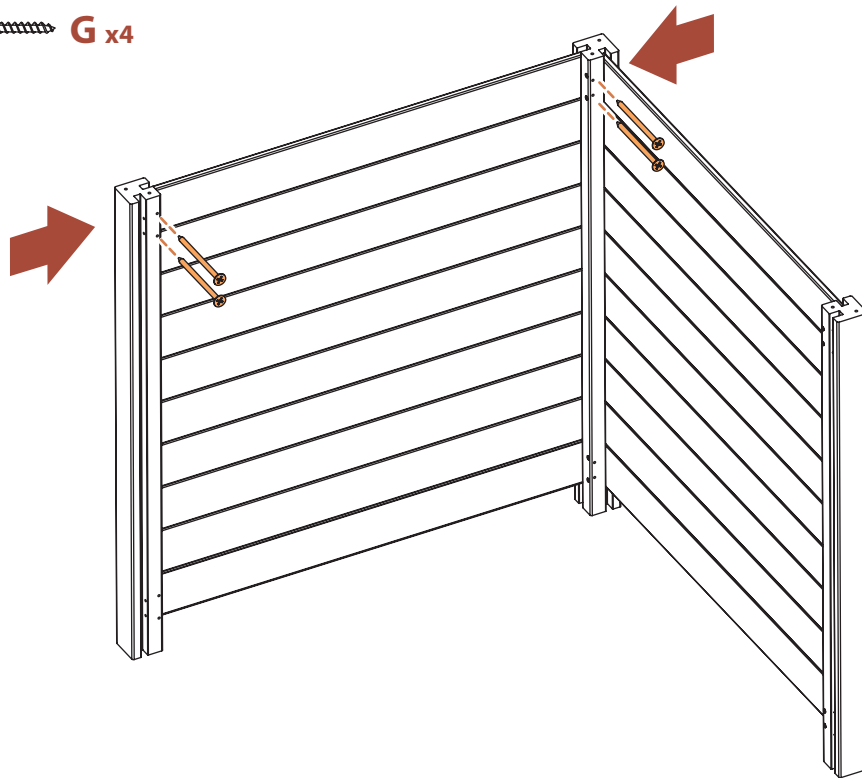


CHECK IT OUT!




*Watch the video on how
the post anchors should be
inserted into the ground or
follow the steps 14-21.*




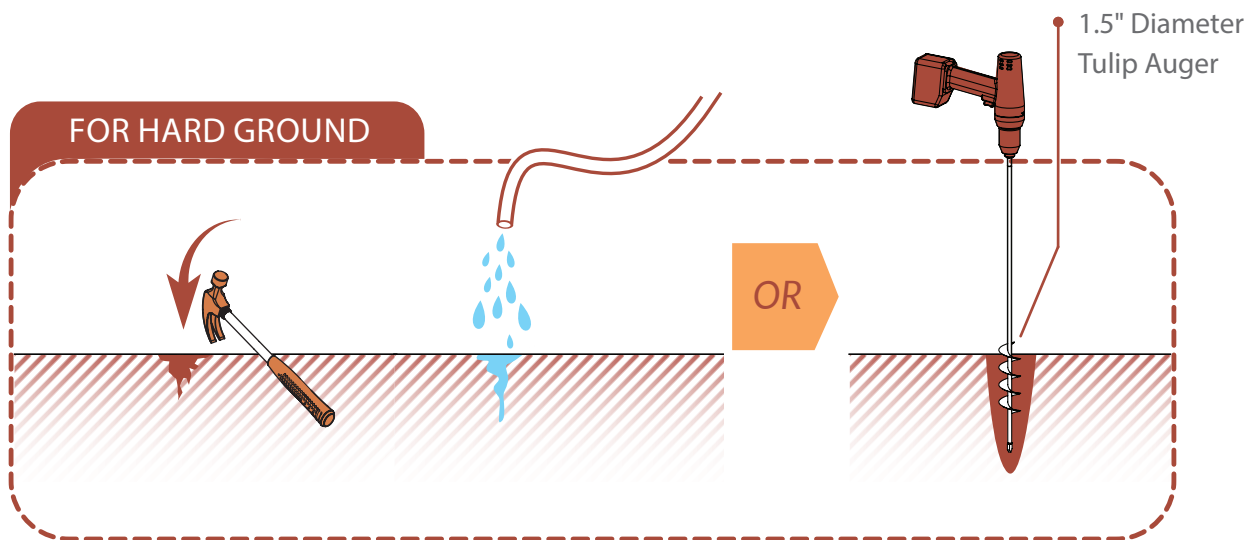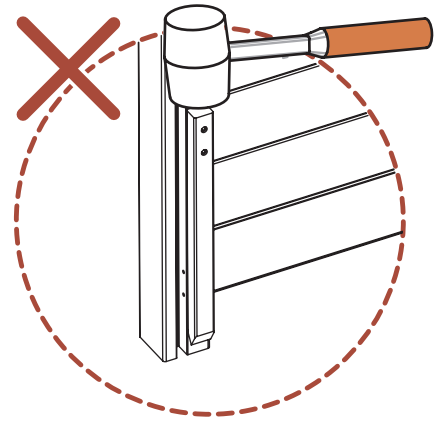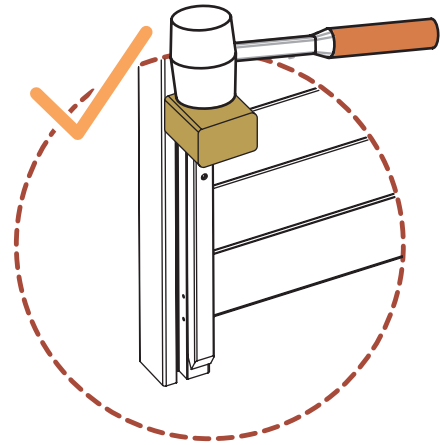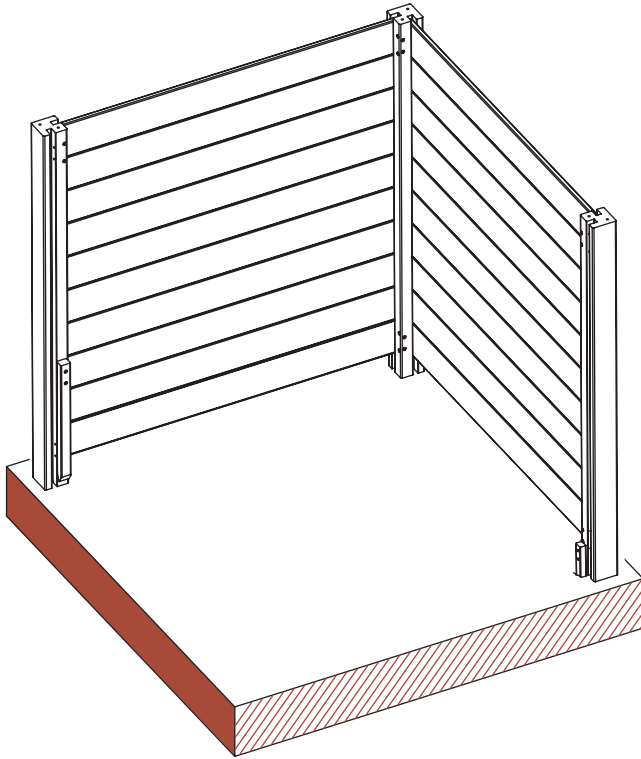


15

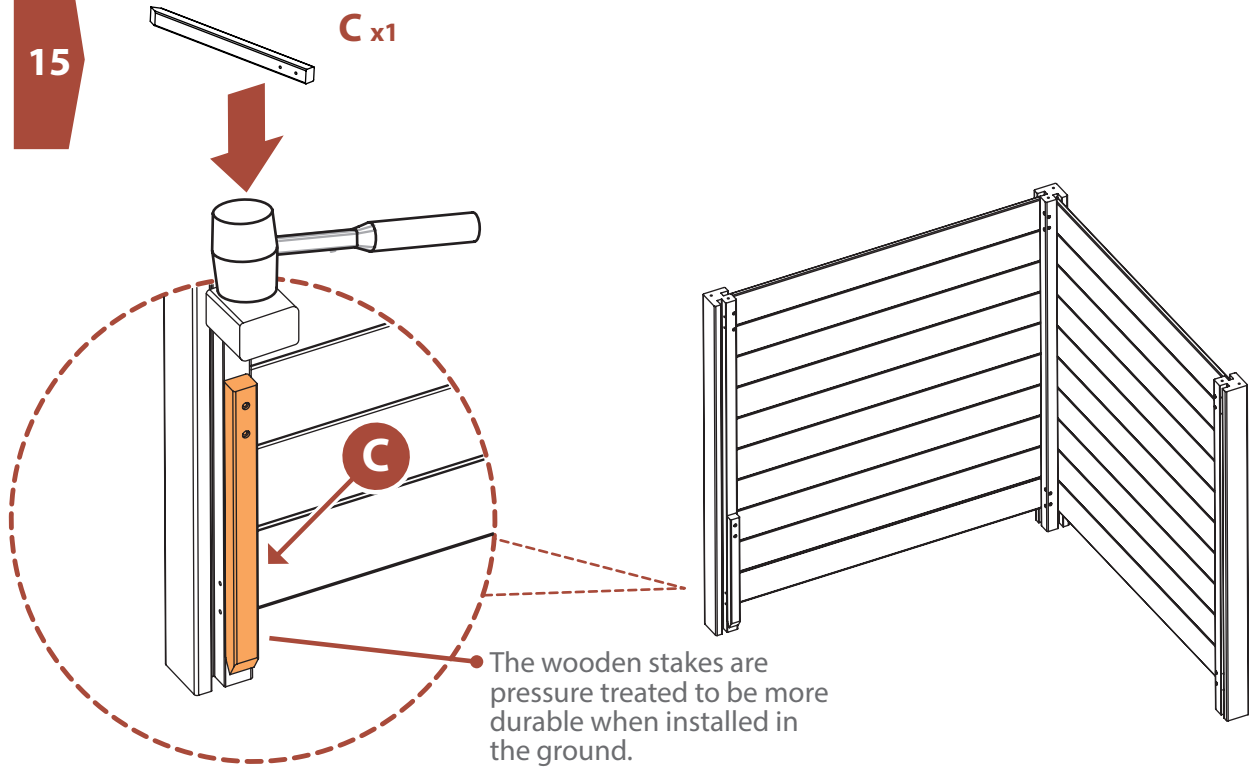


16

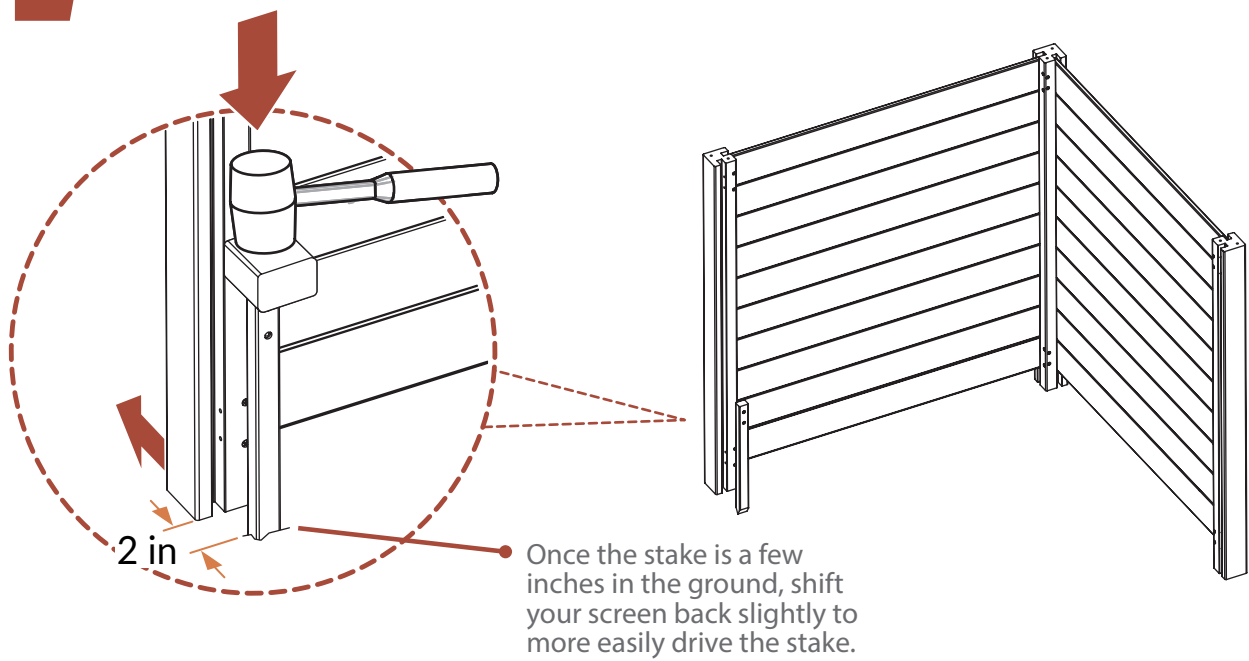


17

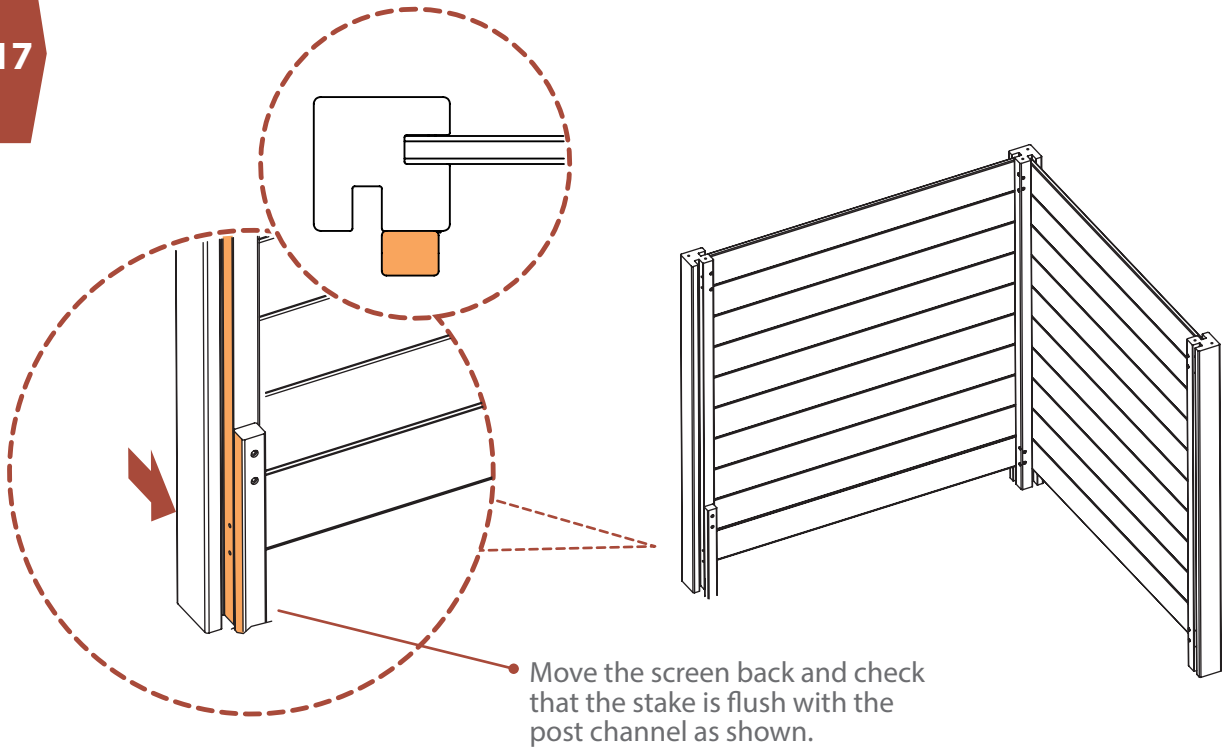

18

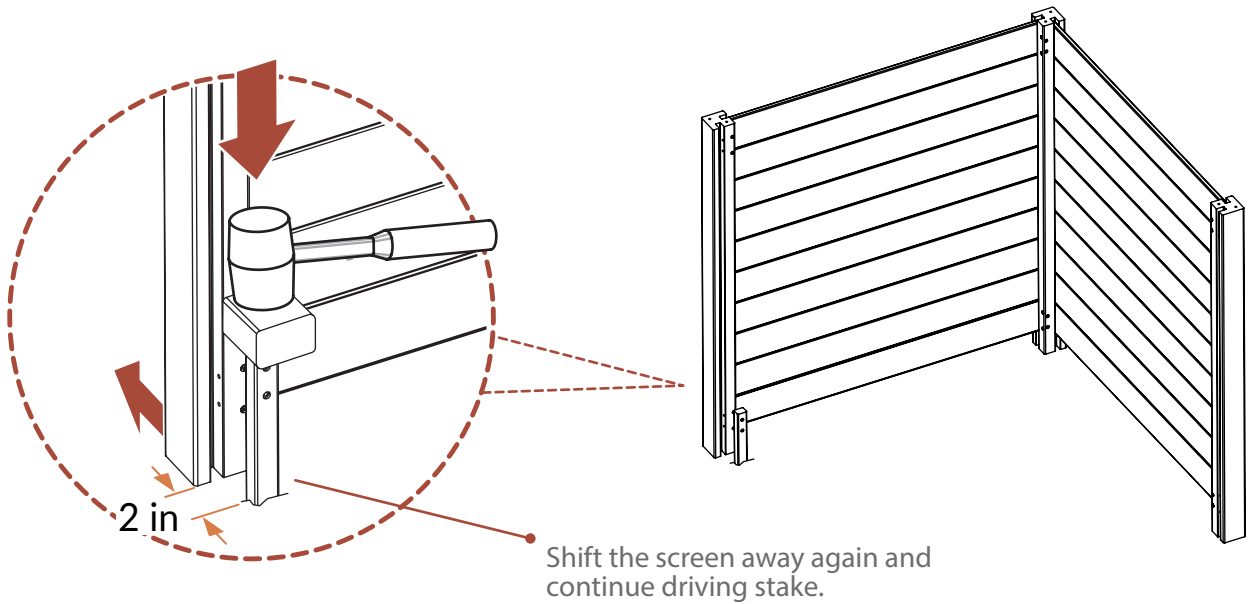


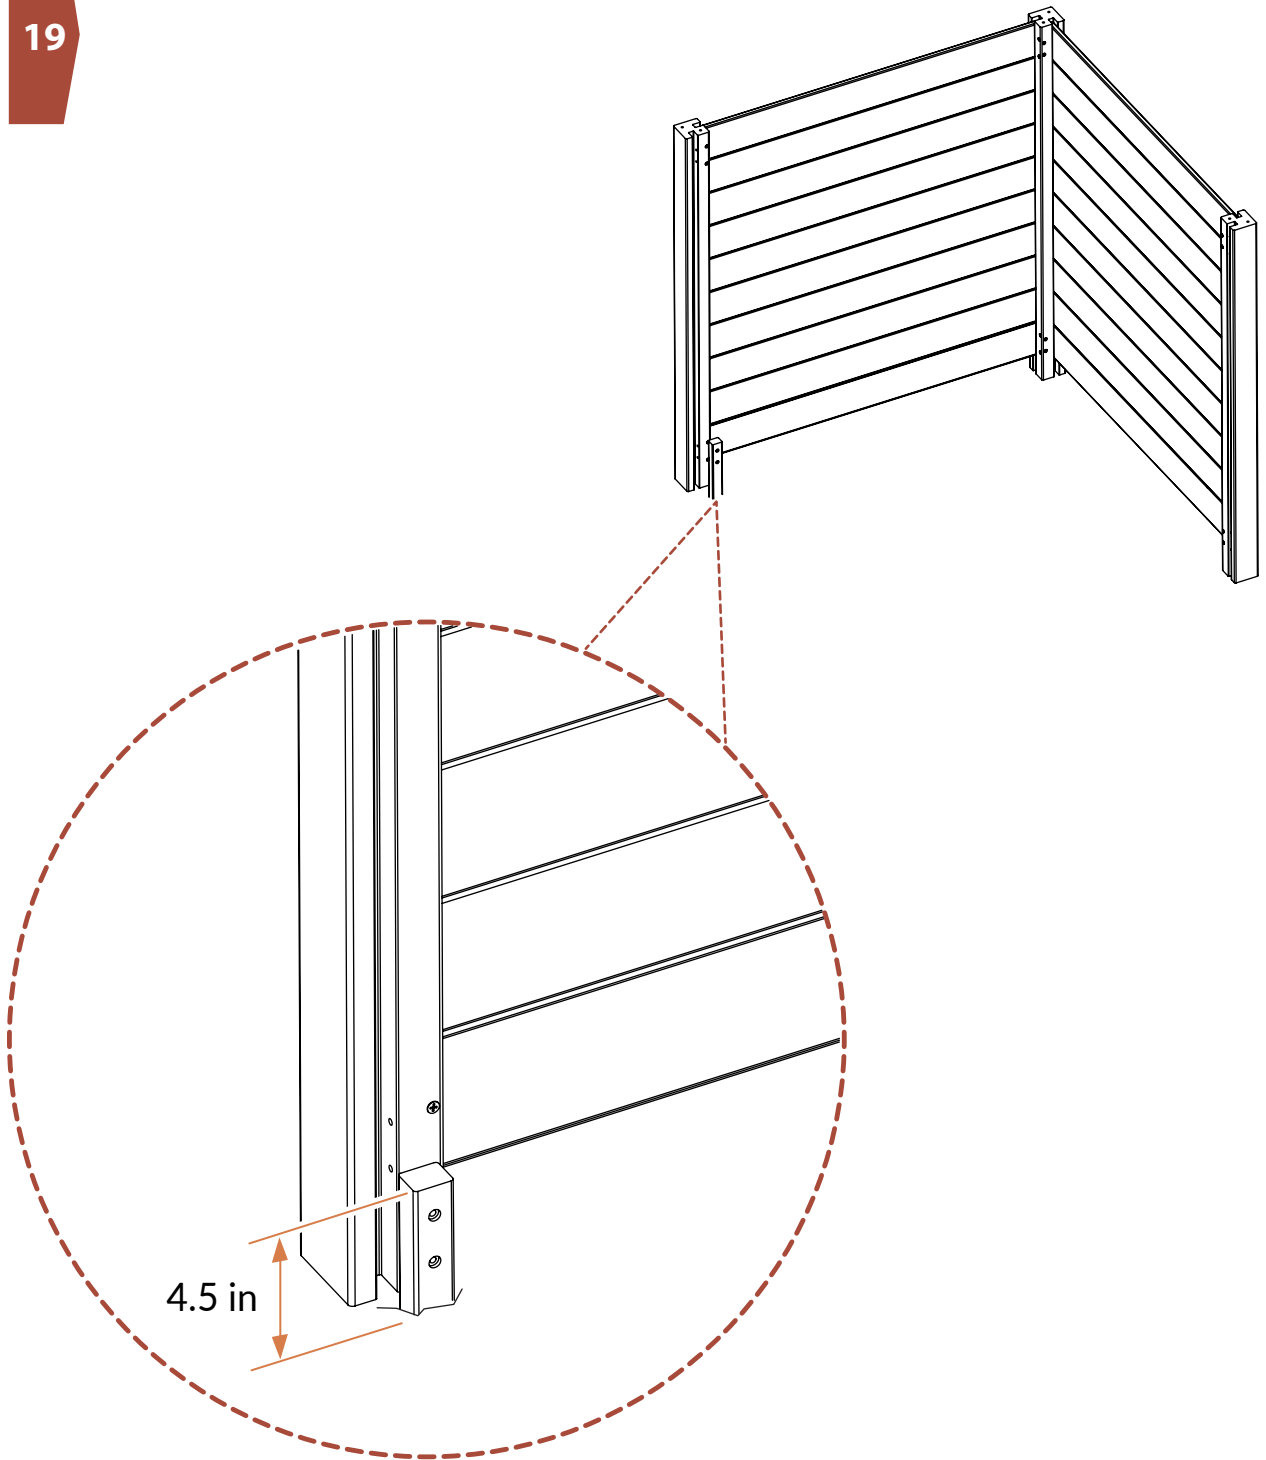

20




C x1

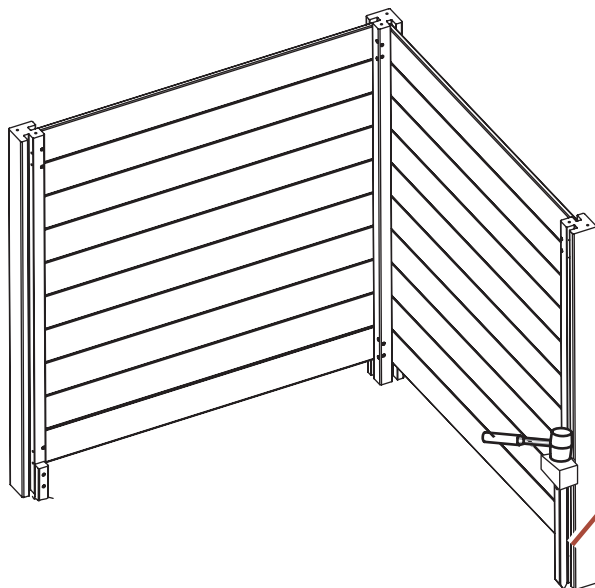


Repeat steps 14-19
for second stake.

21





F x4

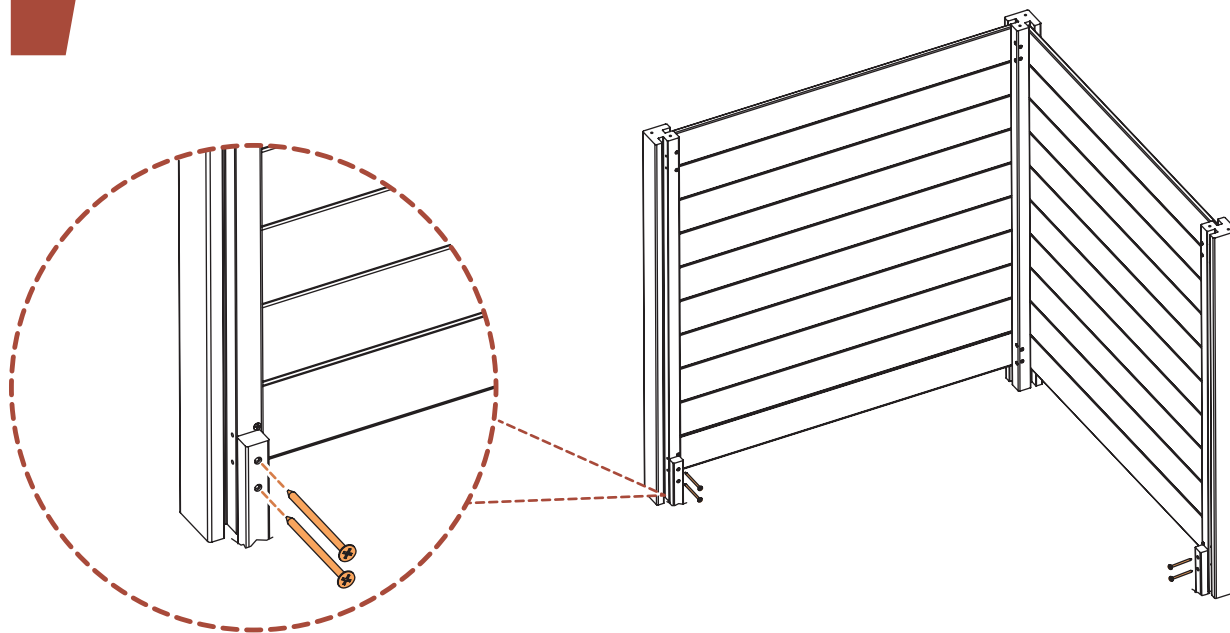

15





D x6

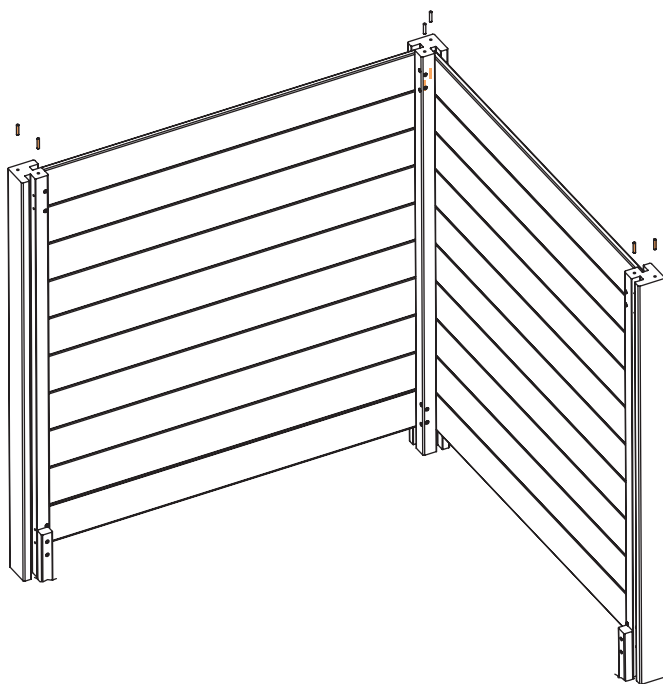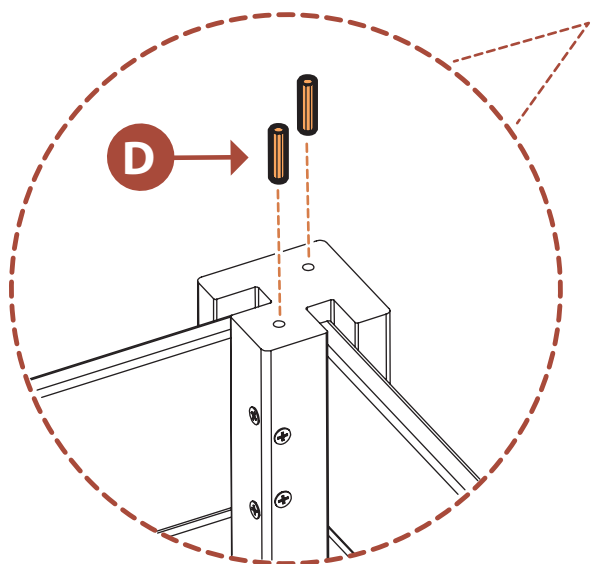


16



E x3

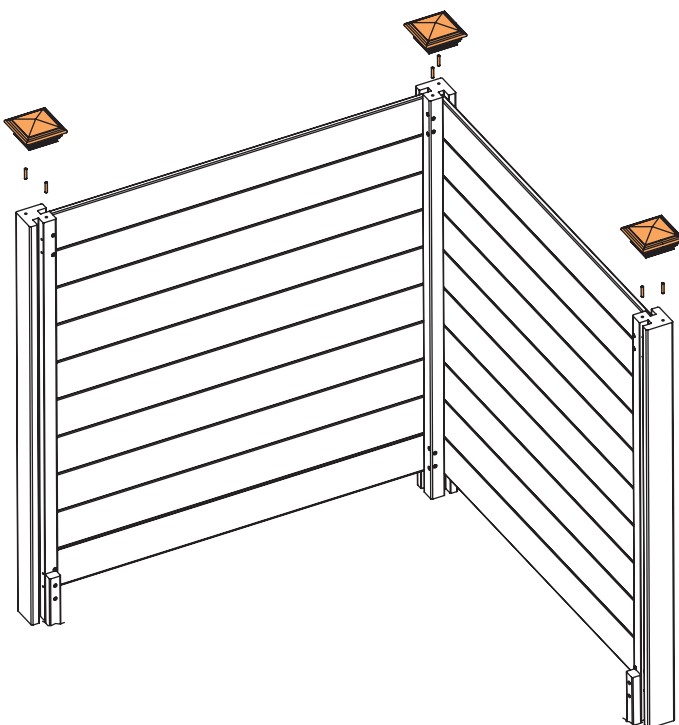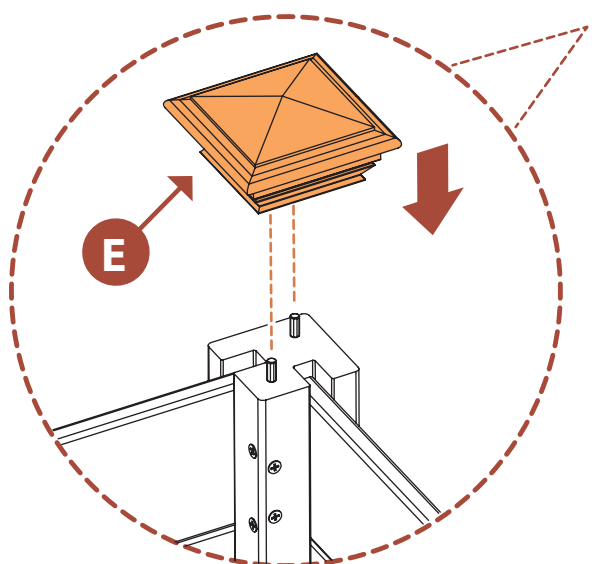

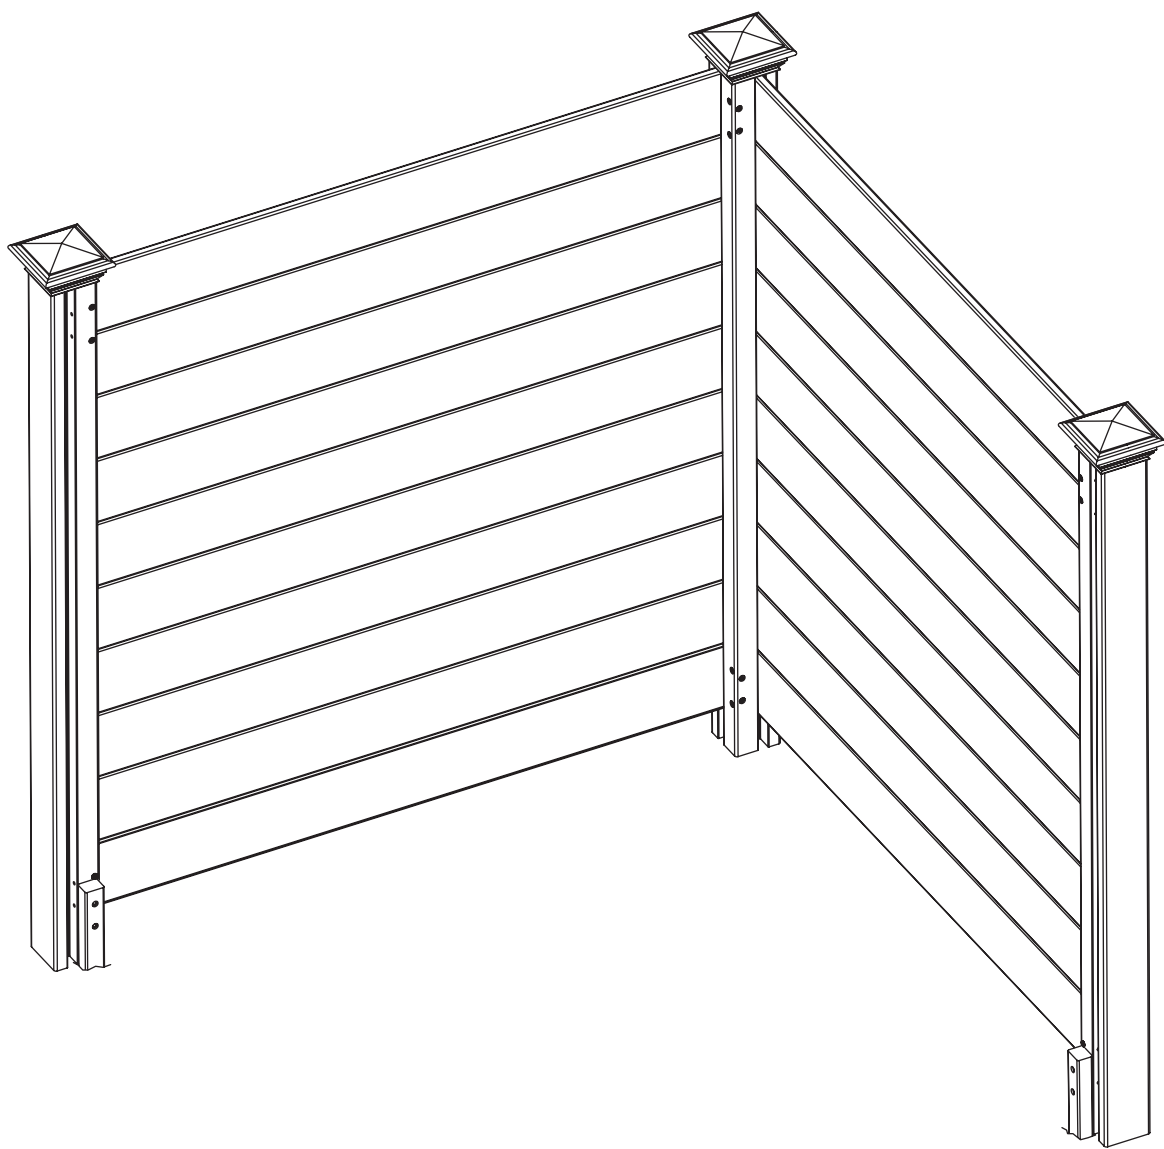



HIDE IT WITH STYLE

www.encloscreens.com

support@encloscreens.com



704-892-5222
877-234-6196



6935 Reames Rd. Ste. K.
Charlotte, NC 28216



ASSEMBLY
INSTRUCTIONS
EC18029